


## INSTALLATION

### NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

### HINT:

For step 2 to 9, refer to page [BO-101](#).

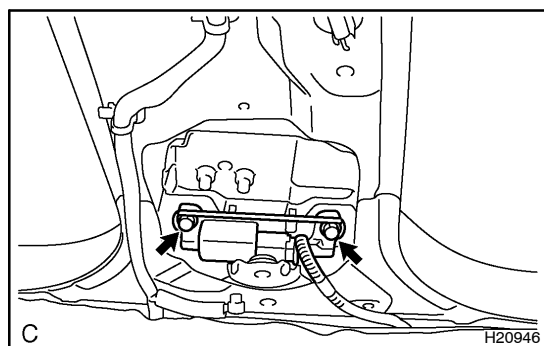

### 1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR

- (a) Install the side and curtain shield airbag sensor assembly with the 2 bolts.

**Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)**

- (b) Connect the connector of the side and curtain shield airbag sensor assembly.

### NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
- **Make sure that the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

### 2. INSTALL FRONT SEAT OUTER BELT

**Torque:**

**Upper bolt: 8.0 N·m (81 kgf·cm, 71 in·lbf)**

### 3. INSTALL CENTER PILLAR LOWER GARNISH

### 4. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP

### 5. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP

6. **INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR**  
Torque: 42 N·m (428 kgf·cm, 31 ft·lbf)
7. **INSTALL LAP BELT OUTER ANCHOR COVER**
8. **INSTALL FRONT DOOR SCUFF PLATE**
9. **INSTALL REAR DOOR SCUFF PLATE**
10. **INSPECT SRS WARNING LIGHT (See page [DI-692](#))**