


REMOVAL

1. REMOVE ENGINE UNDER COVER

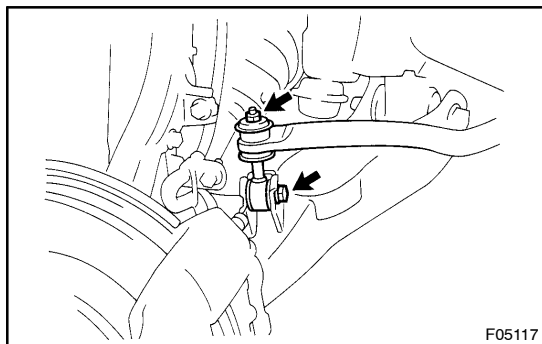

2. REMOVE LH AND RH STABILIZER BAR LINKS


- (a) Remove the nut, bolt, 2 retainers, 2 cushions and stabilizer bar link.

Torque:

Bolt: 52 N·m (530 kgf·cm, 38 ft·lbf)

Nut: 25 N·m (250 kgf·cm, 18 ft·lbf)

- (b) Employ the same manner described above to the other side.

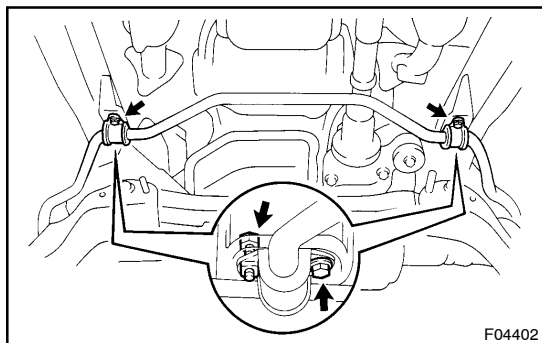

3. REMOVE STABILIZER BAR

- (a) Remove the 4 bolts, 2 brackets and 2 cushions.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (b) Remove the stabilizer bar.