

## INSPECTION

### INSPECT ACCELERATOR PEDAL POSITION SENSOR (See page [DI-318](#))

If necessary, replace the accelerator pedal assembly.

#### NOTICE:

- Be careful not to give a shock to the accelerator pedal assembly.
- Be careful not to disassemble the accelerator pedal assembly.