


## FUEL CUT RPM INSPECTION


### 1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

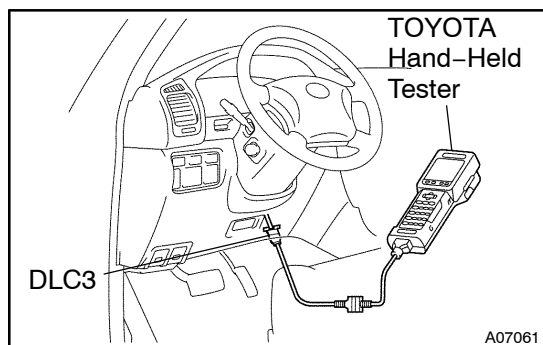

### 2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL

- (a) Connect the TOYOTA hand-held tester or OBDII scan tool to the DLC3.
- (b) Please refer to the TOYOTA hand-held tester or OBDII scan tool operator's manual for further details.

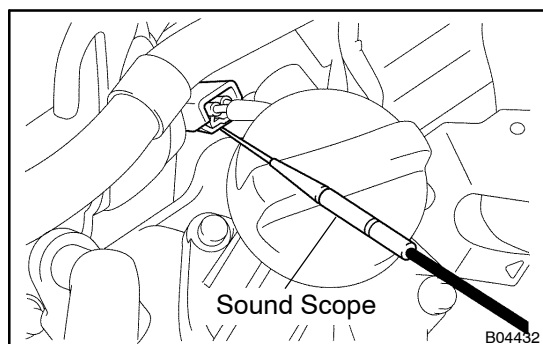

### 3. INSPECT FUEL CUTOFF RPM OPERATION

- (a) Increase the engine speed to at least 2,500 rpm.
- (b) Check the injector for operating noise.
- (c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

#### HINT:

- The vehicle should be at rest during the inspection.
- Inspection with the A/C OFF.

**Fuel return speed: 1,000 rpm**

### 4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL