


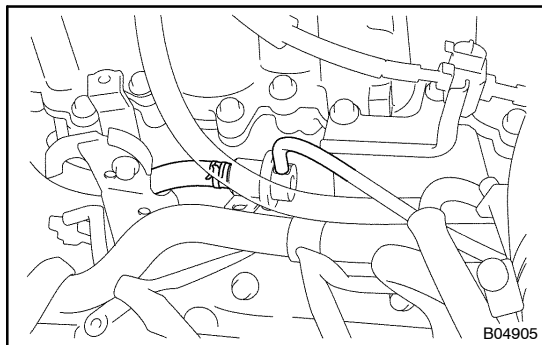

REMOVAL


1. REMOVE V-BANK COVER

2. REMOVE FUEL PRESSURE REGULATOR

- (a) Disconnect the vacuum sensing hose from the fuel pressure regulator.
- (b) Disconnect the fuel return hose from the fuel pressure regulator.

CAUTION:

Put a shop rag under the fuel pressure regulator.

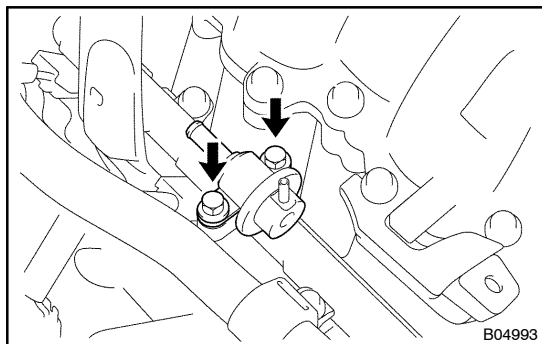

- (c) Remove the 2 bolts, and pull out the pressure regulator.
- (d) Remove the O-ring from the fuel pressure regulator.