


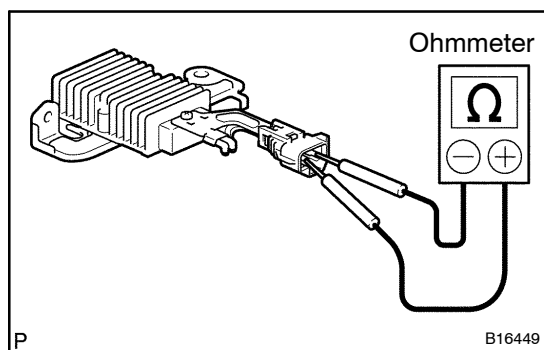

## INSPECTION

1. **REMOVE FUEL PUMP RESISTOR**
2. **INSPECT FUEL PUMP RESISTOR**

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: 0.70 – 0.76  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the resistor.

3. **REINSTALL FUEL PUMP RESISTOR**  
**Torque: 12 N·m (122 kgf·cm, 8.8 ft·lbf)**