


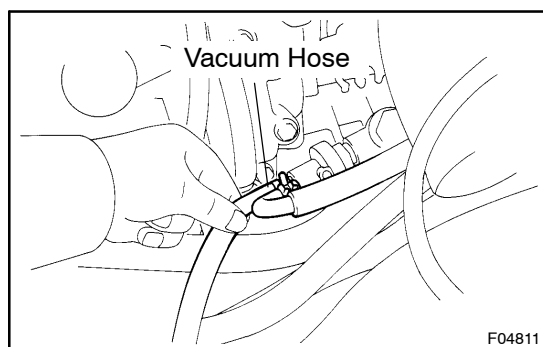

SR0LZ-06

AIR CONTROL VALVE INSPECTION

- 1. TURN AIR CONDITIONING SWITCH OFF**
- 2. CHECK IDLE-UP**
 - (a) Start the engine and run it at idle.
 - (b) Fully turn the steering wheel.
 - (c) Check that the engine rotations decrease when the vacuum hose of the air control valve is pinched.
 - (d) Check that the engine rotations increase when the hose is released.