






2004 LAND CRUISER (EWD548U)

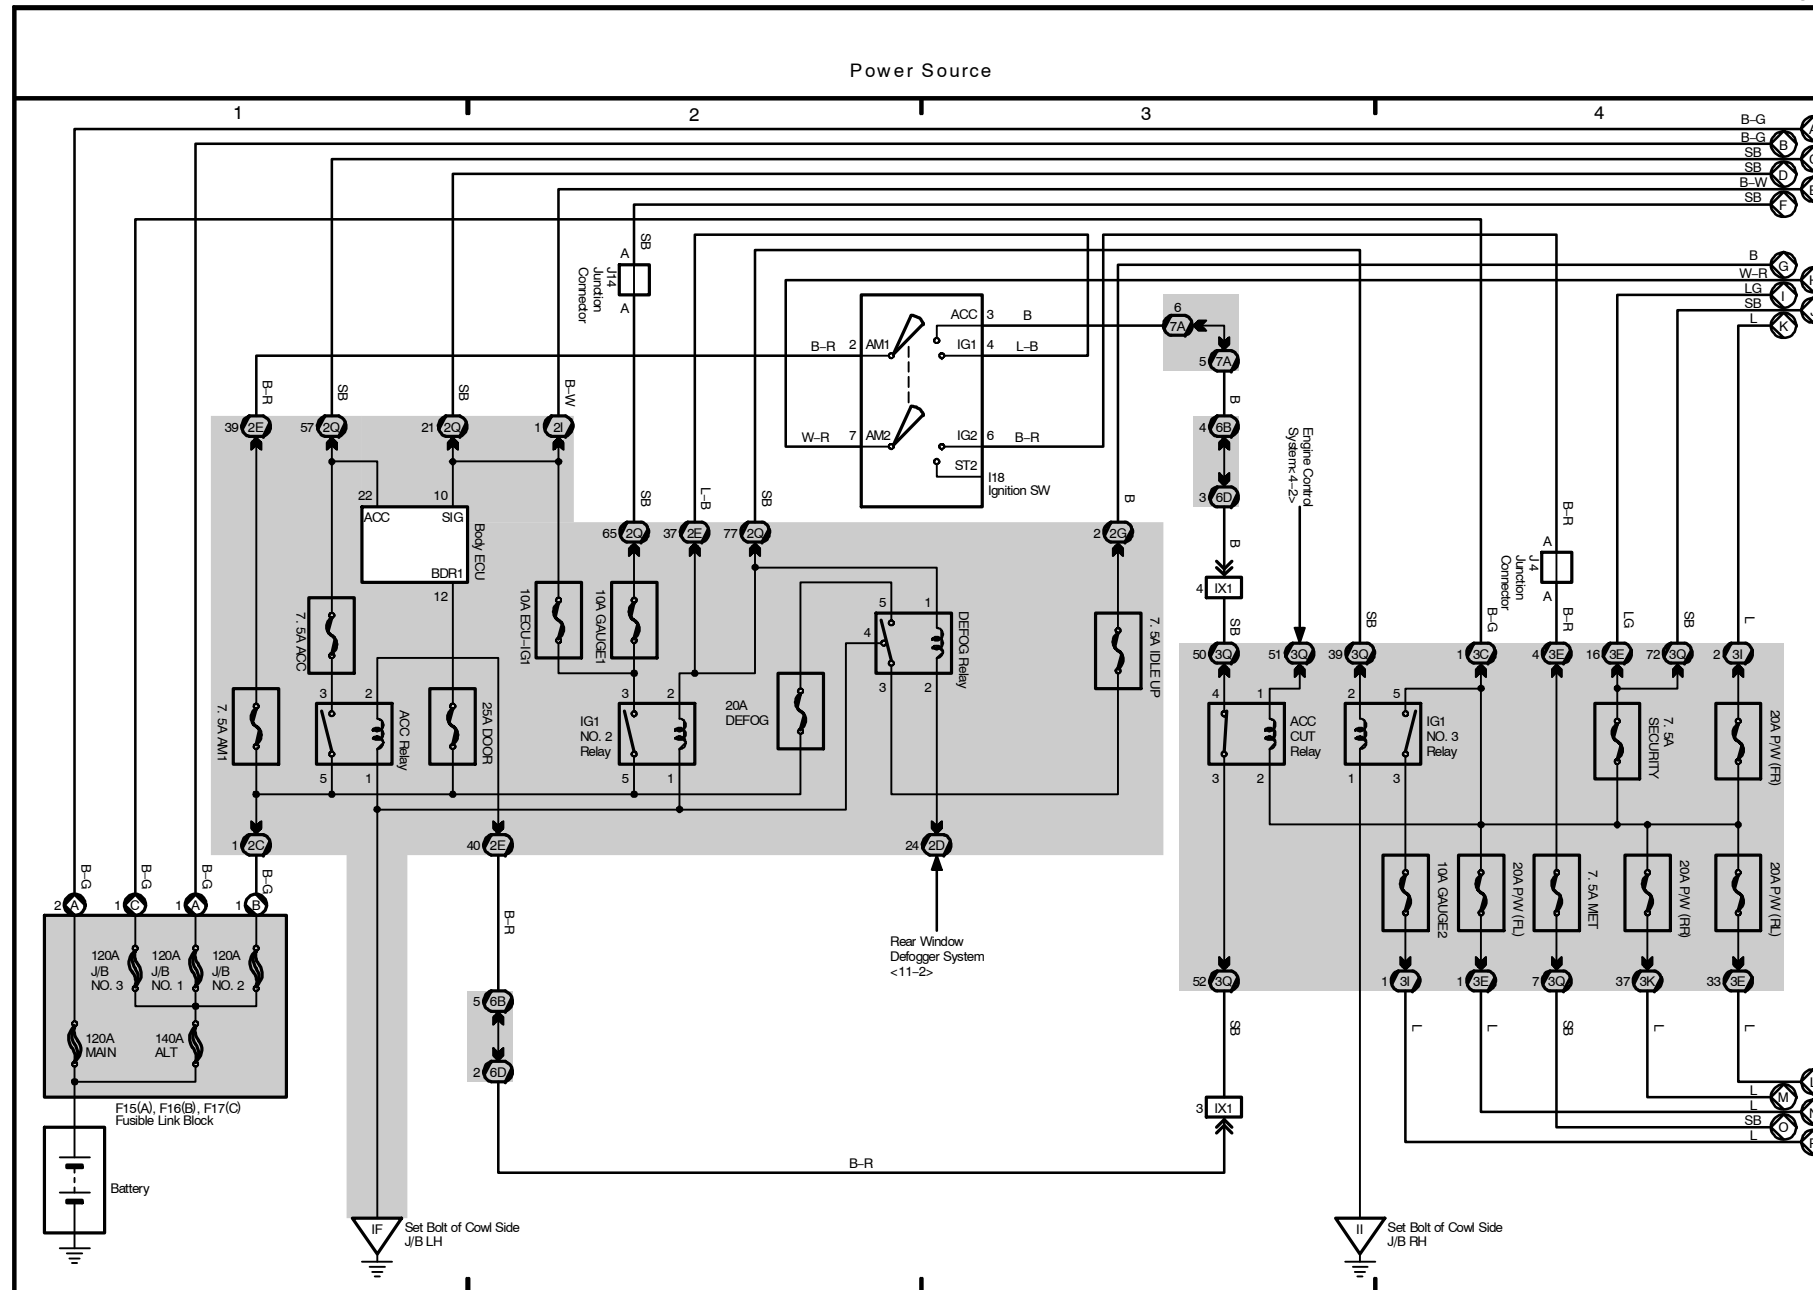


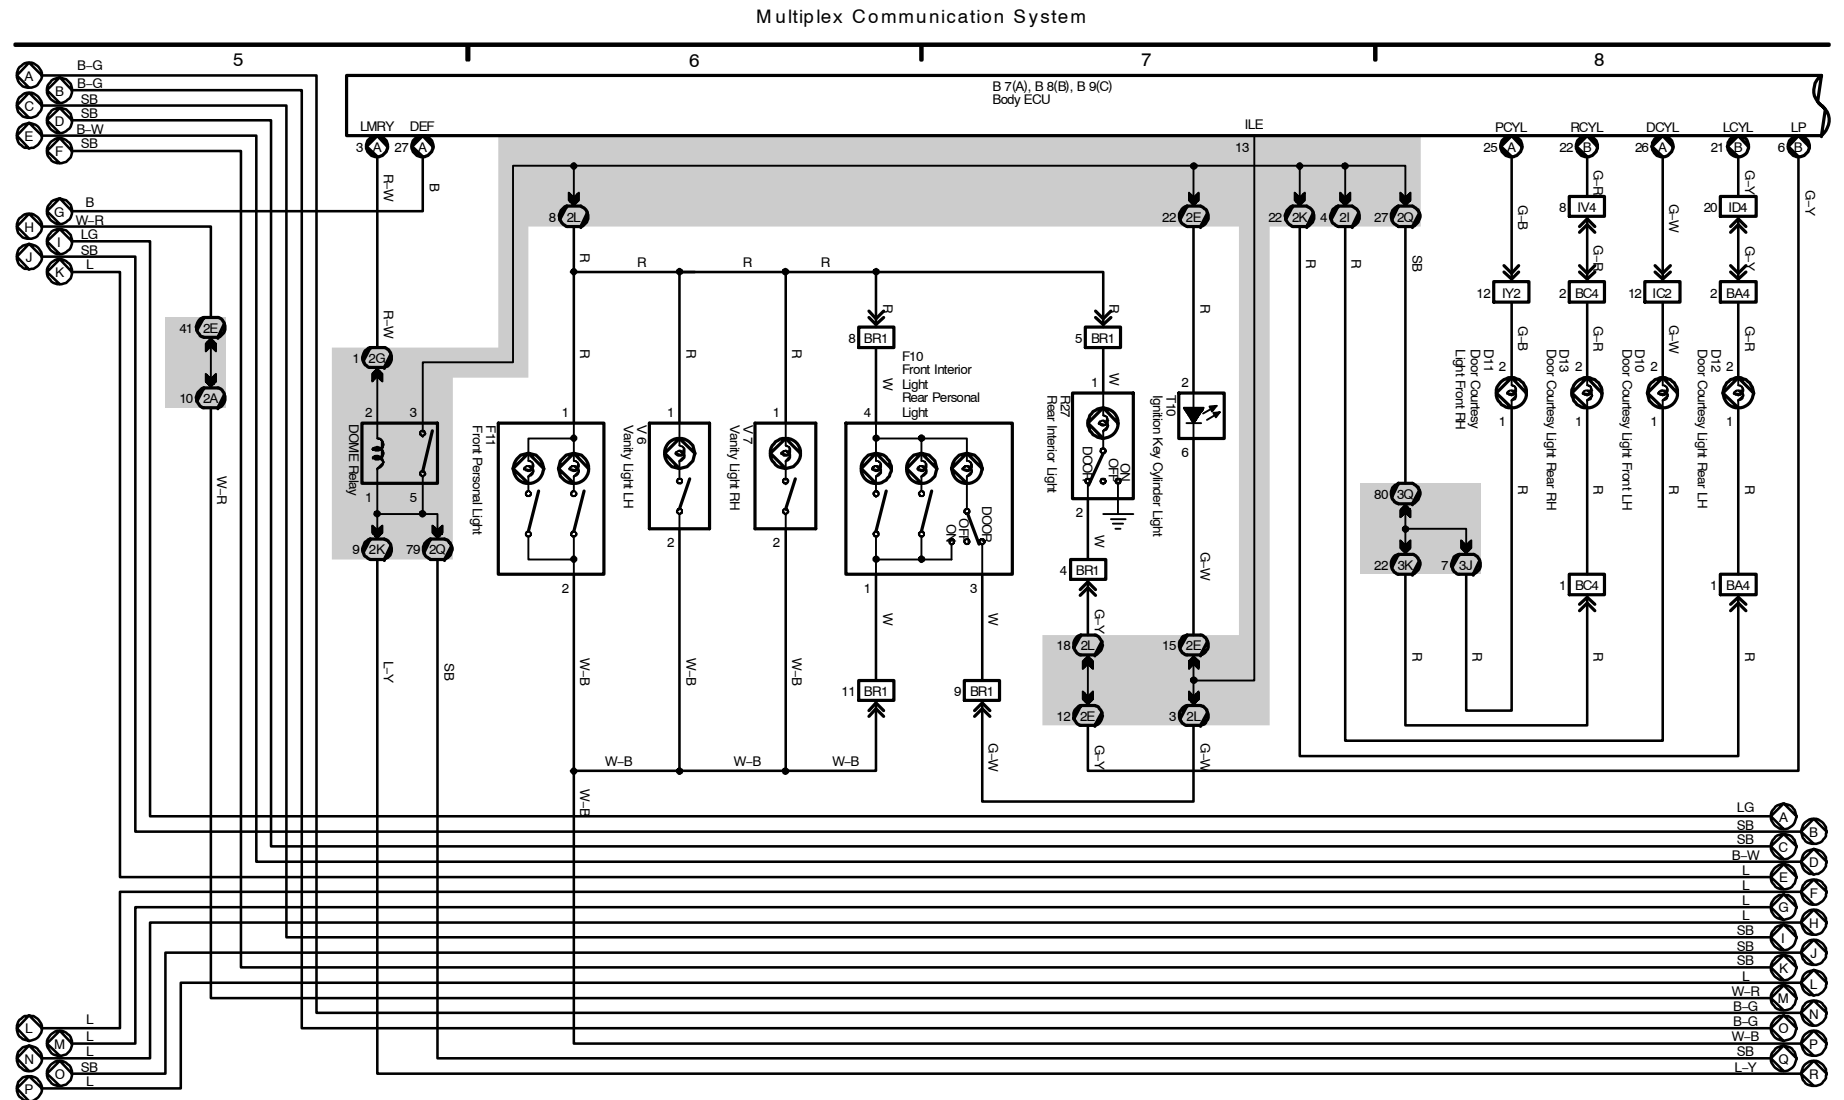


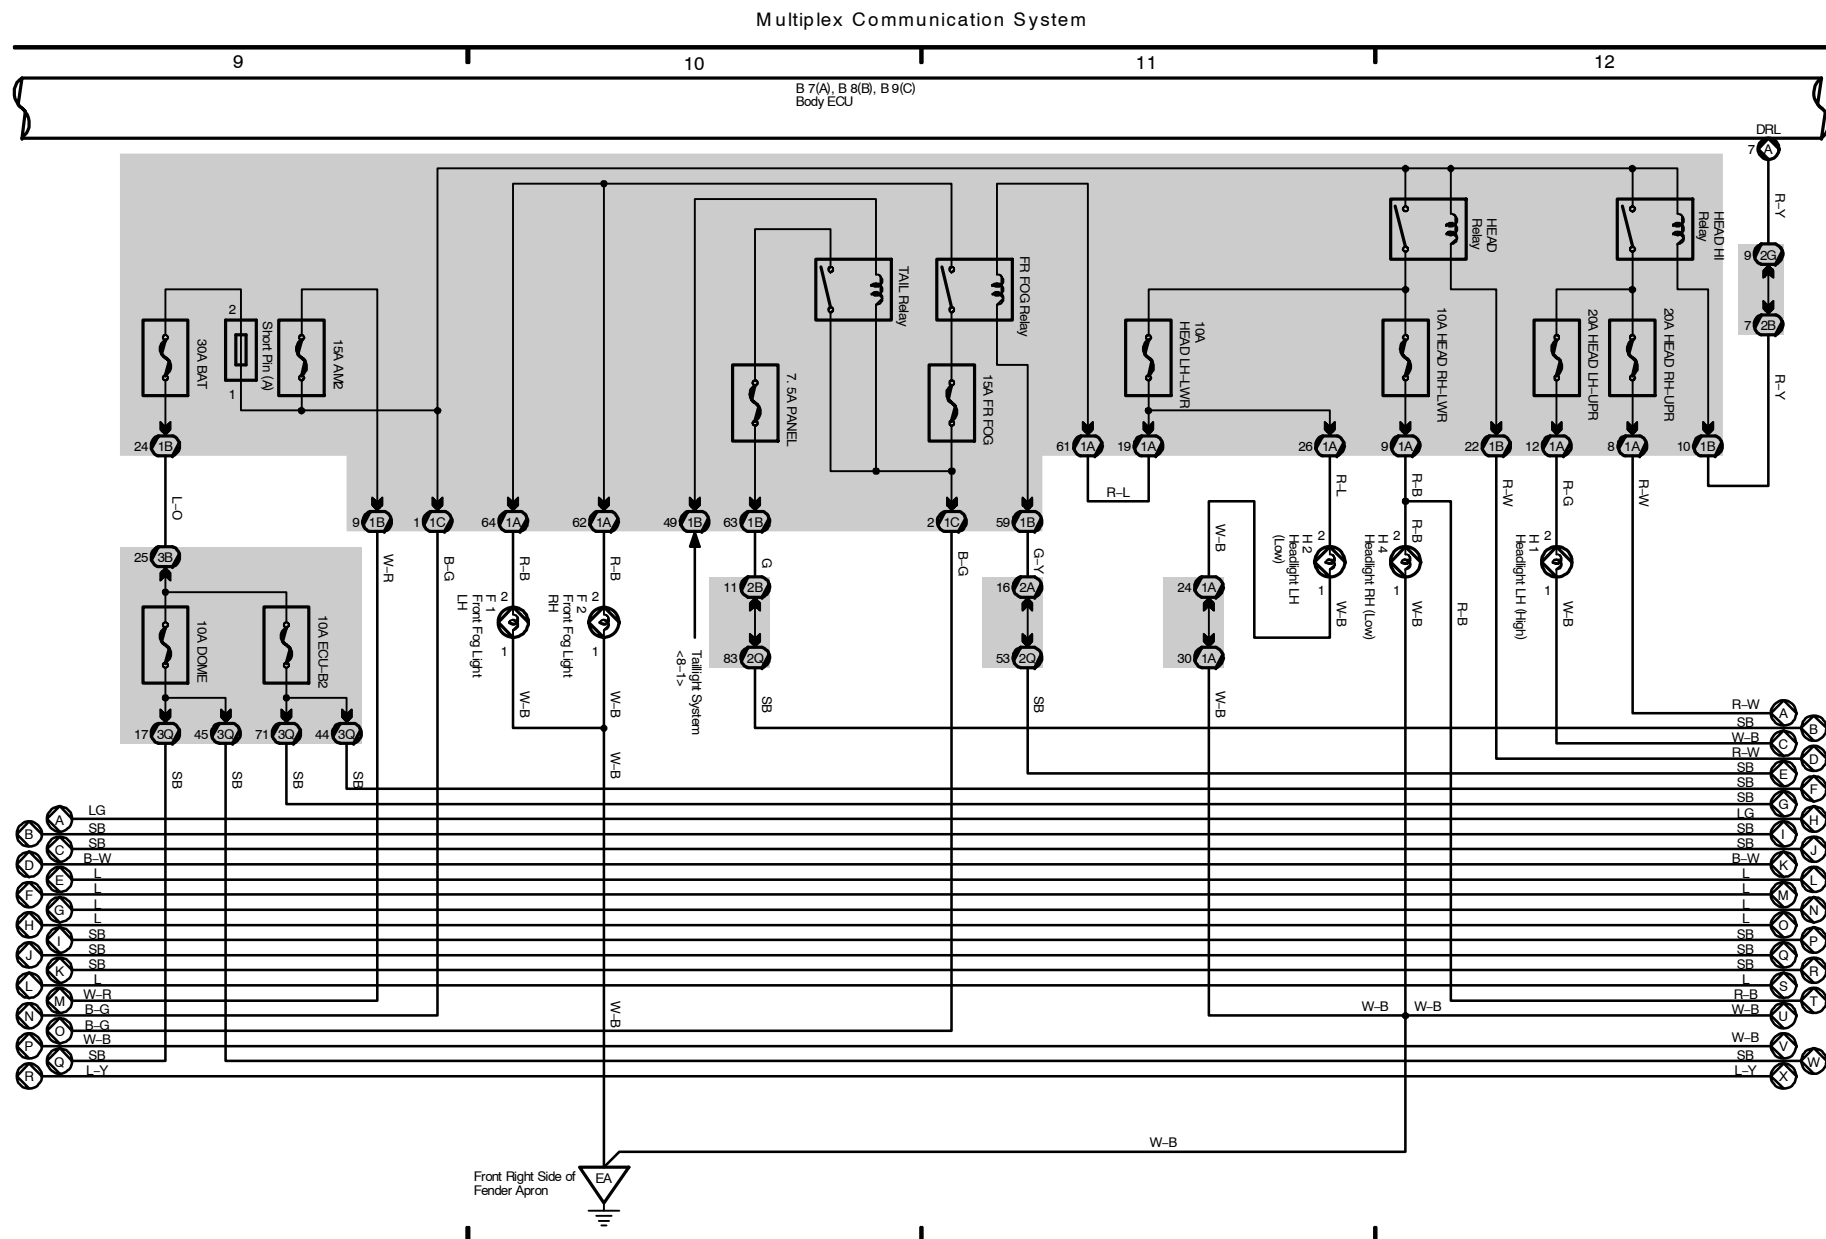


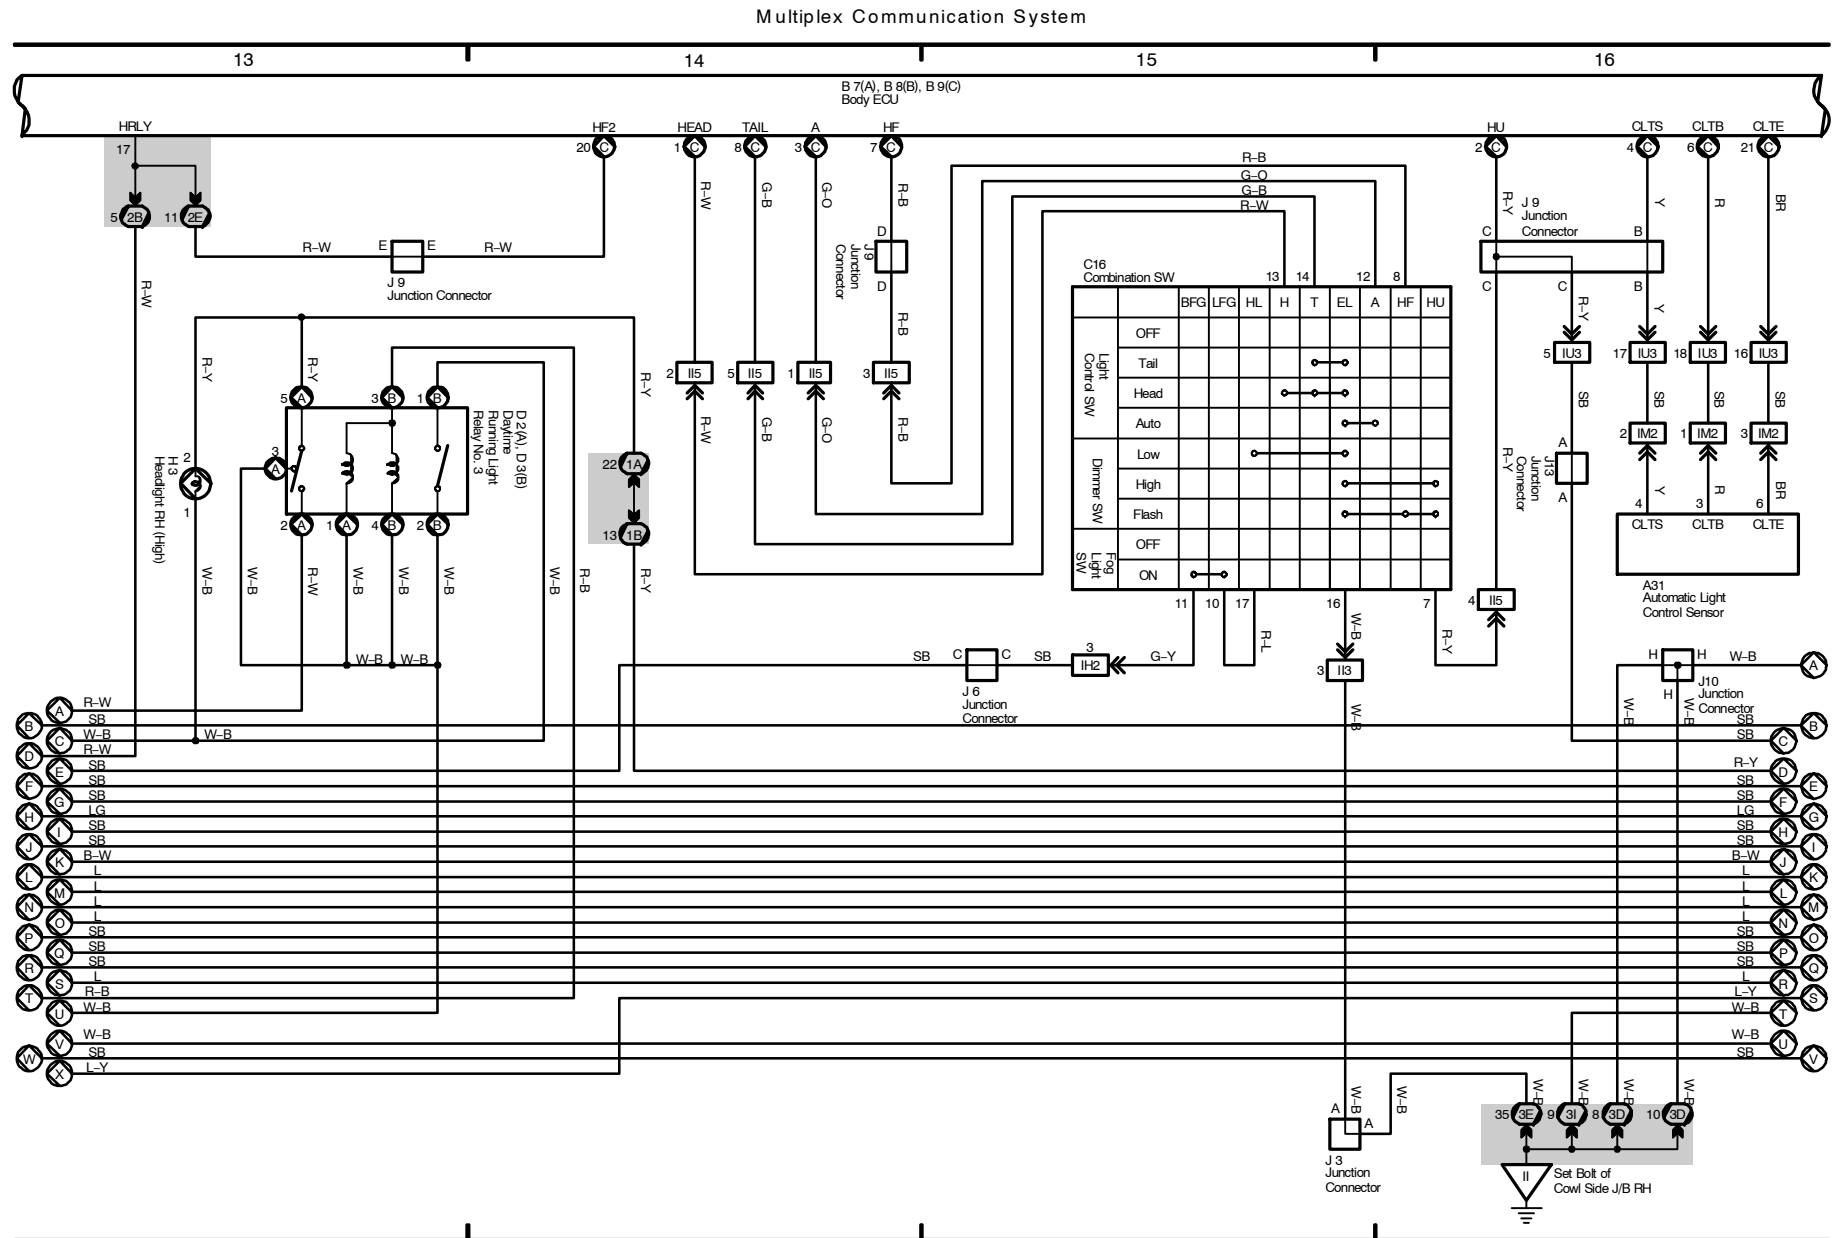

 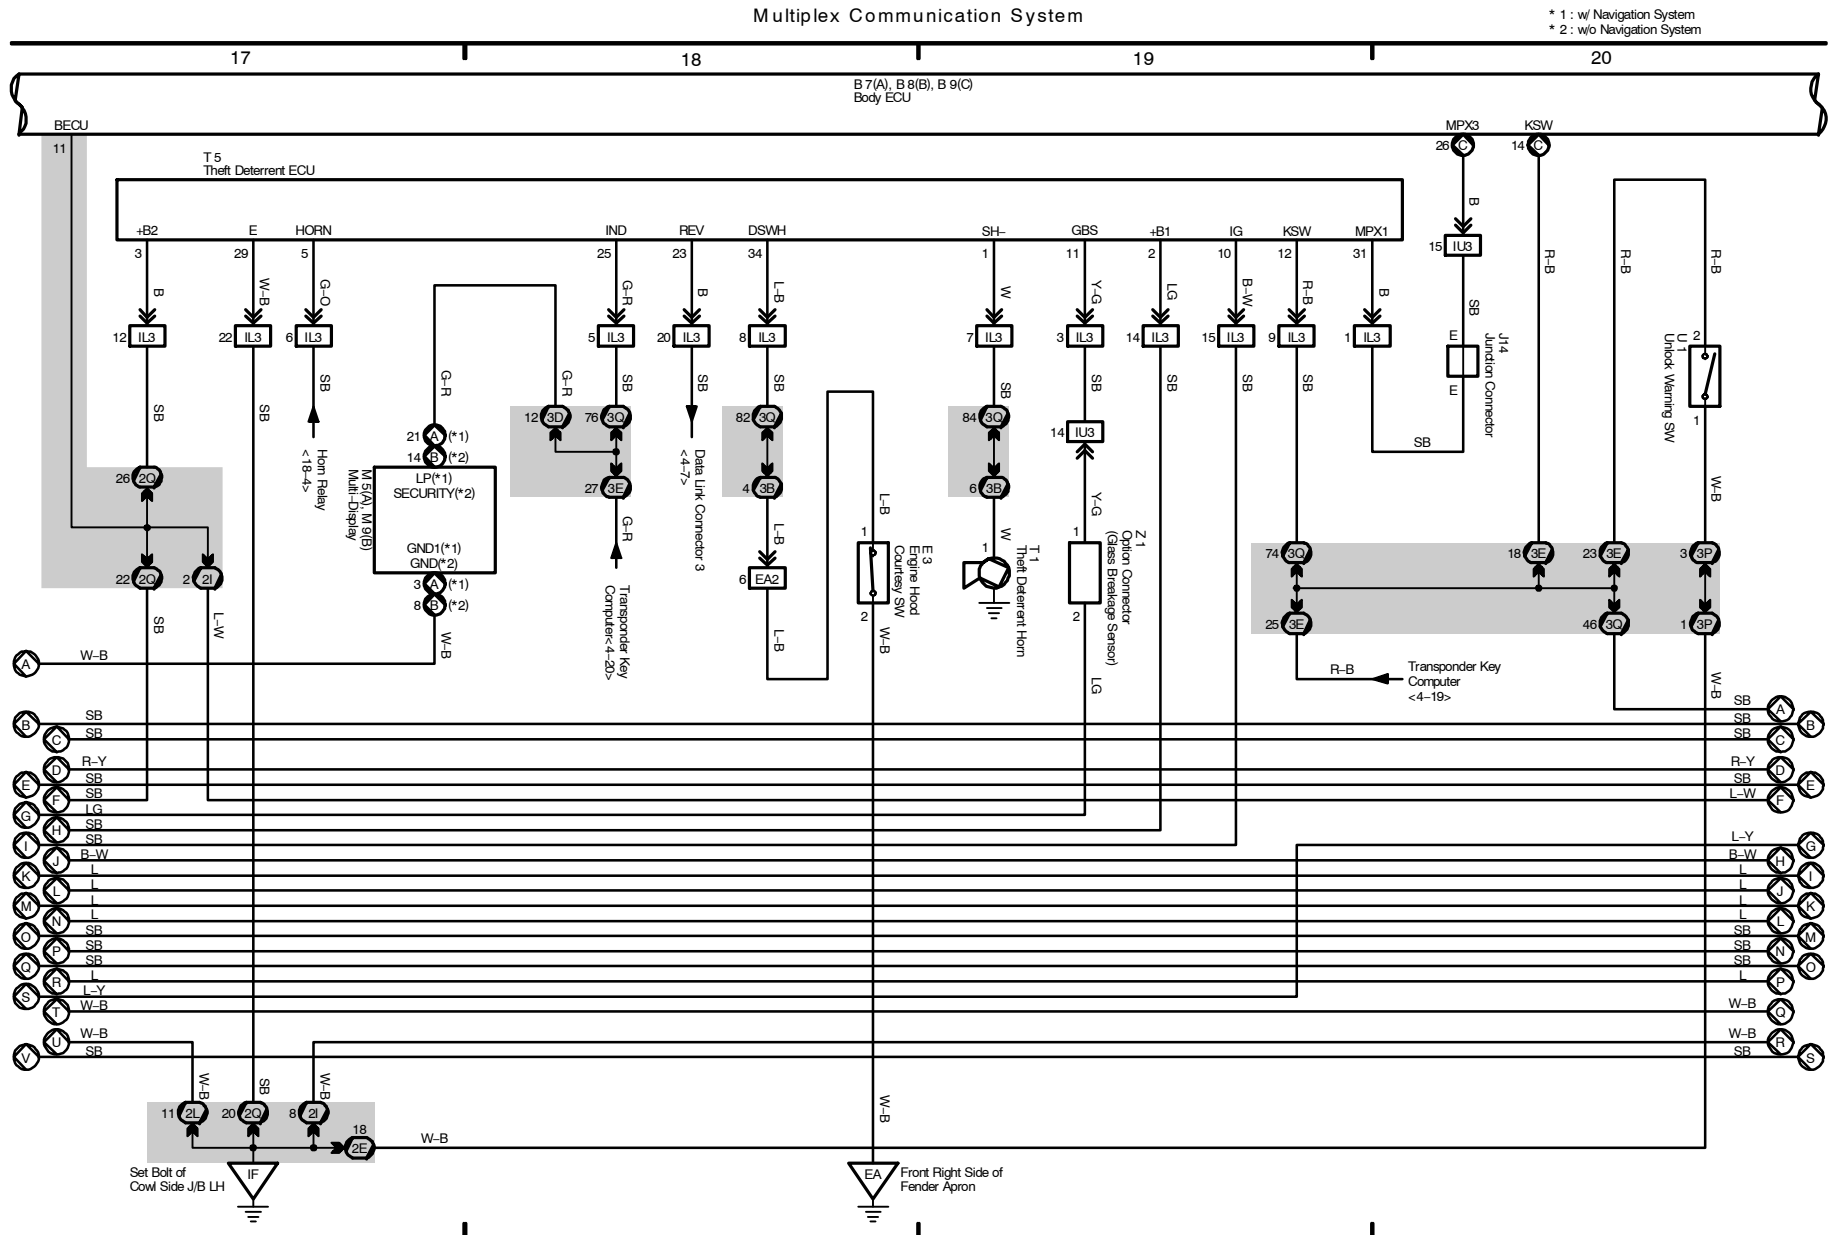

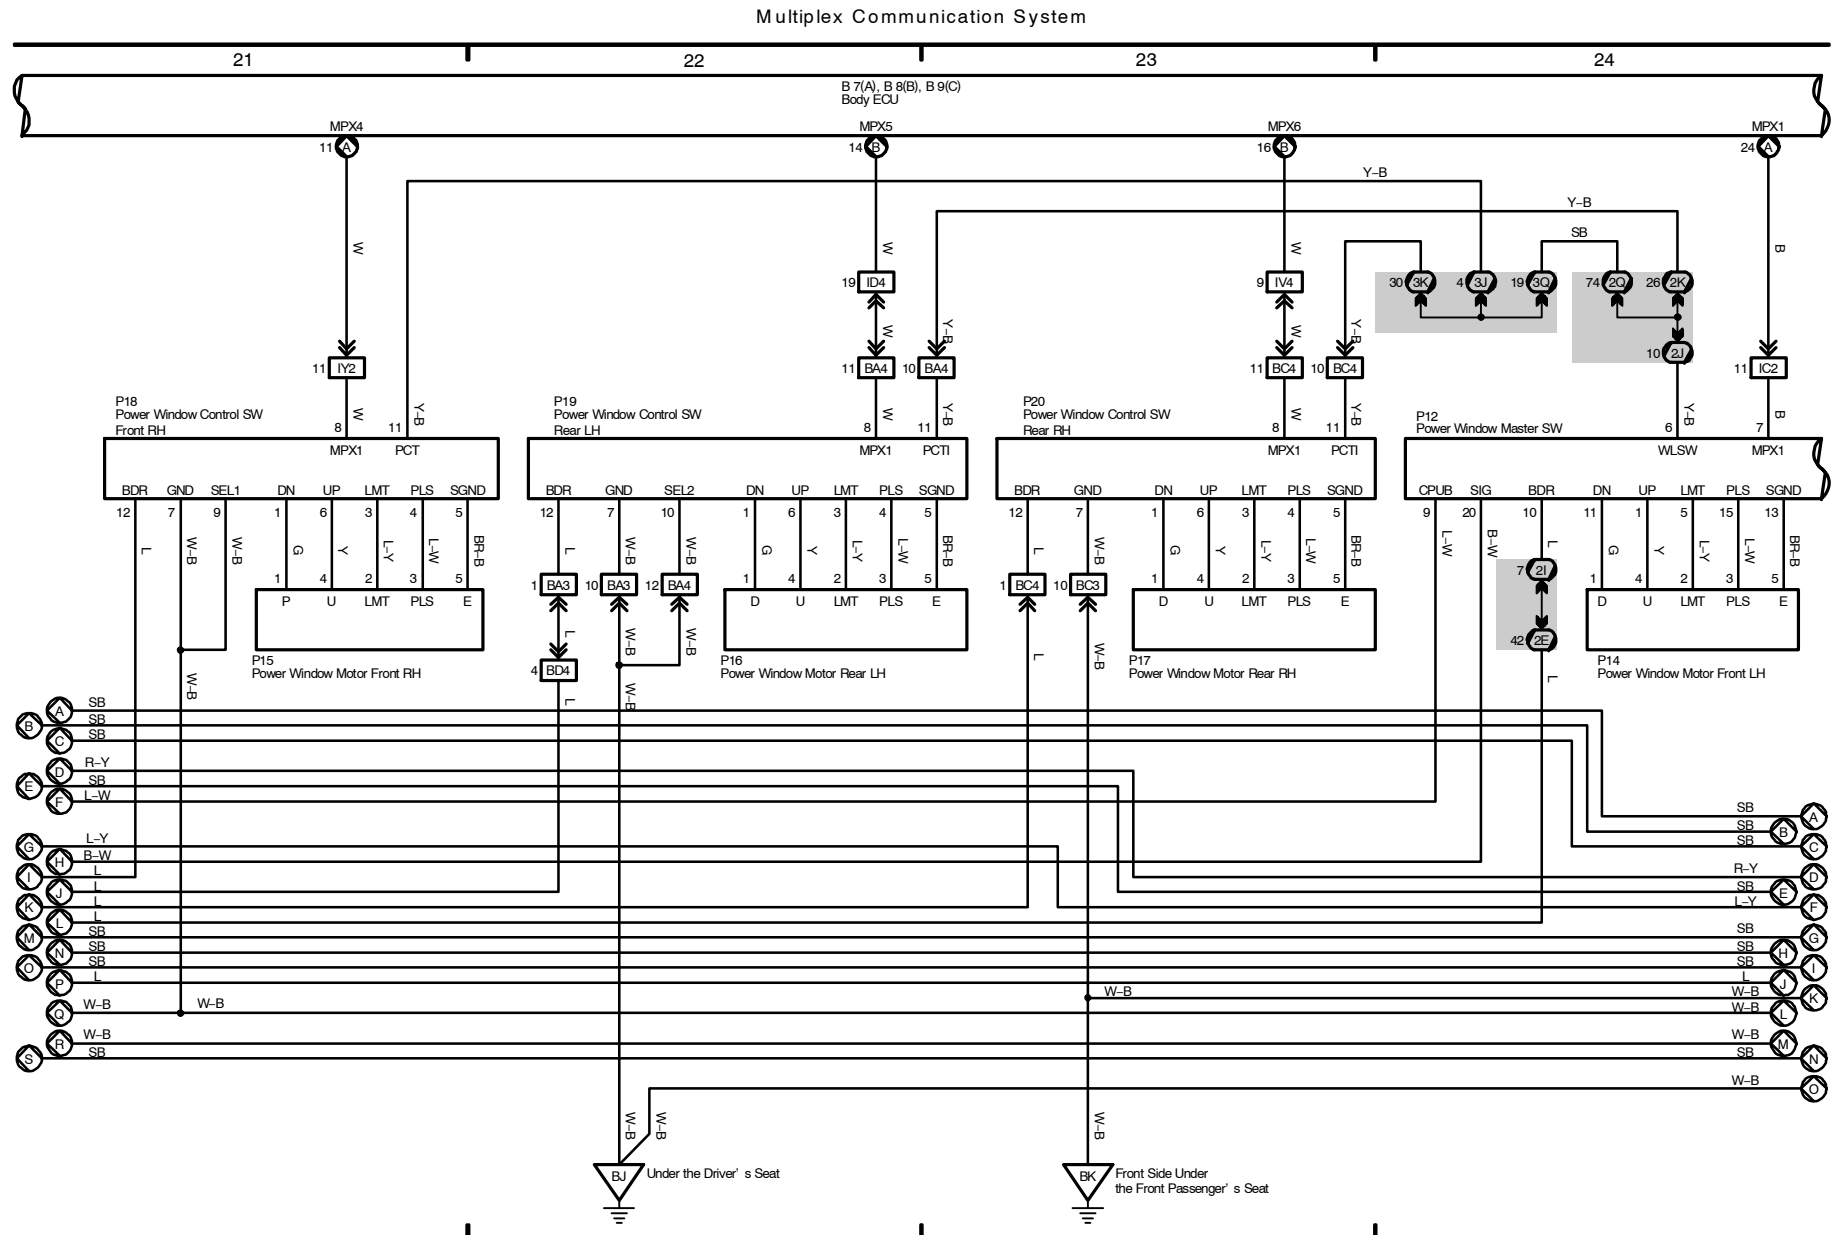




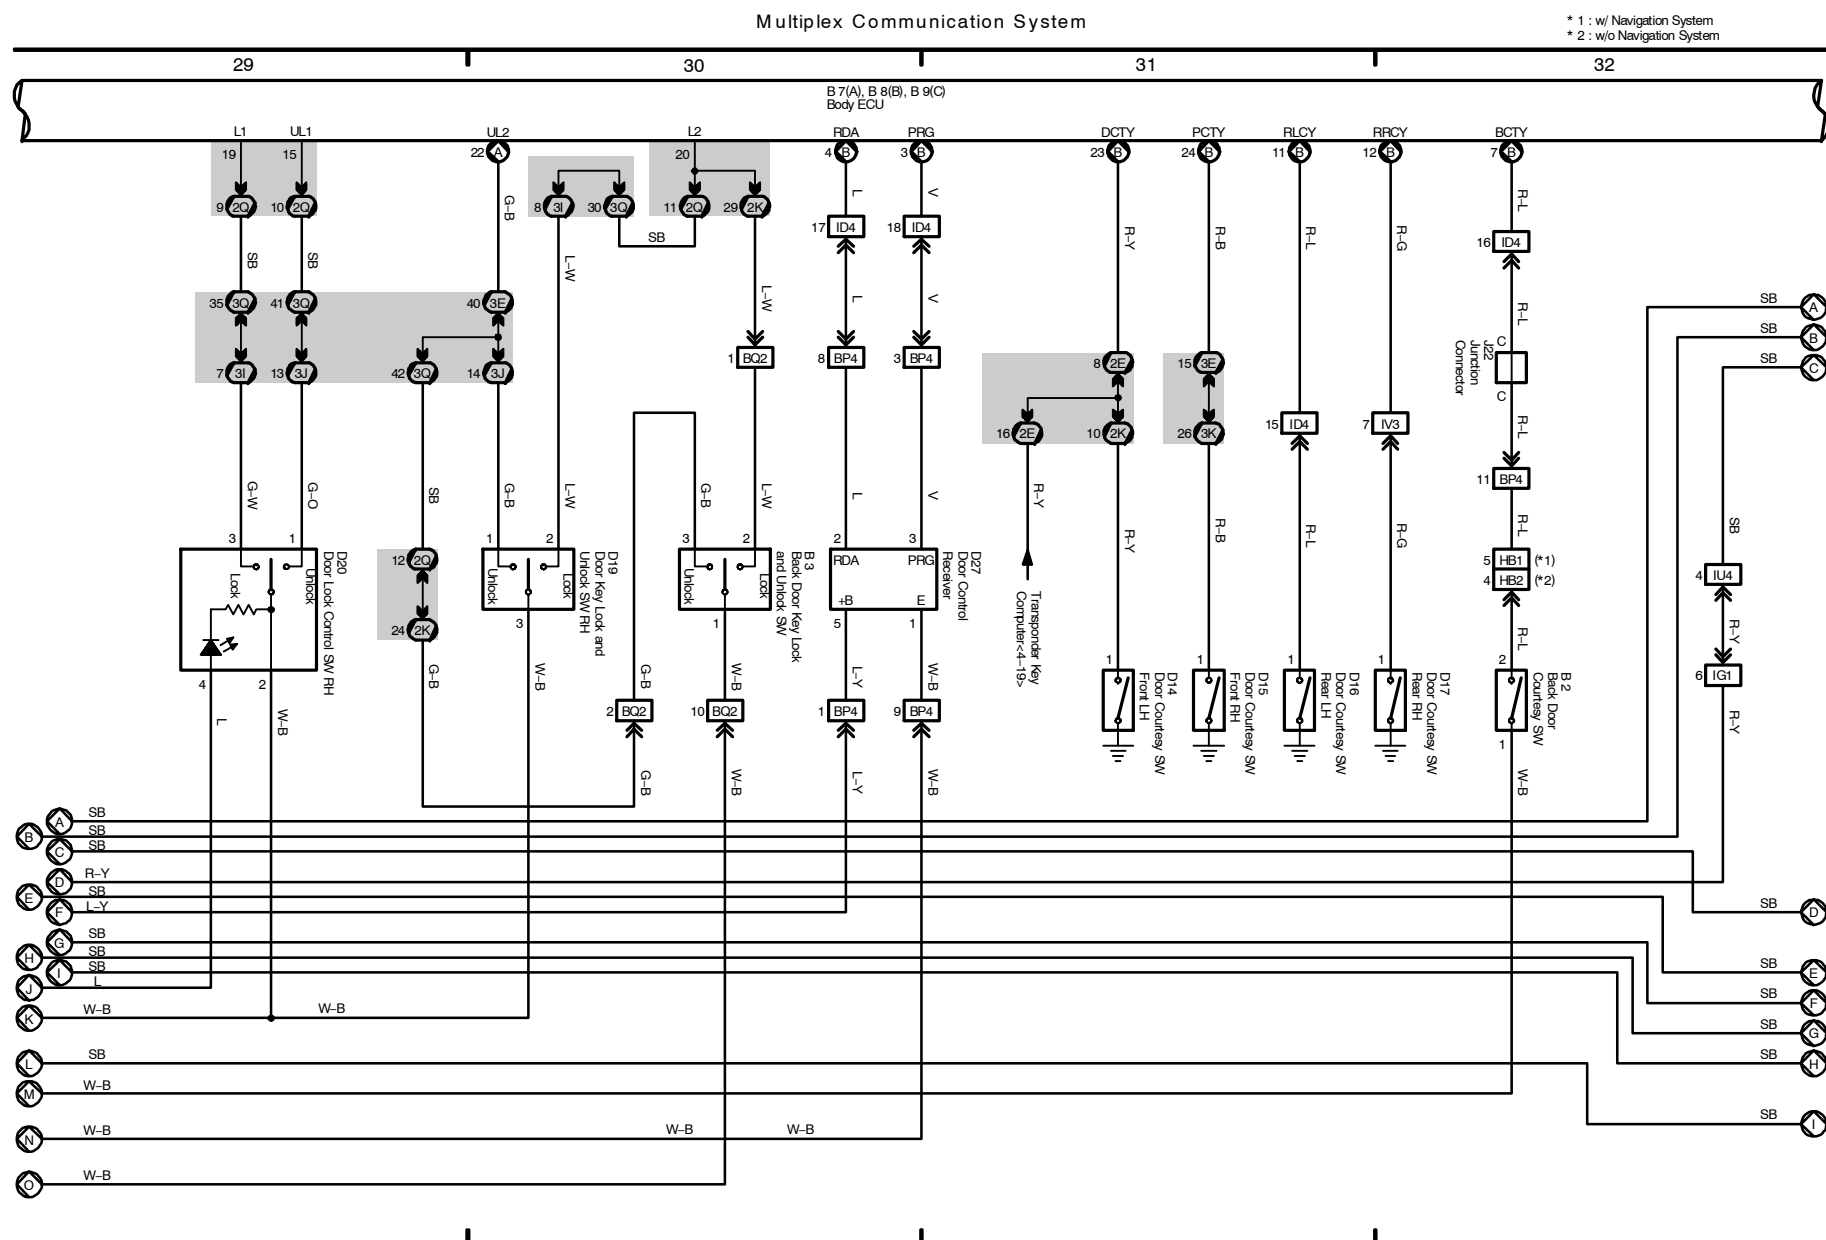

(Cont. next page)


1 LAND CRUISER (Cont' d)

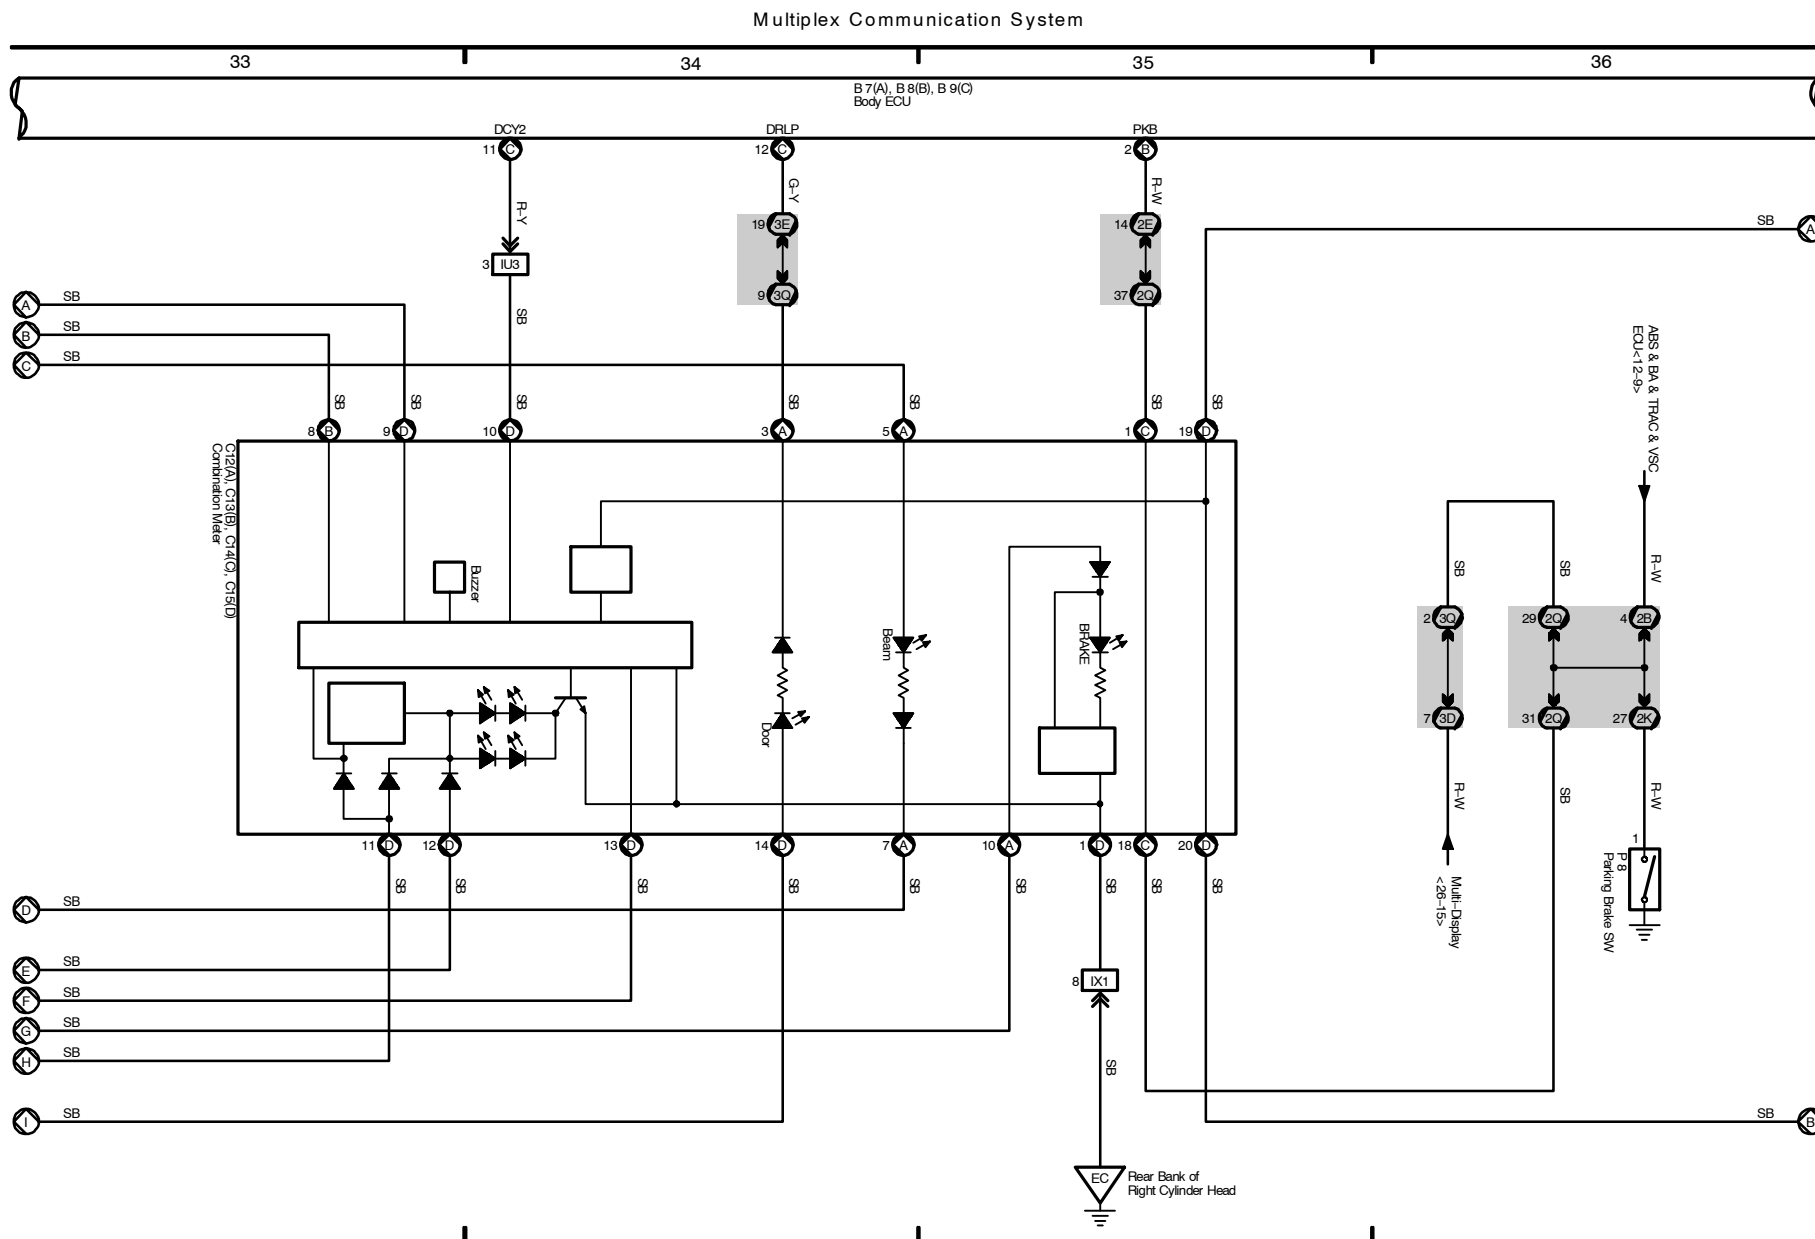




M OVERALL ELECTRICAL WIRING DIAGRAM

2 LAND CRUISER

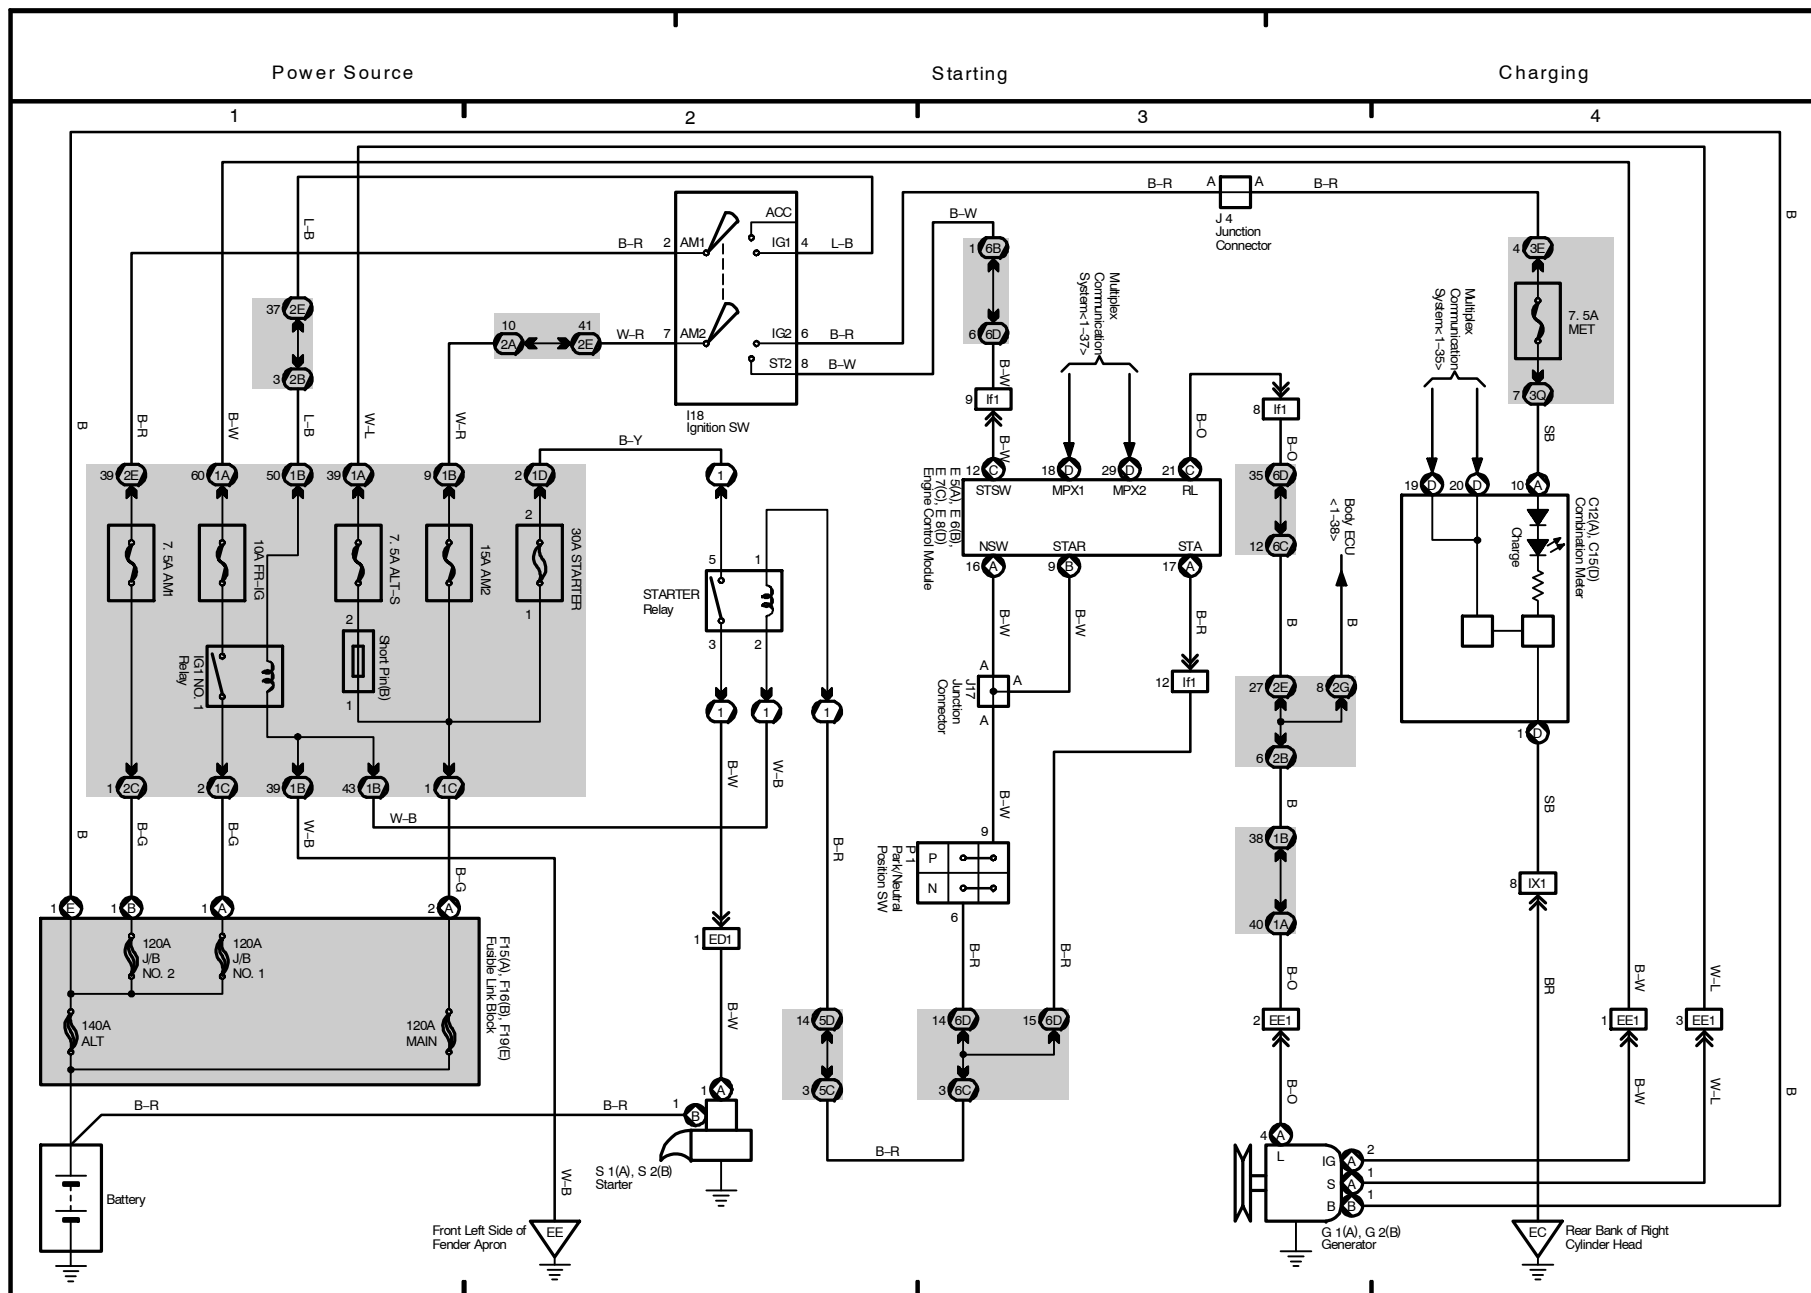



2004 LAND CRUISER (EWD548U)


3 LAND CRUISER

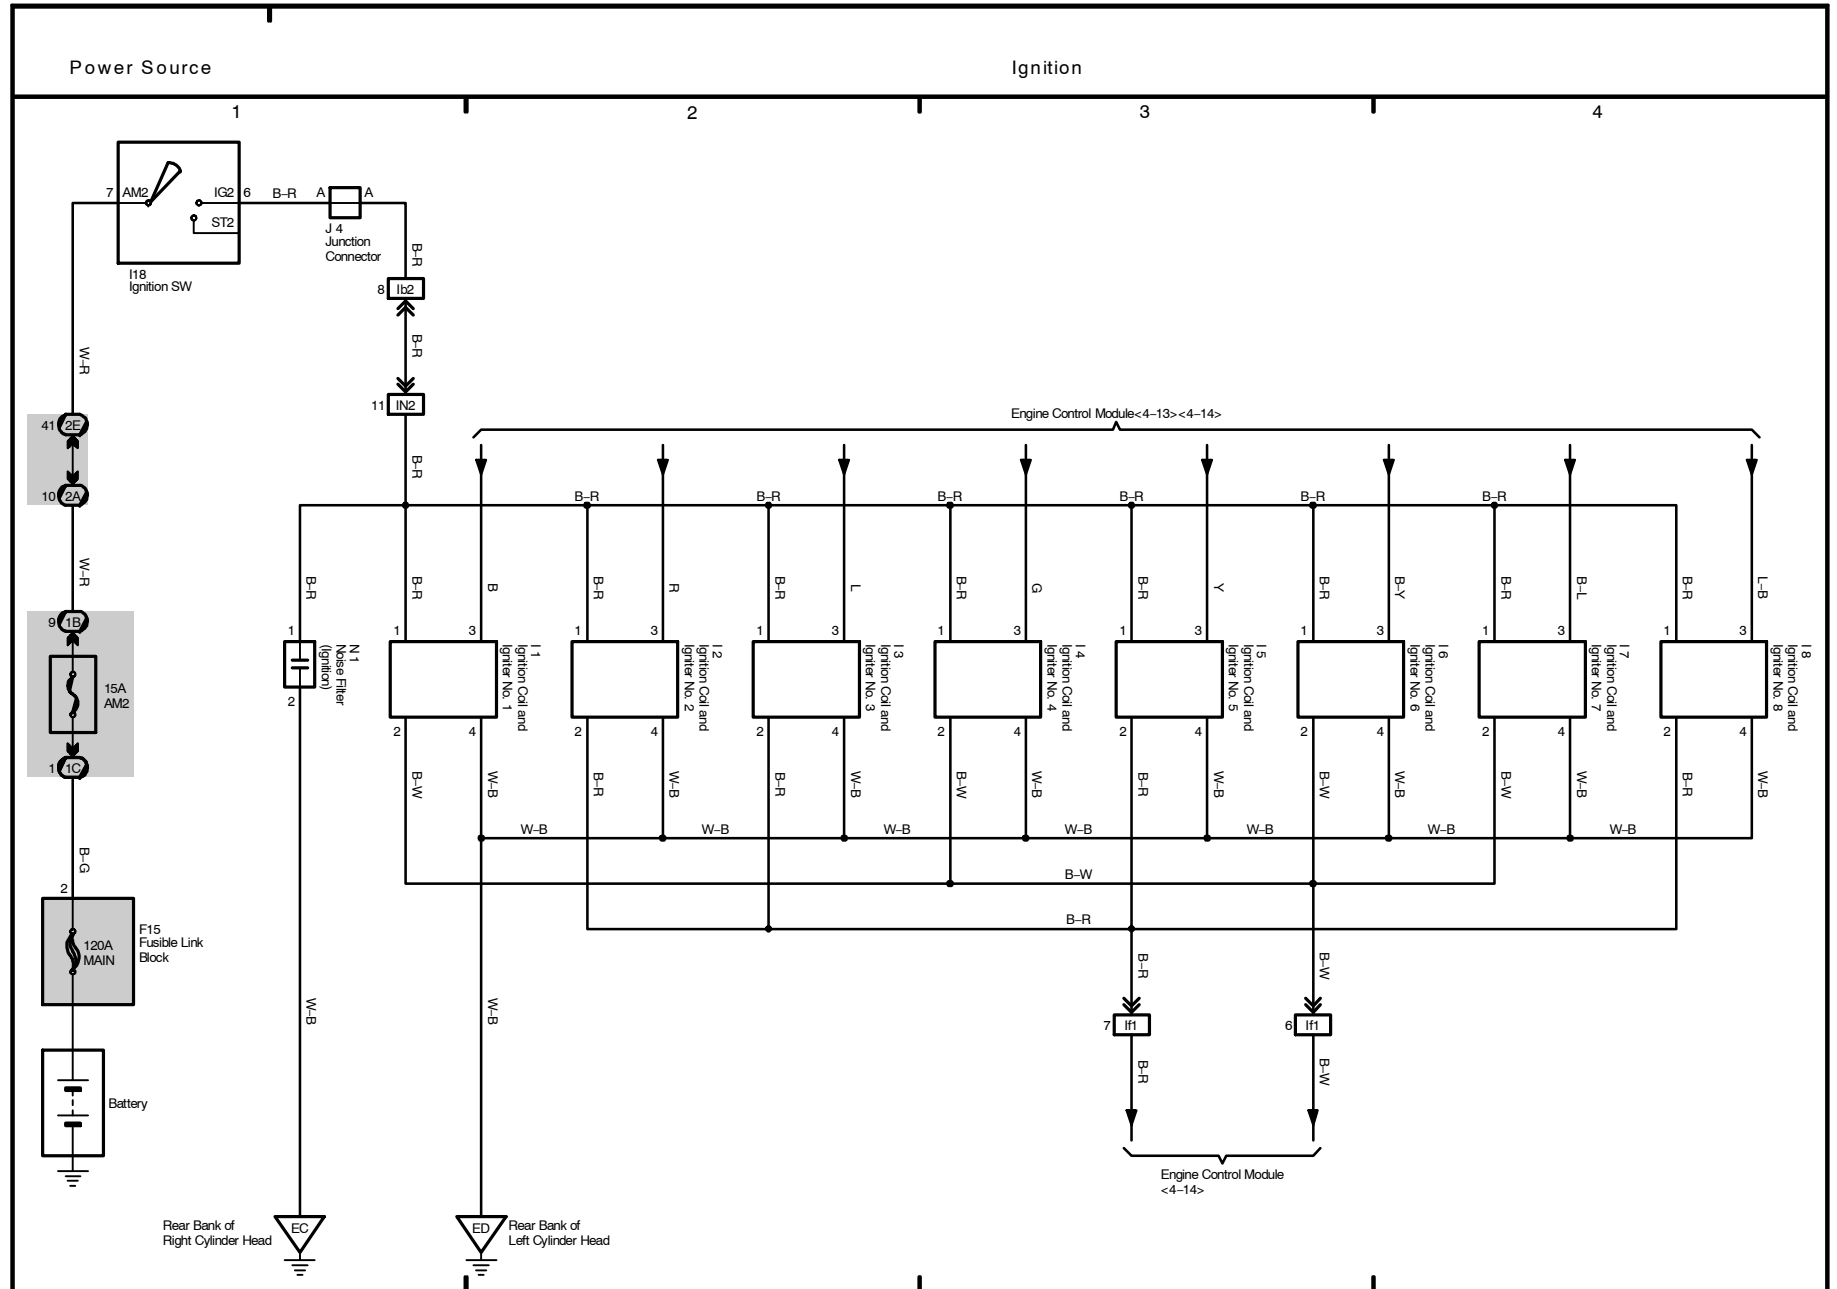


2004 LAND CRUISER (EWD548U)

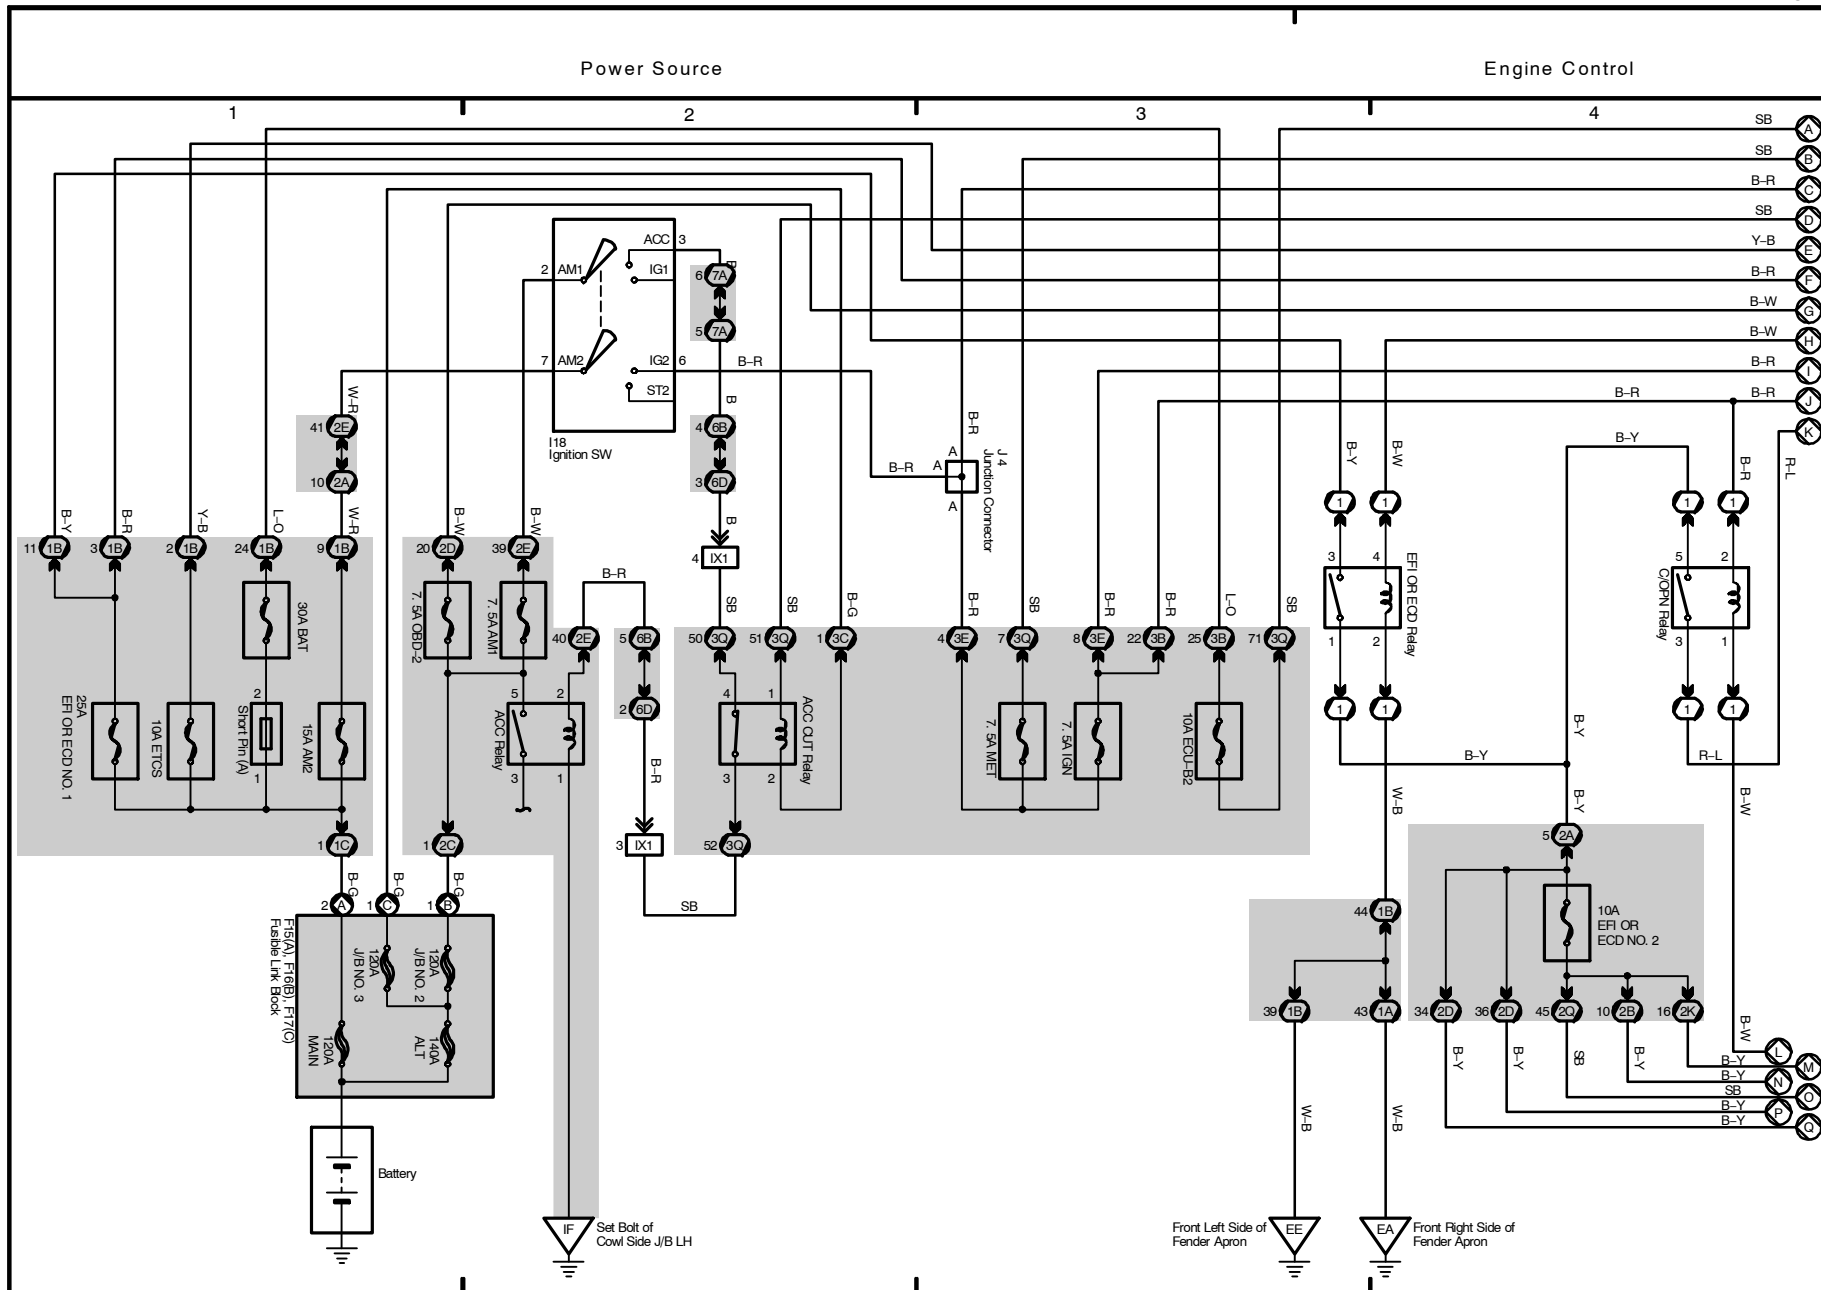

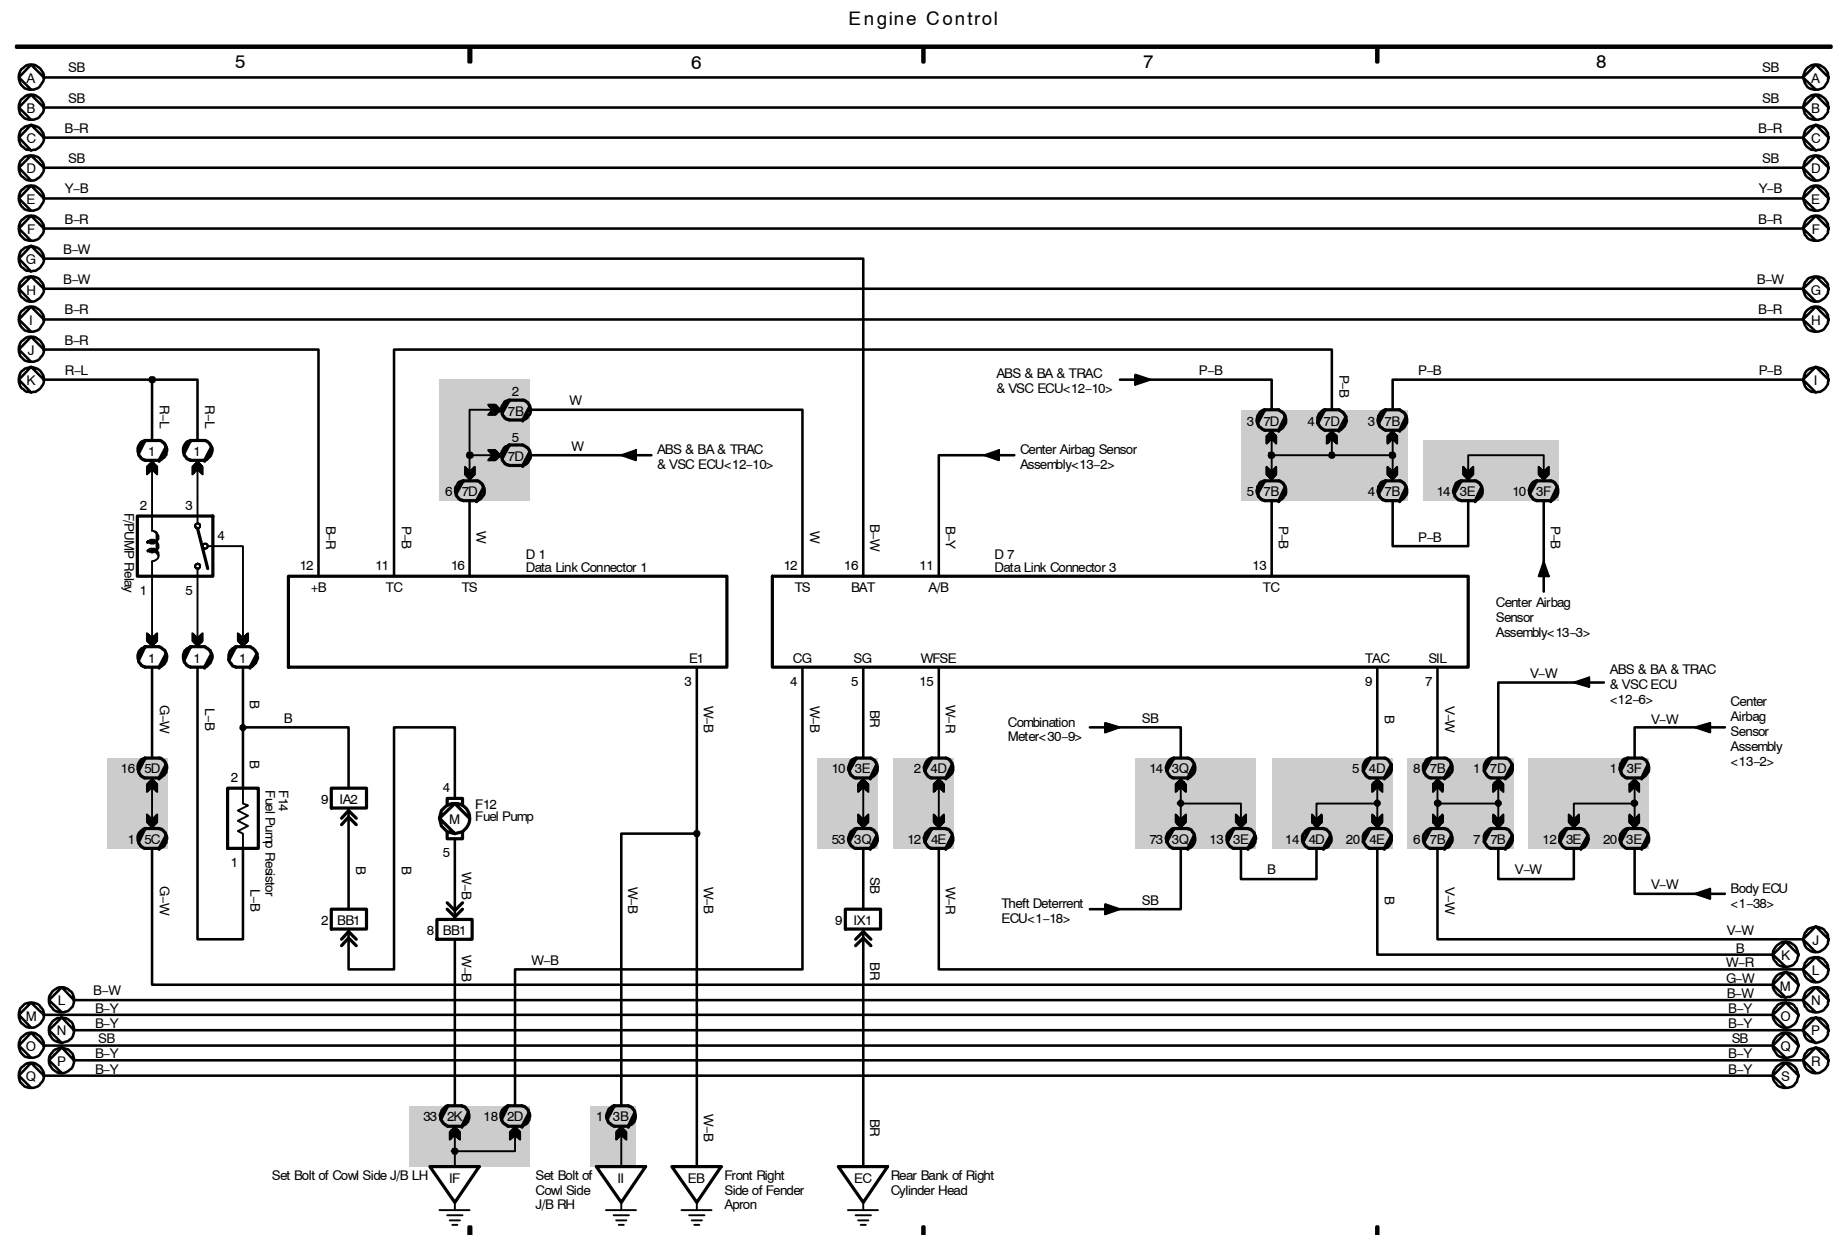

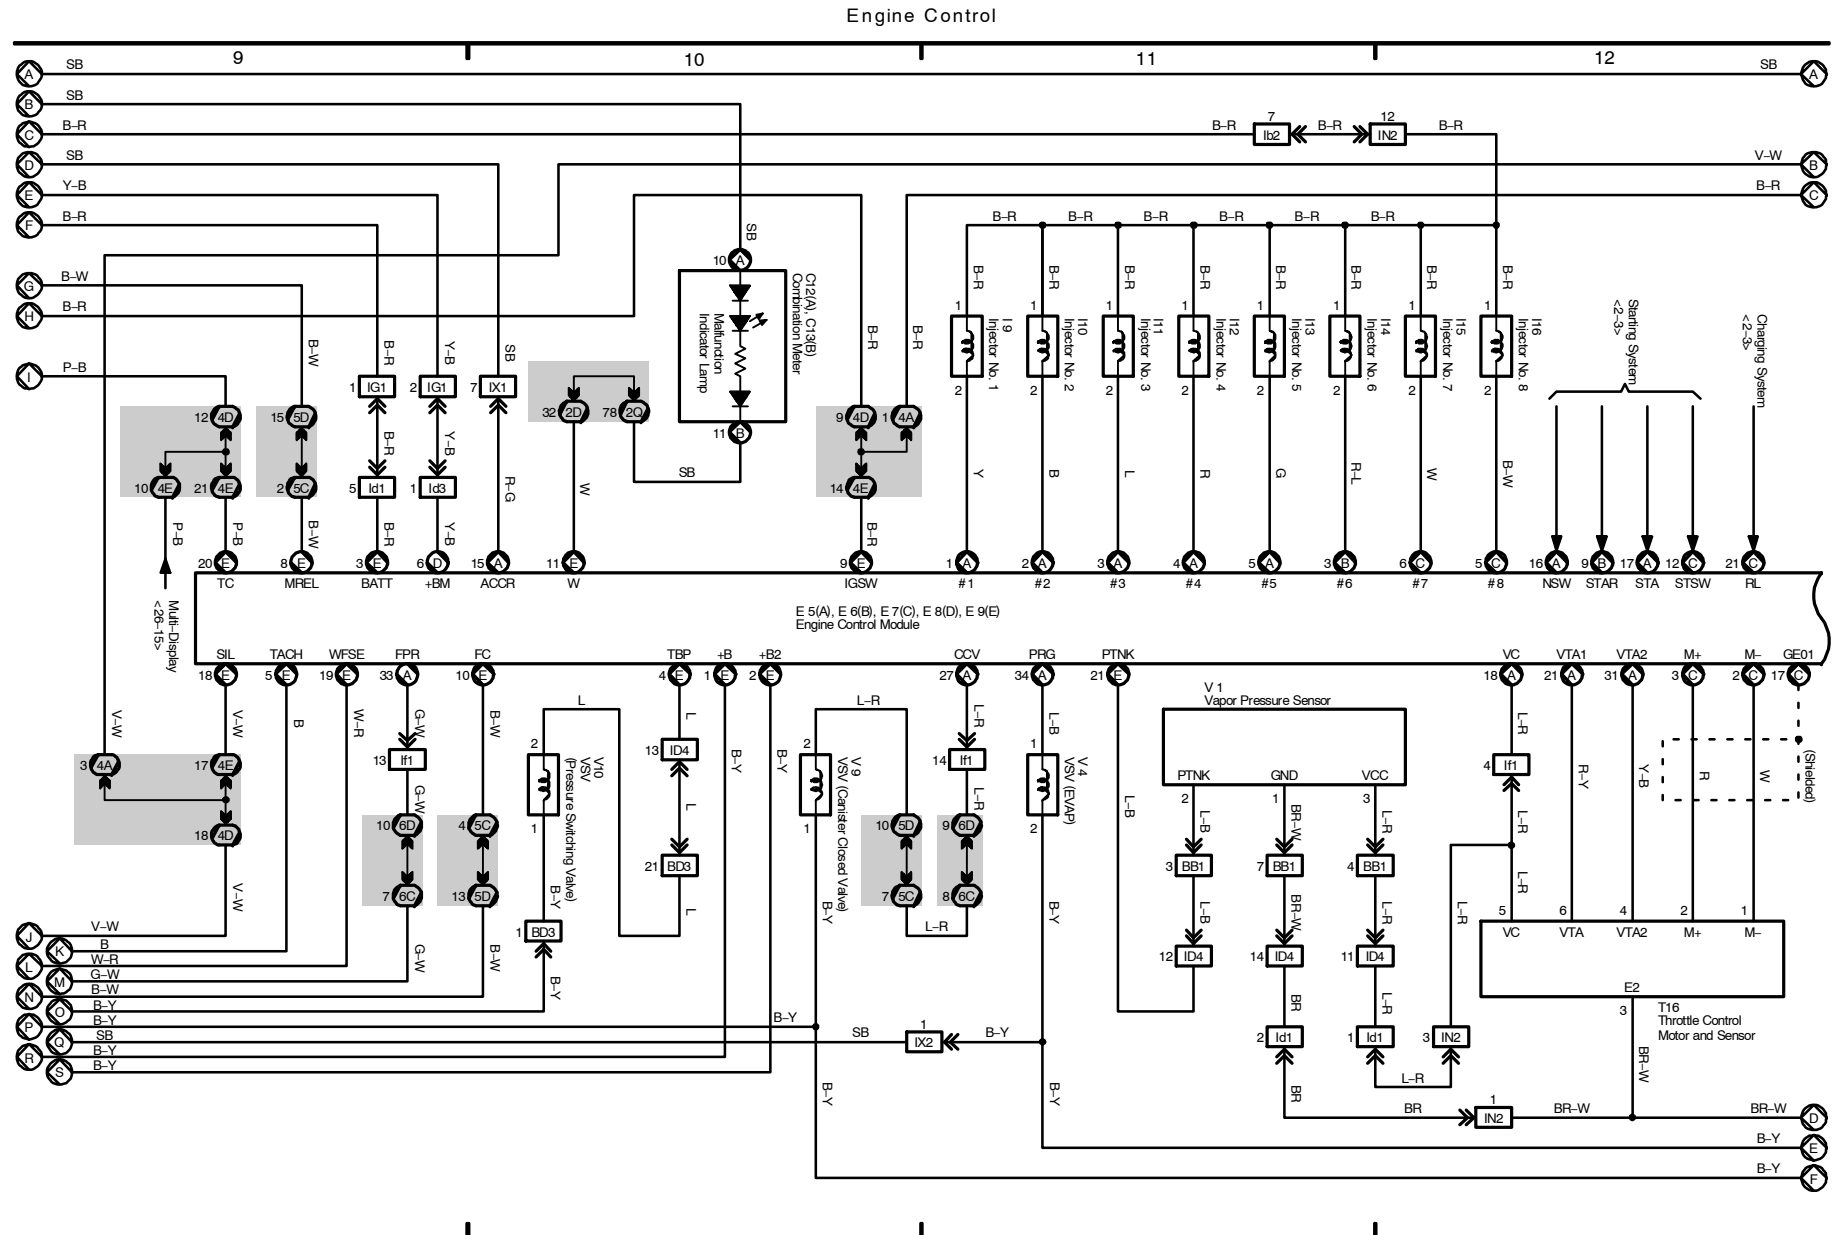


Engine Control

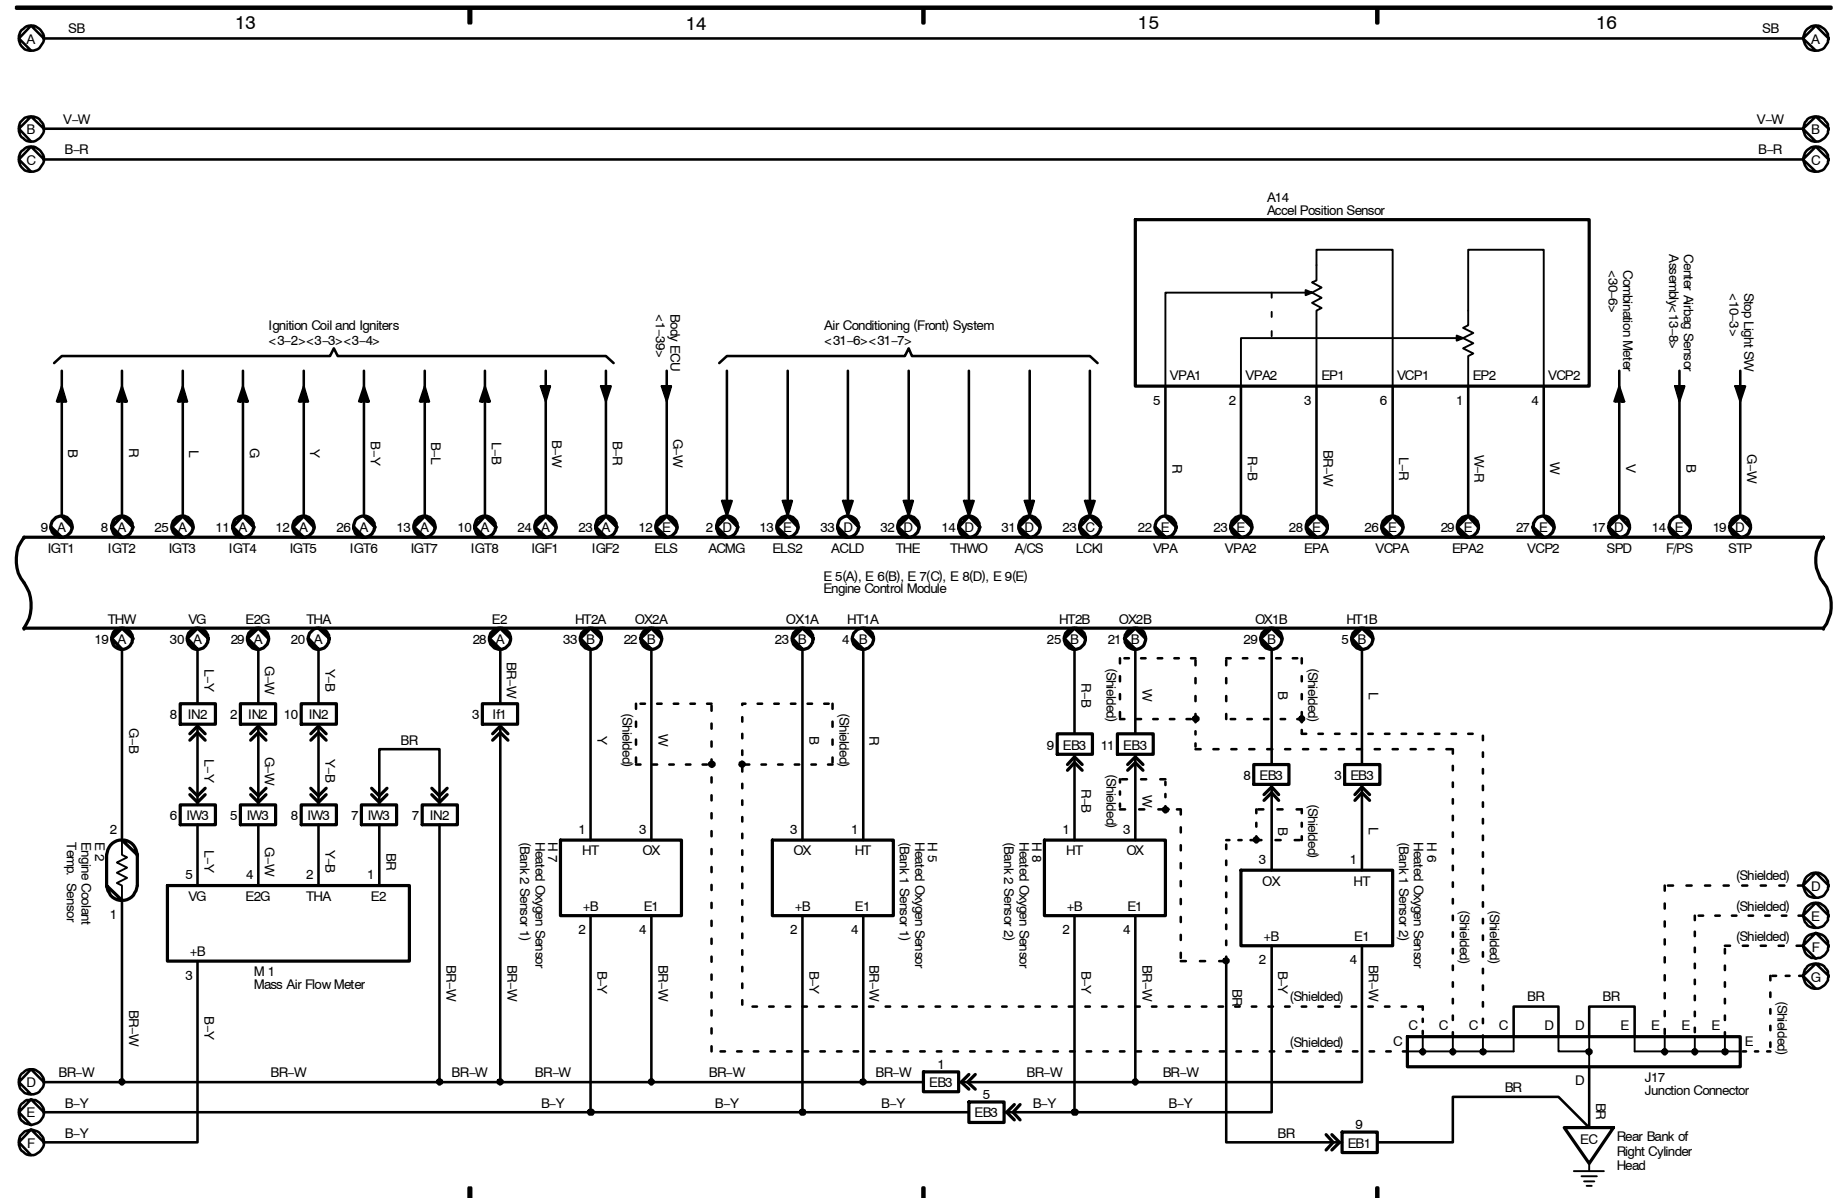



M OVERALL ELECTRICAL WIRING DIAGRAM

4 LAND CRUISER (Cont' d)

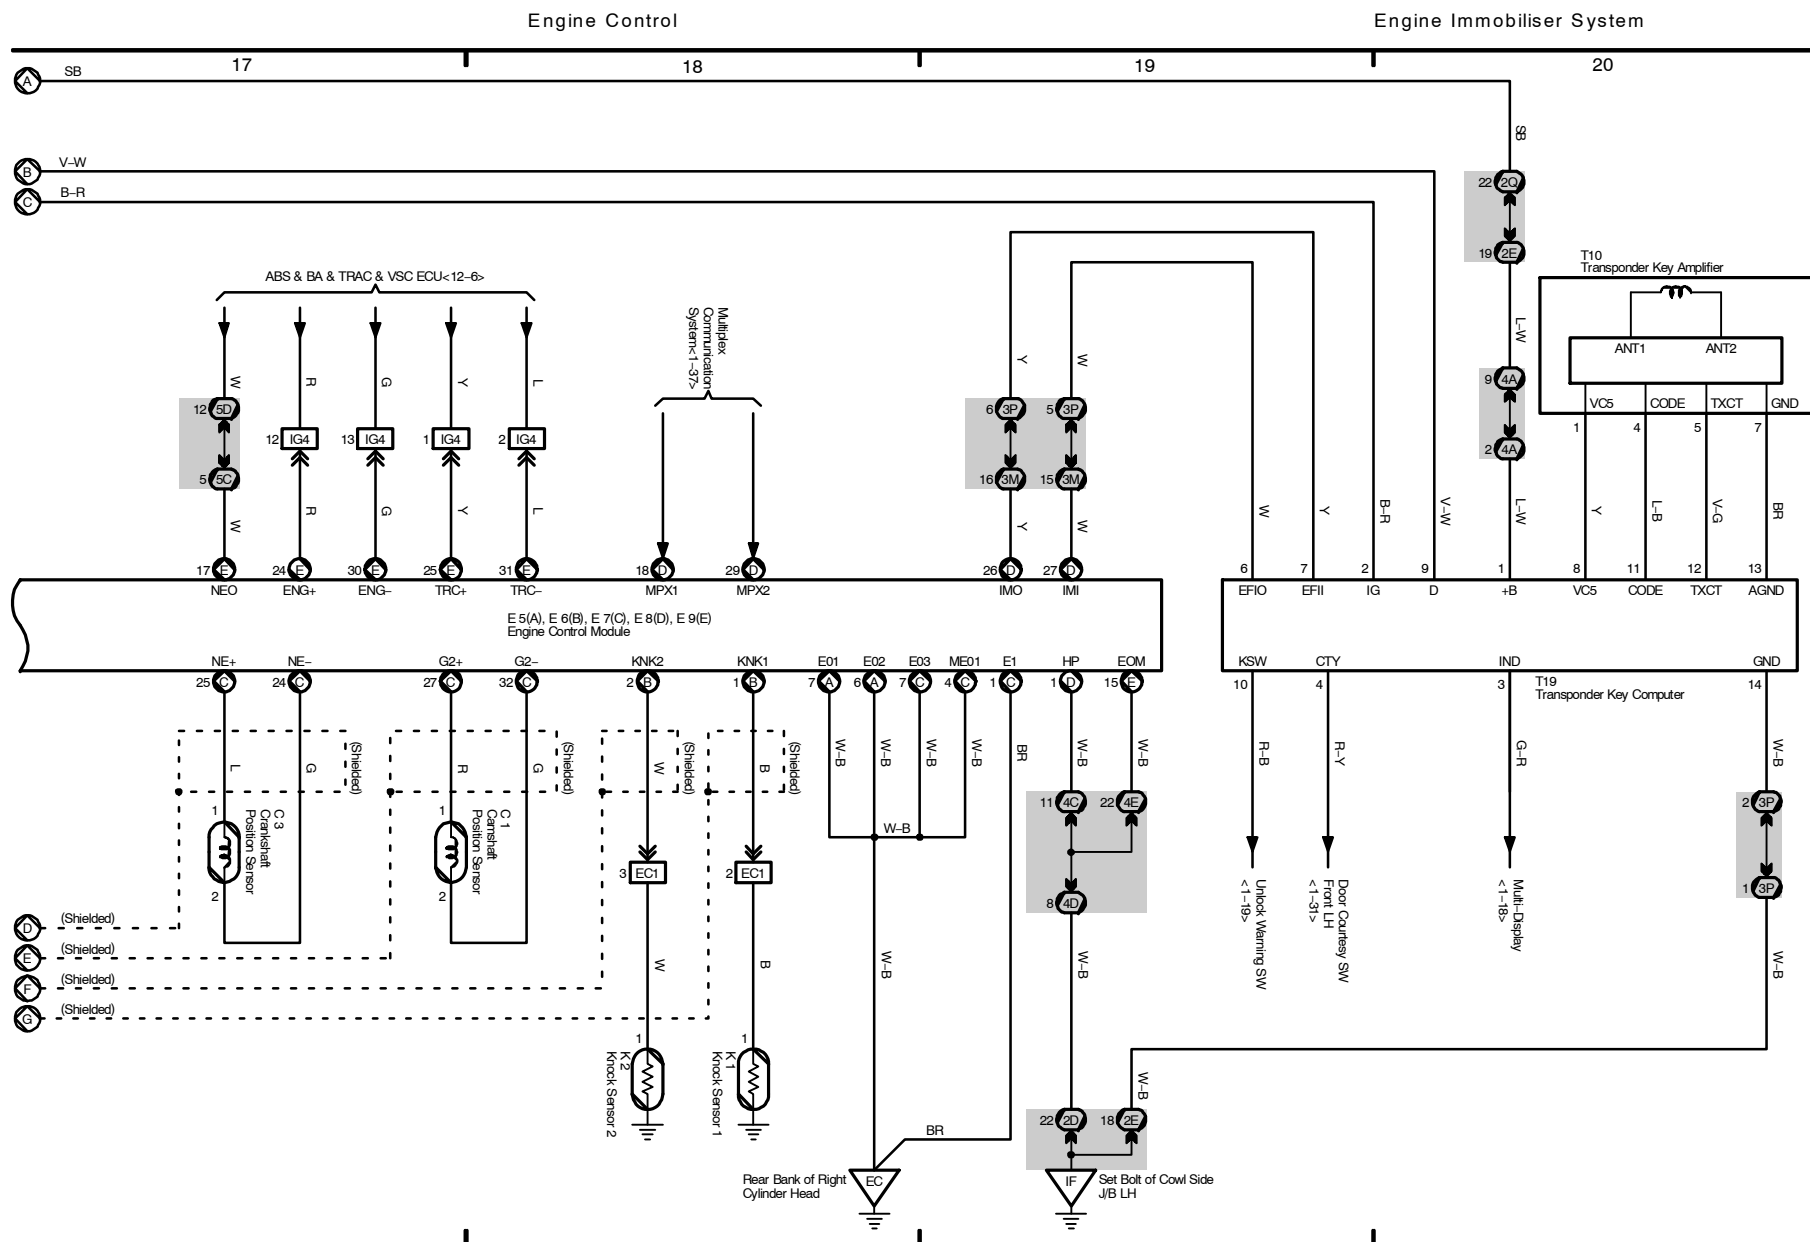


2004 LAND CRUISER (EWD548U)

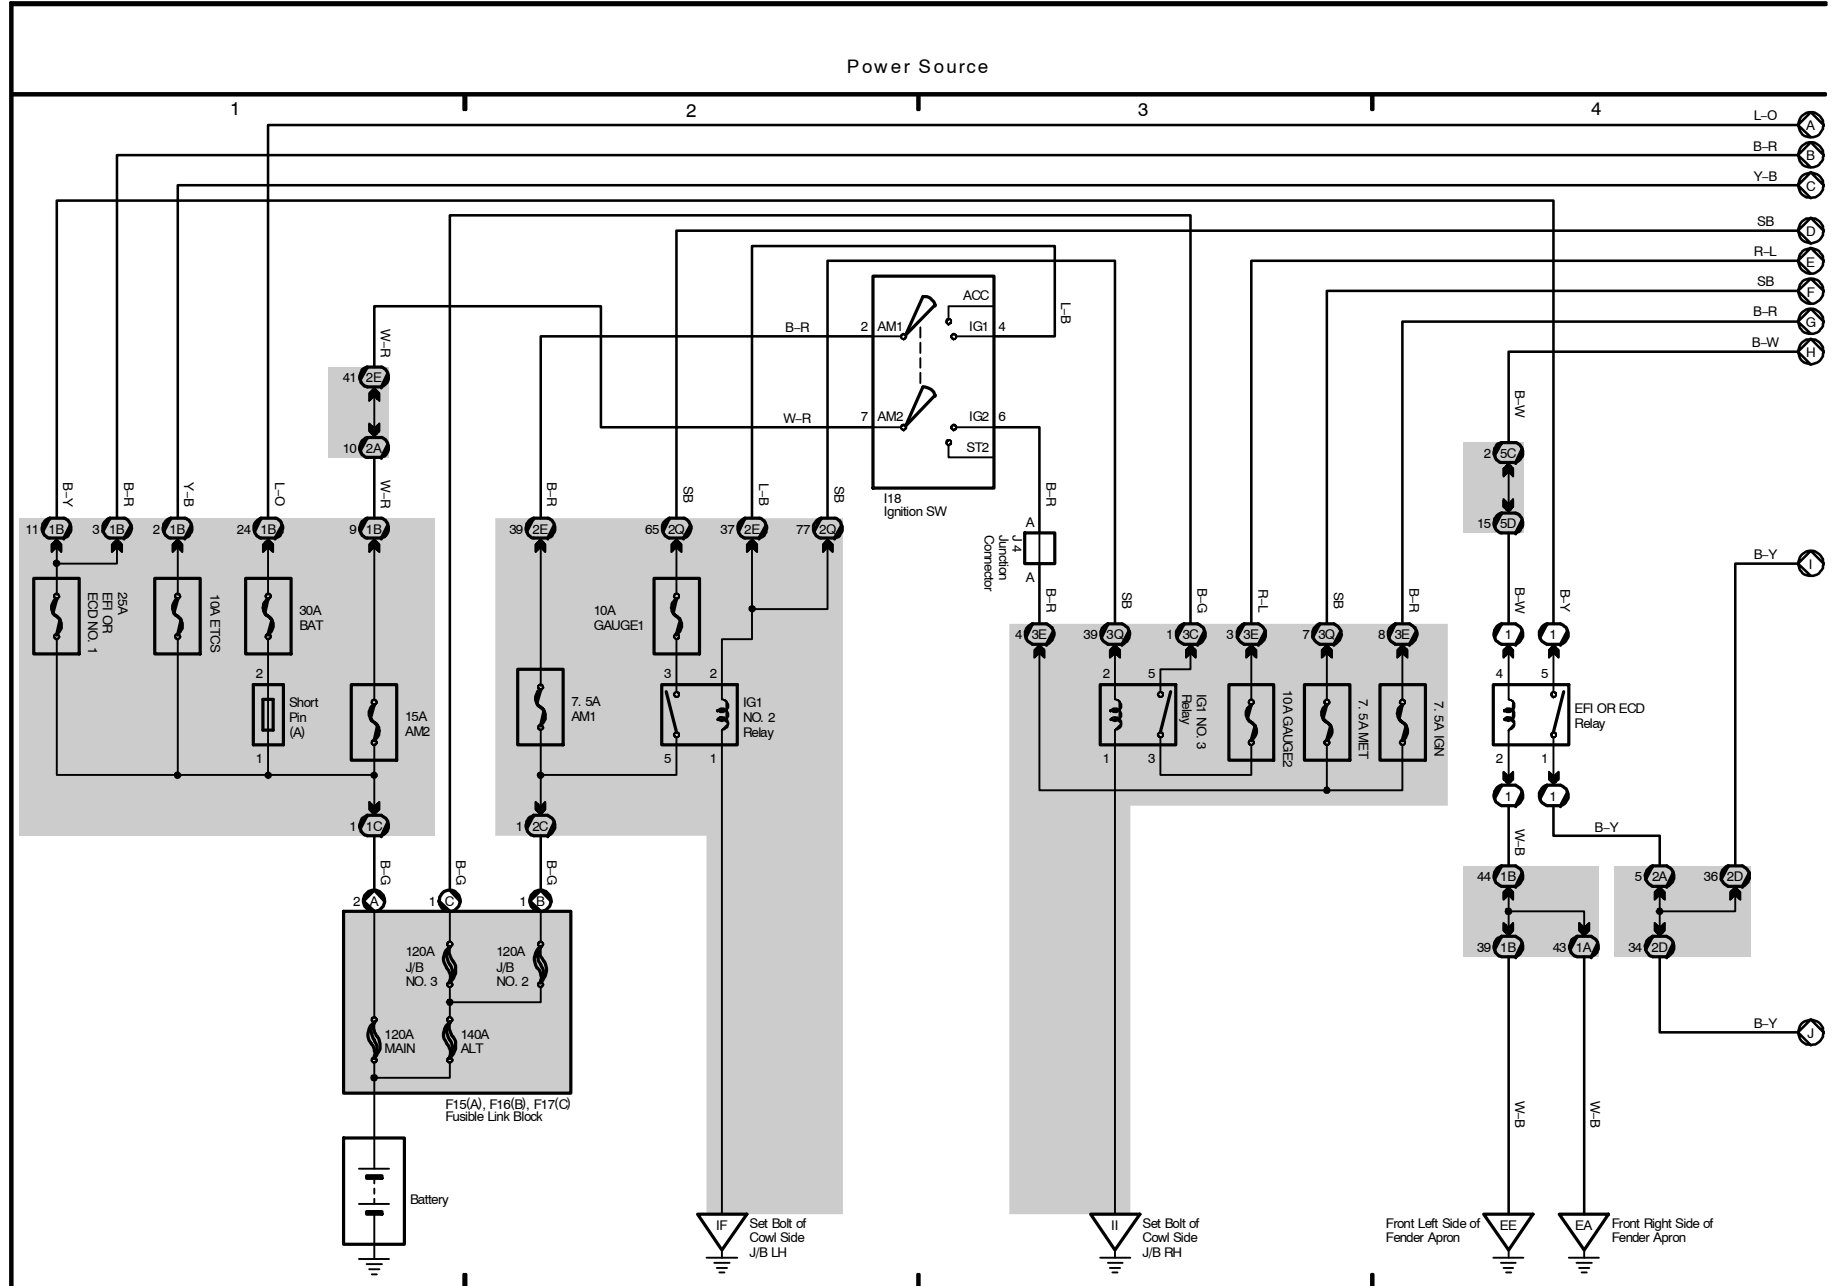


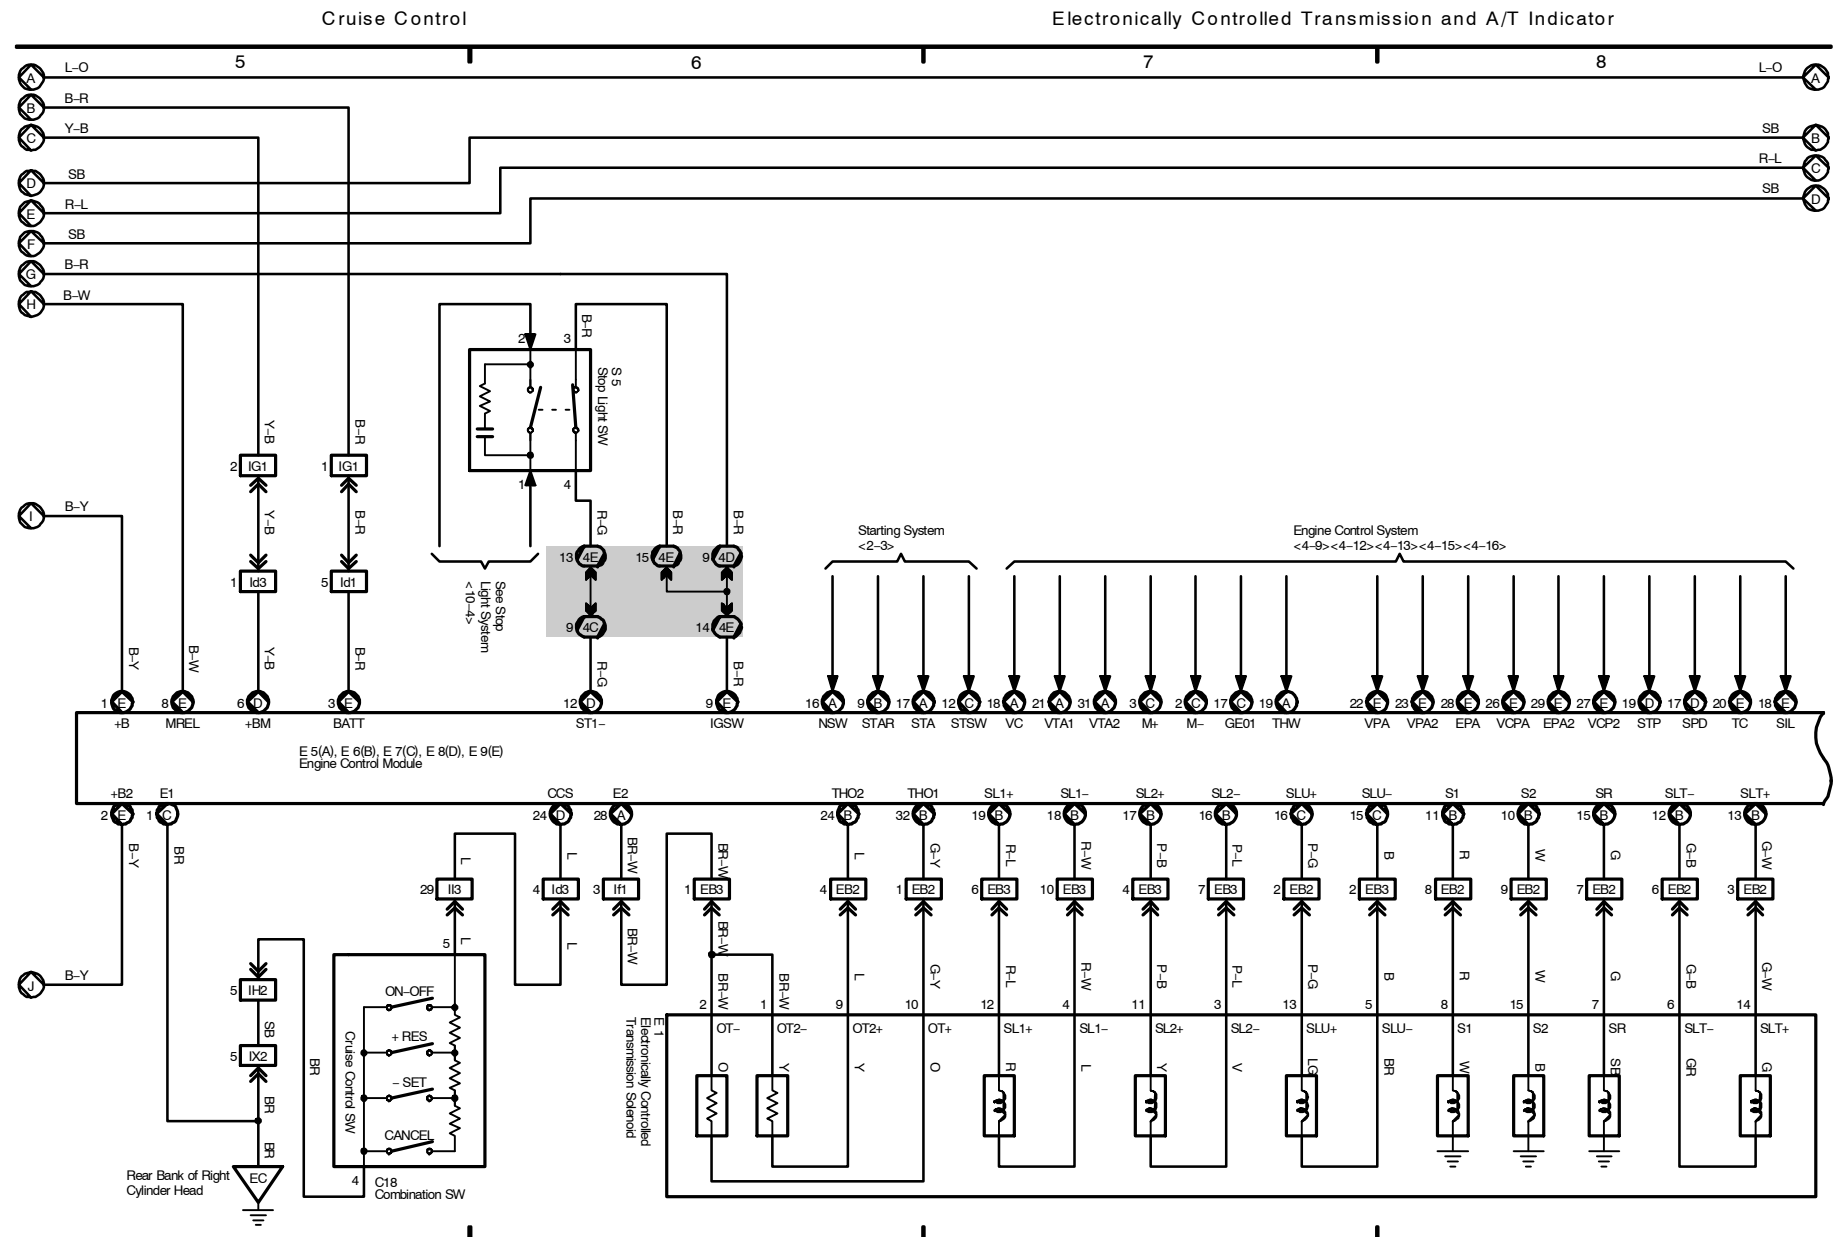


[illegible]

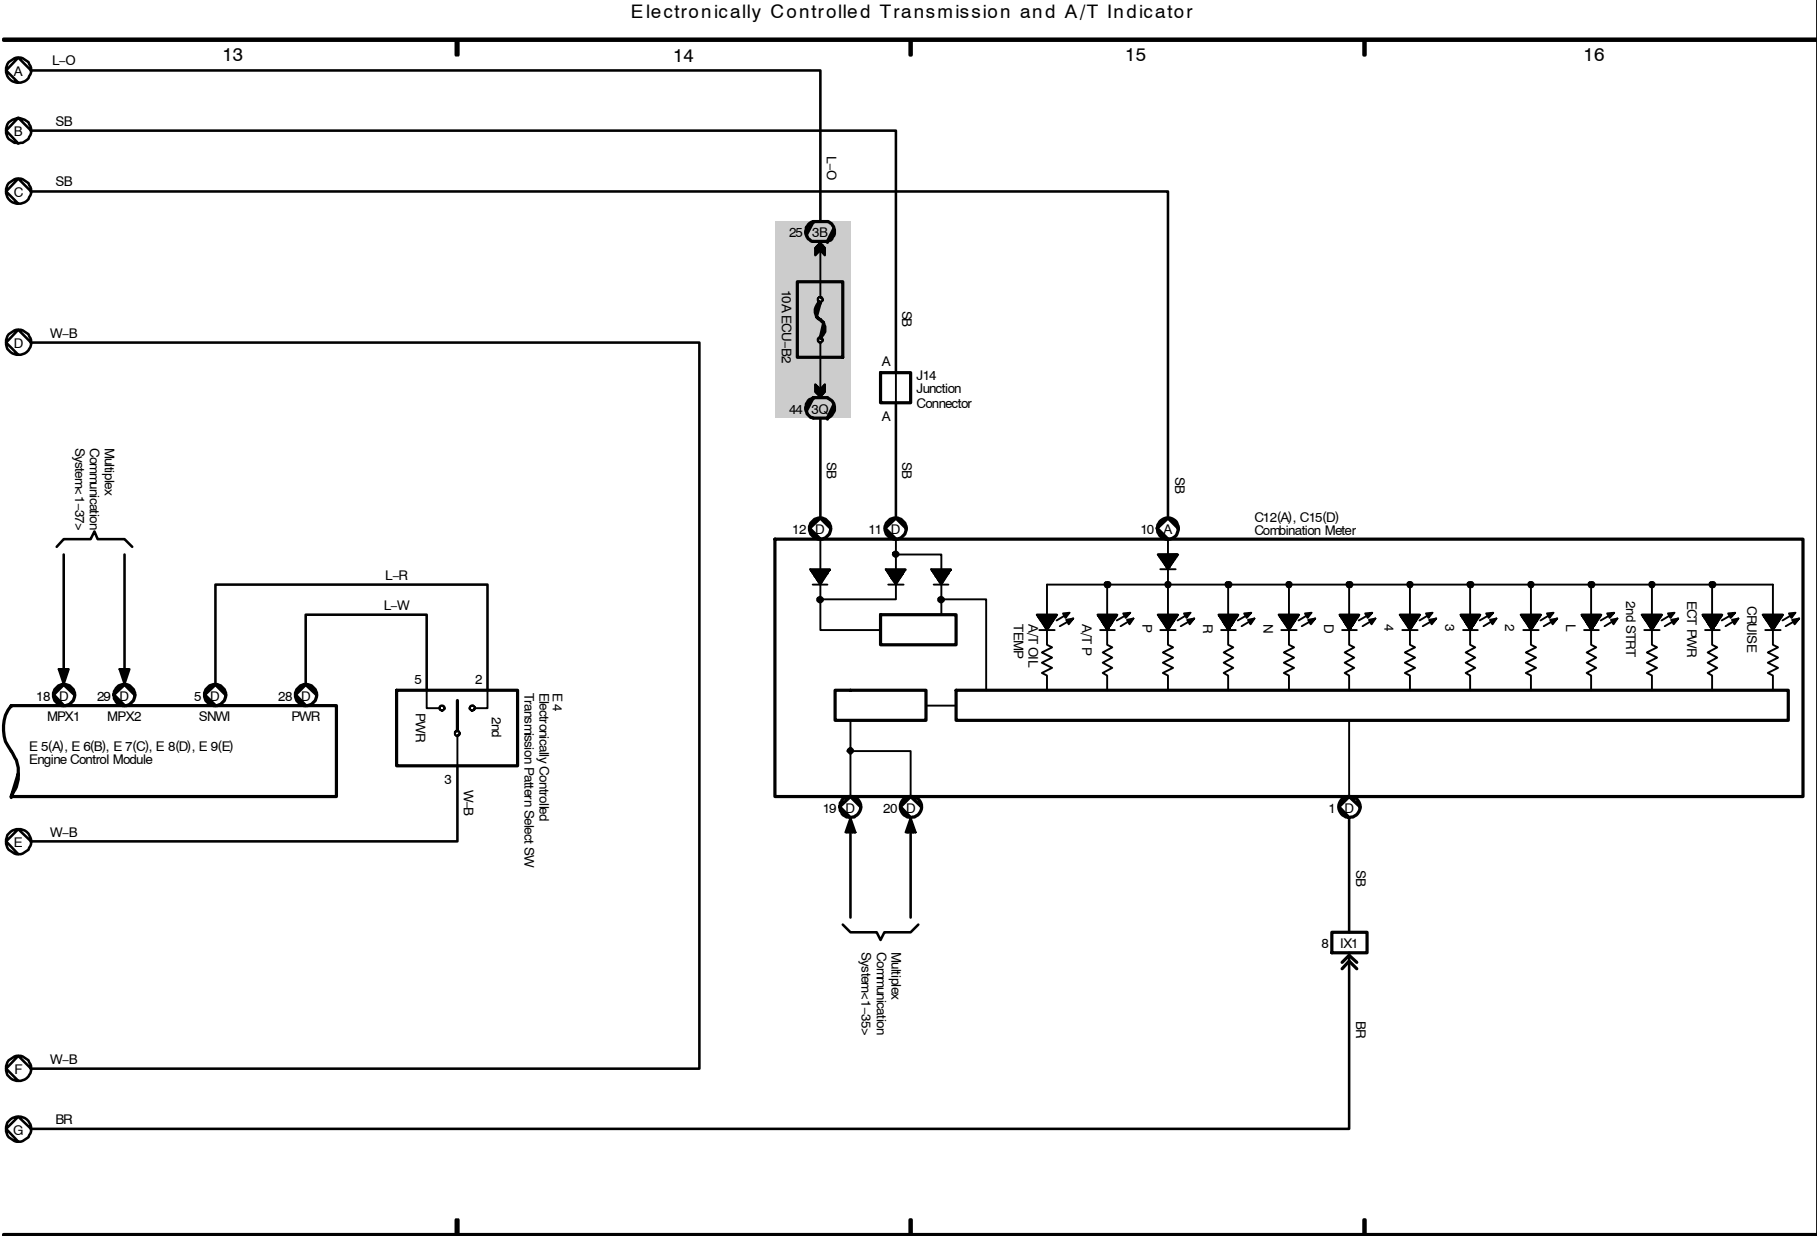

2004 LAND CRUISER (EWD548U)

 


2004 LAND CRUISER (EWD548J)

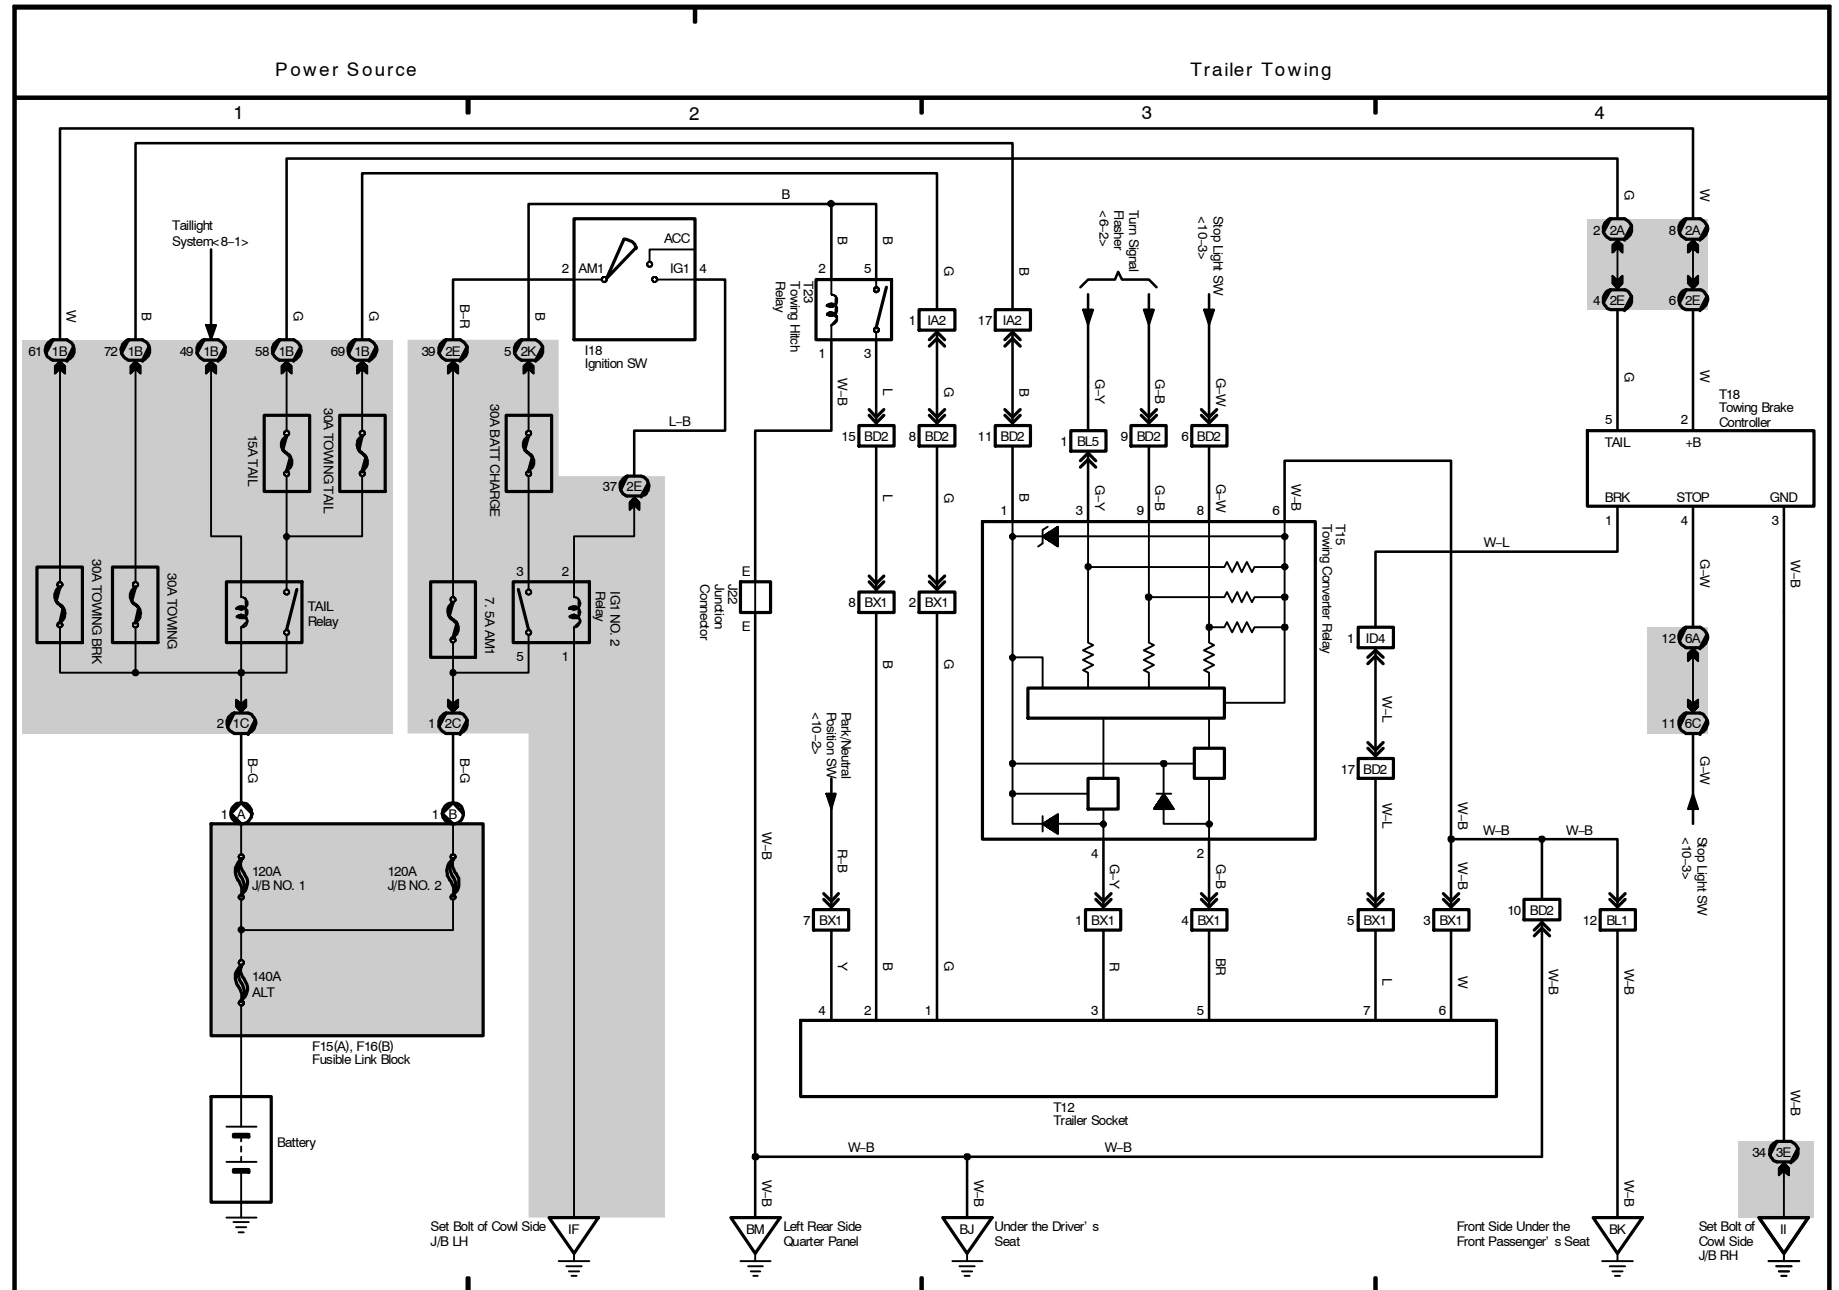


OVERALL ELECTRICAL WIRING DIAGRAM

8 LAND CRUISER

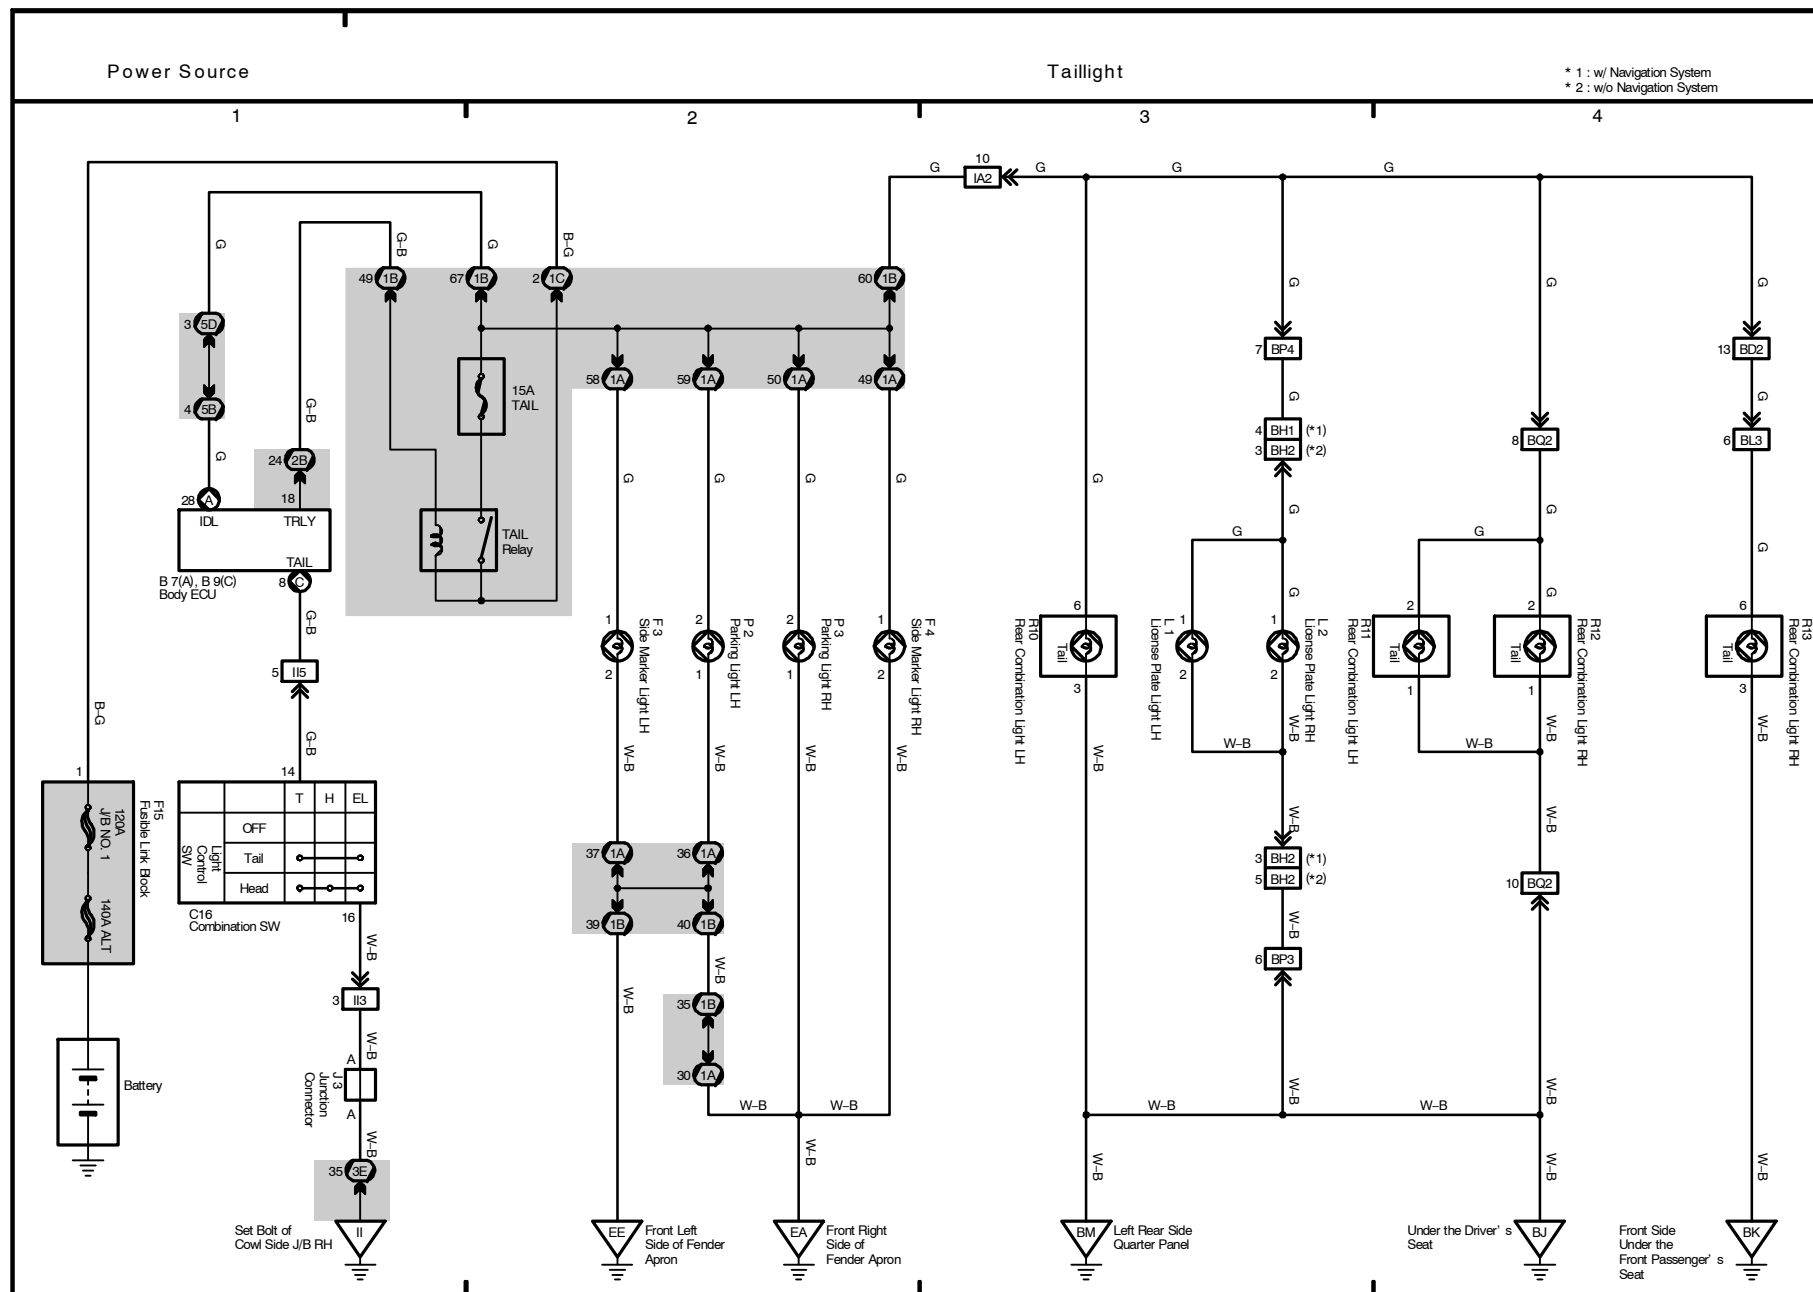

2004 LAND CRUISER (EWD548U)


2004 LAND CRUISER (EWD548U)

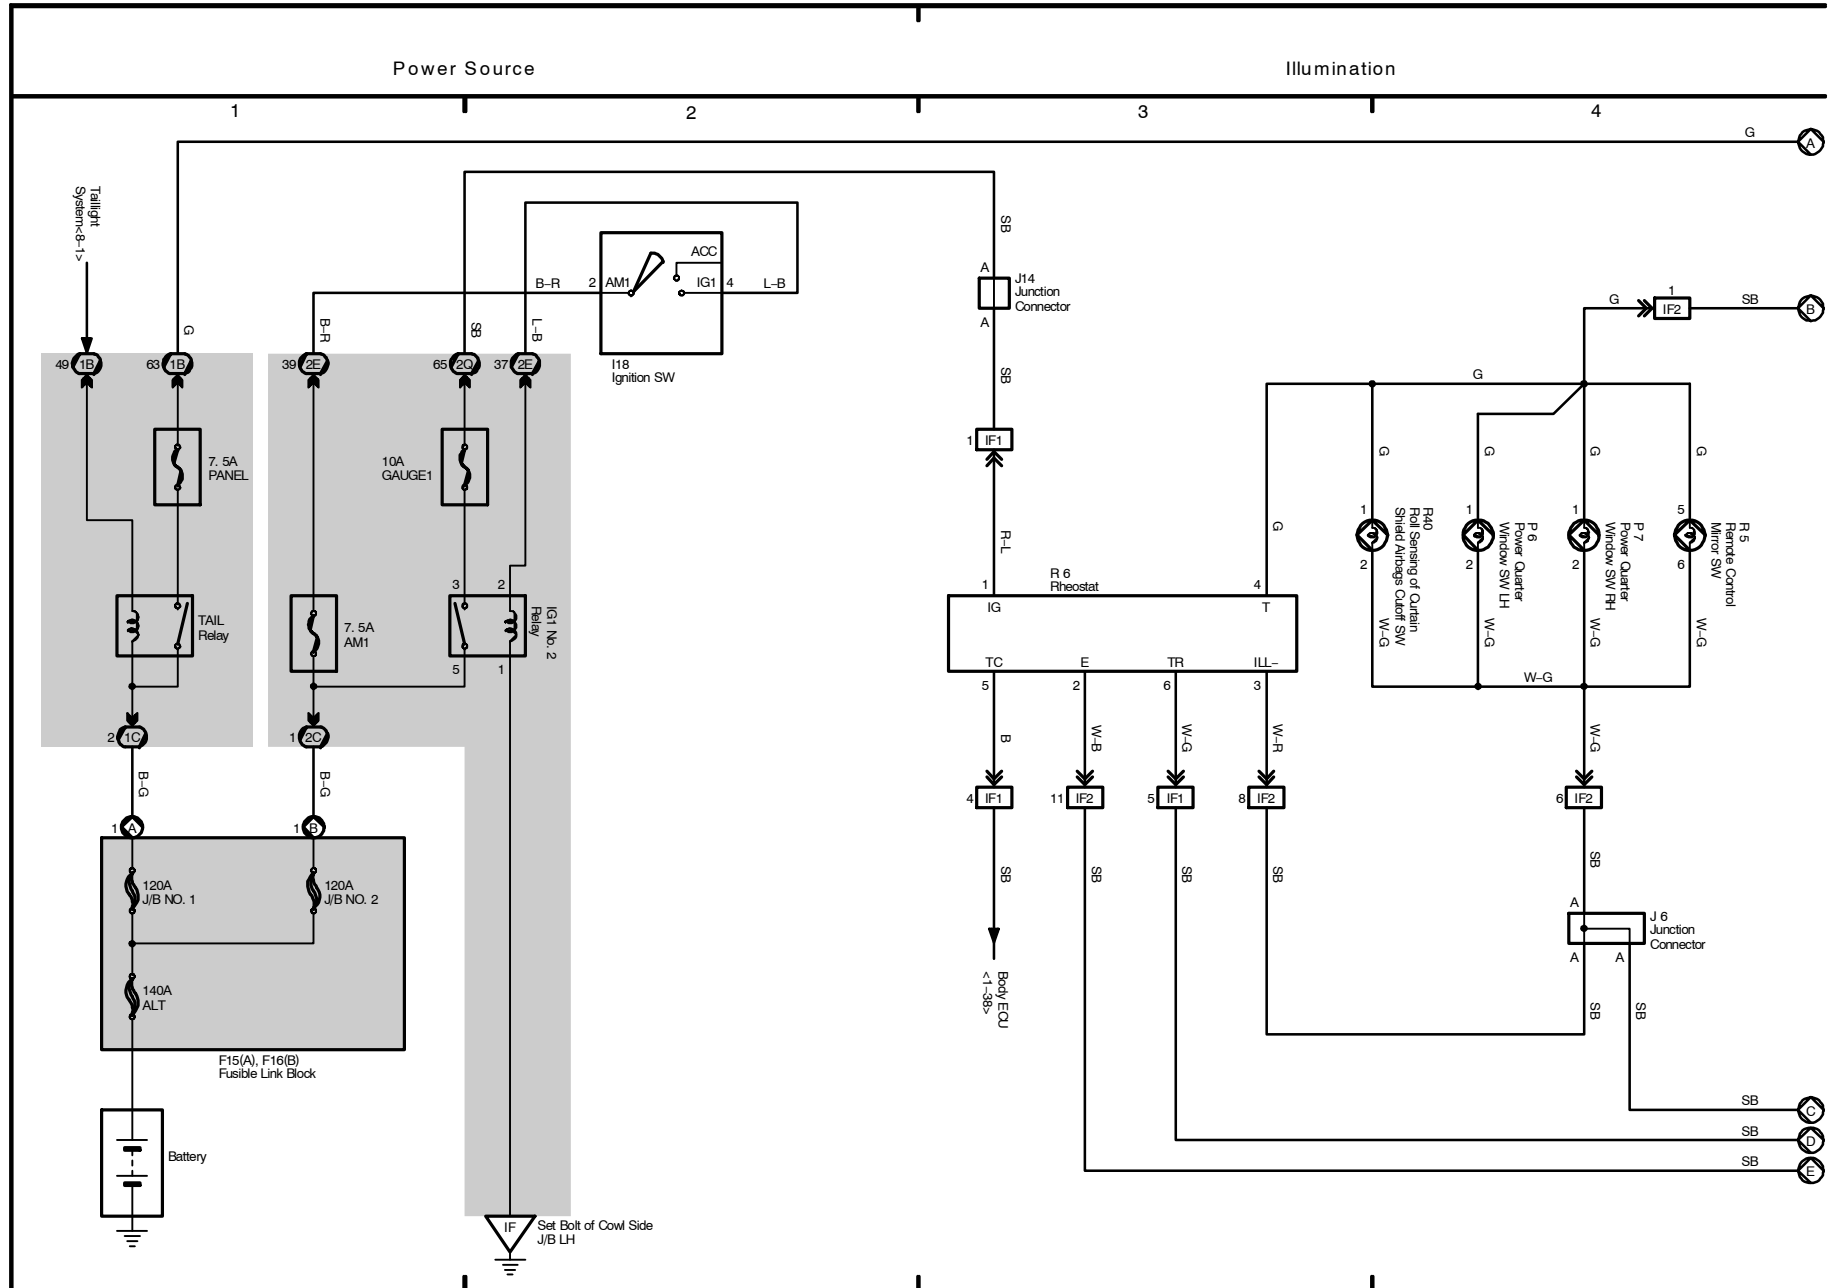

9 LAND CRUISER (Cont' d)


Illumination

* 1 : w/ Navigation System
 * 2 : w/o Navigation System

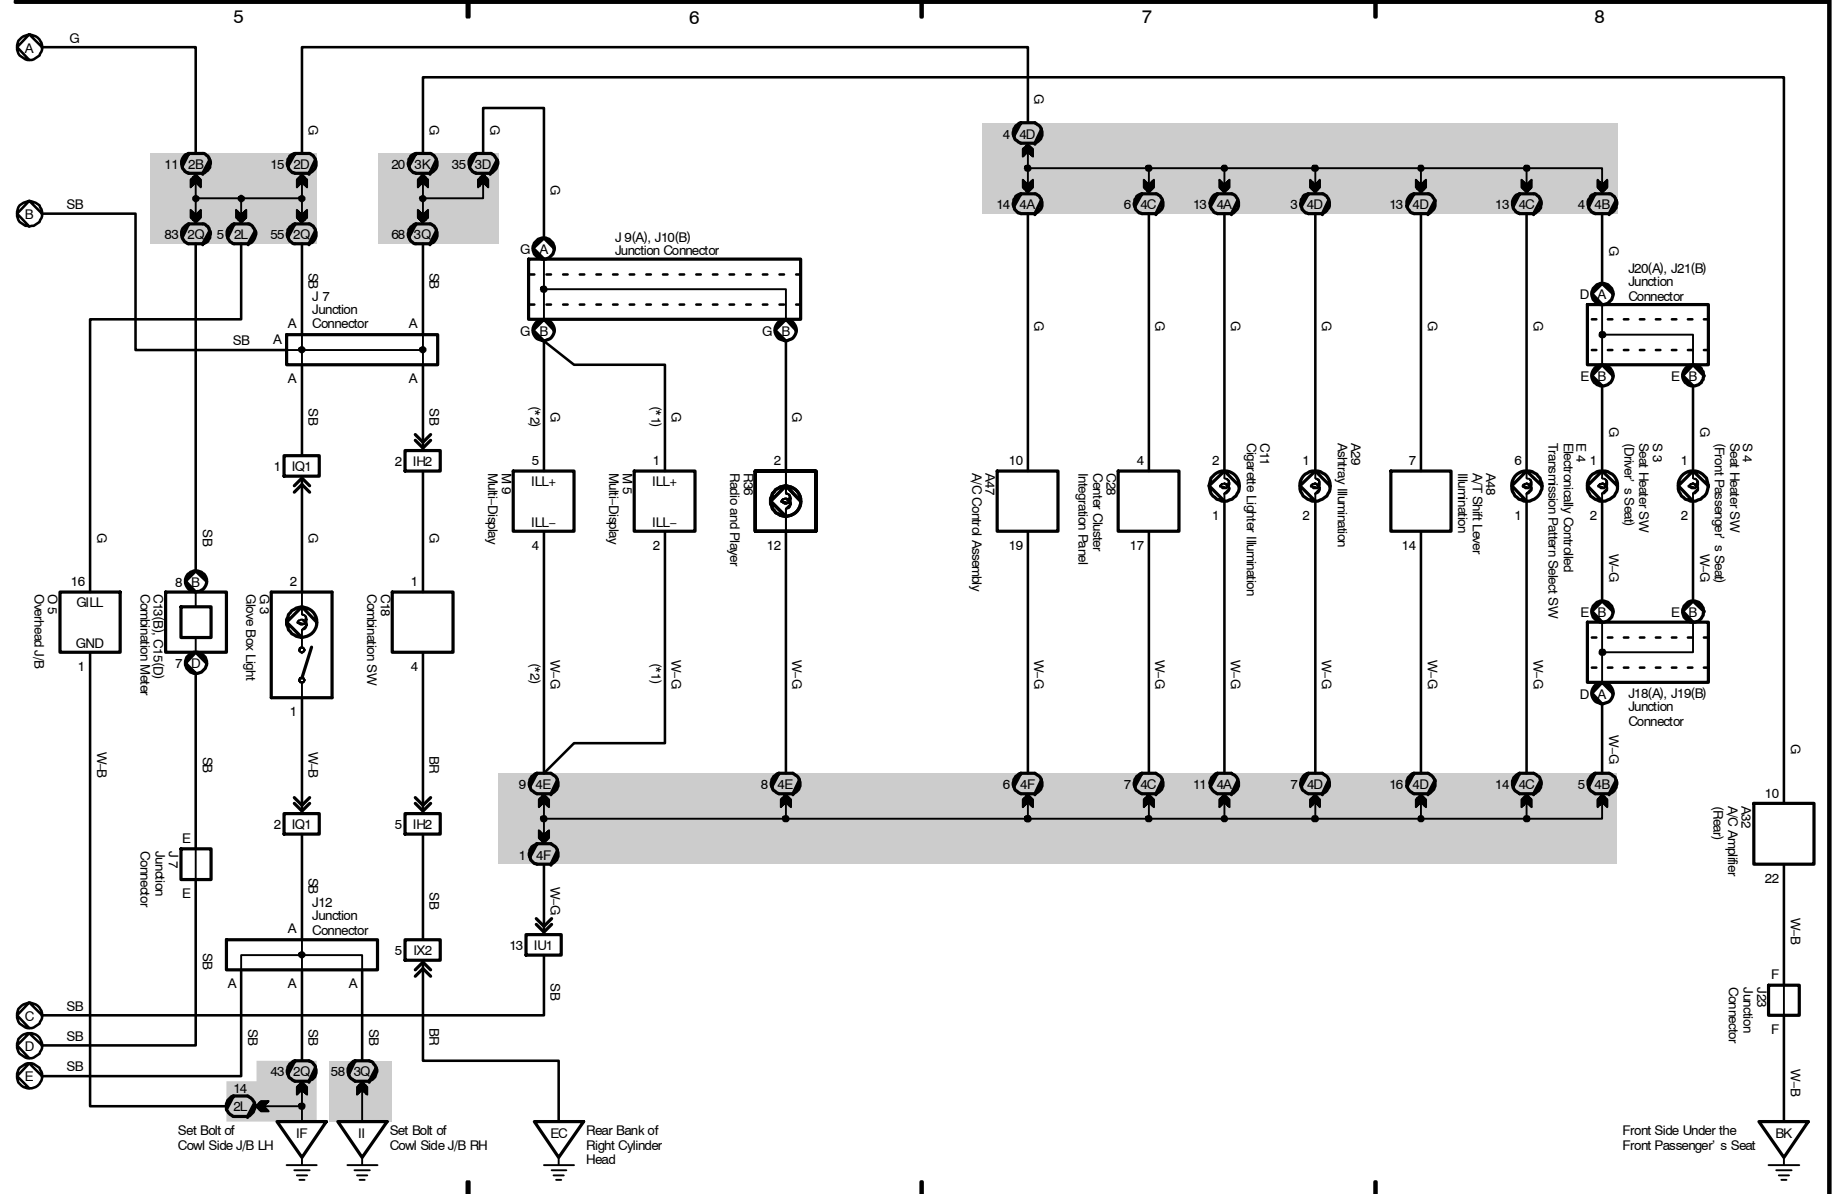


2004 LAND CRUISER (EWD548U)


10 LAND CRUISER

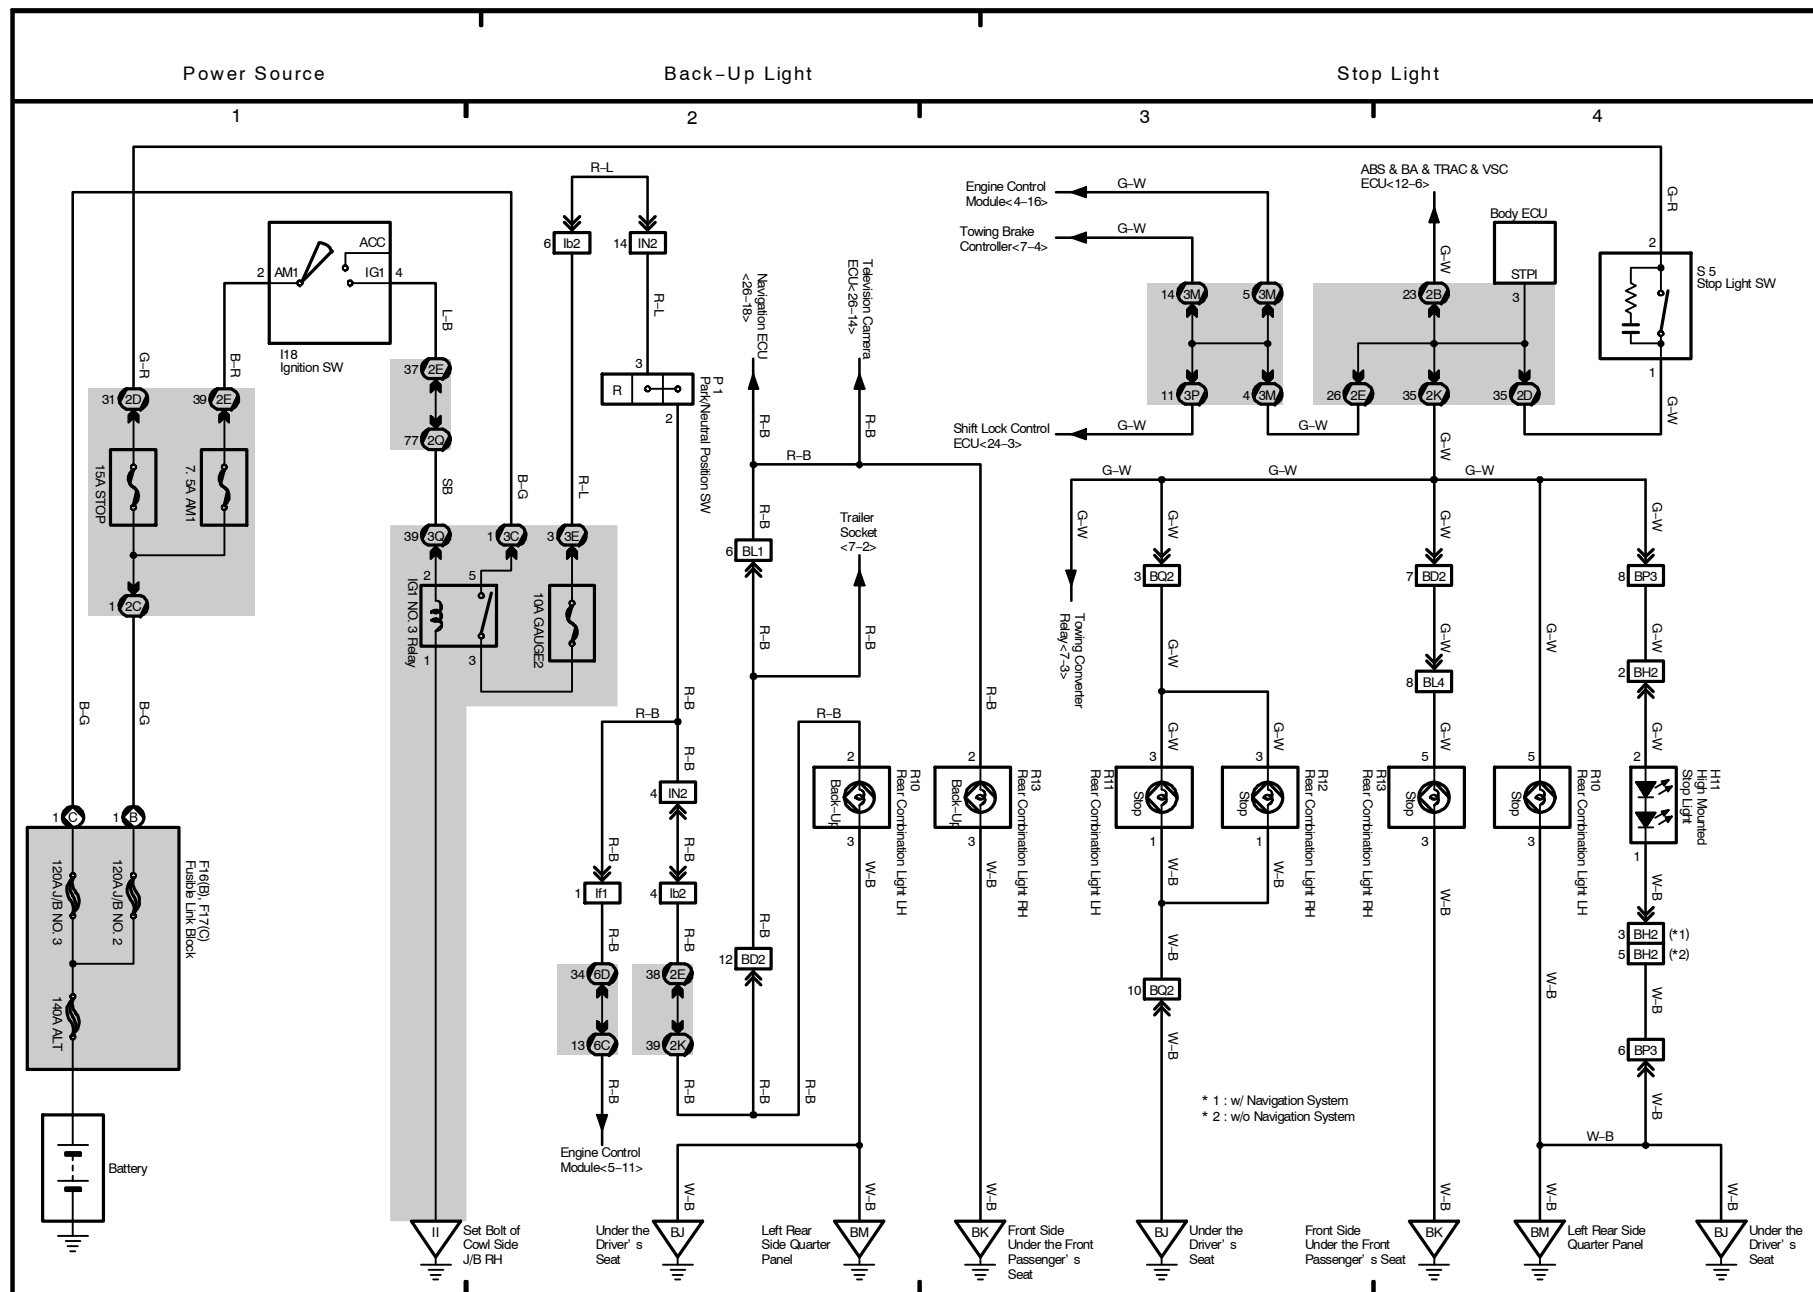



11 LAND CRUISER

2004 LAND CRUISER (EWD548U)

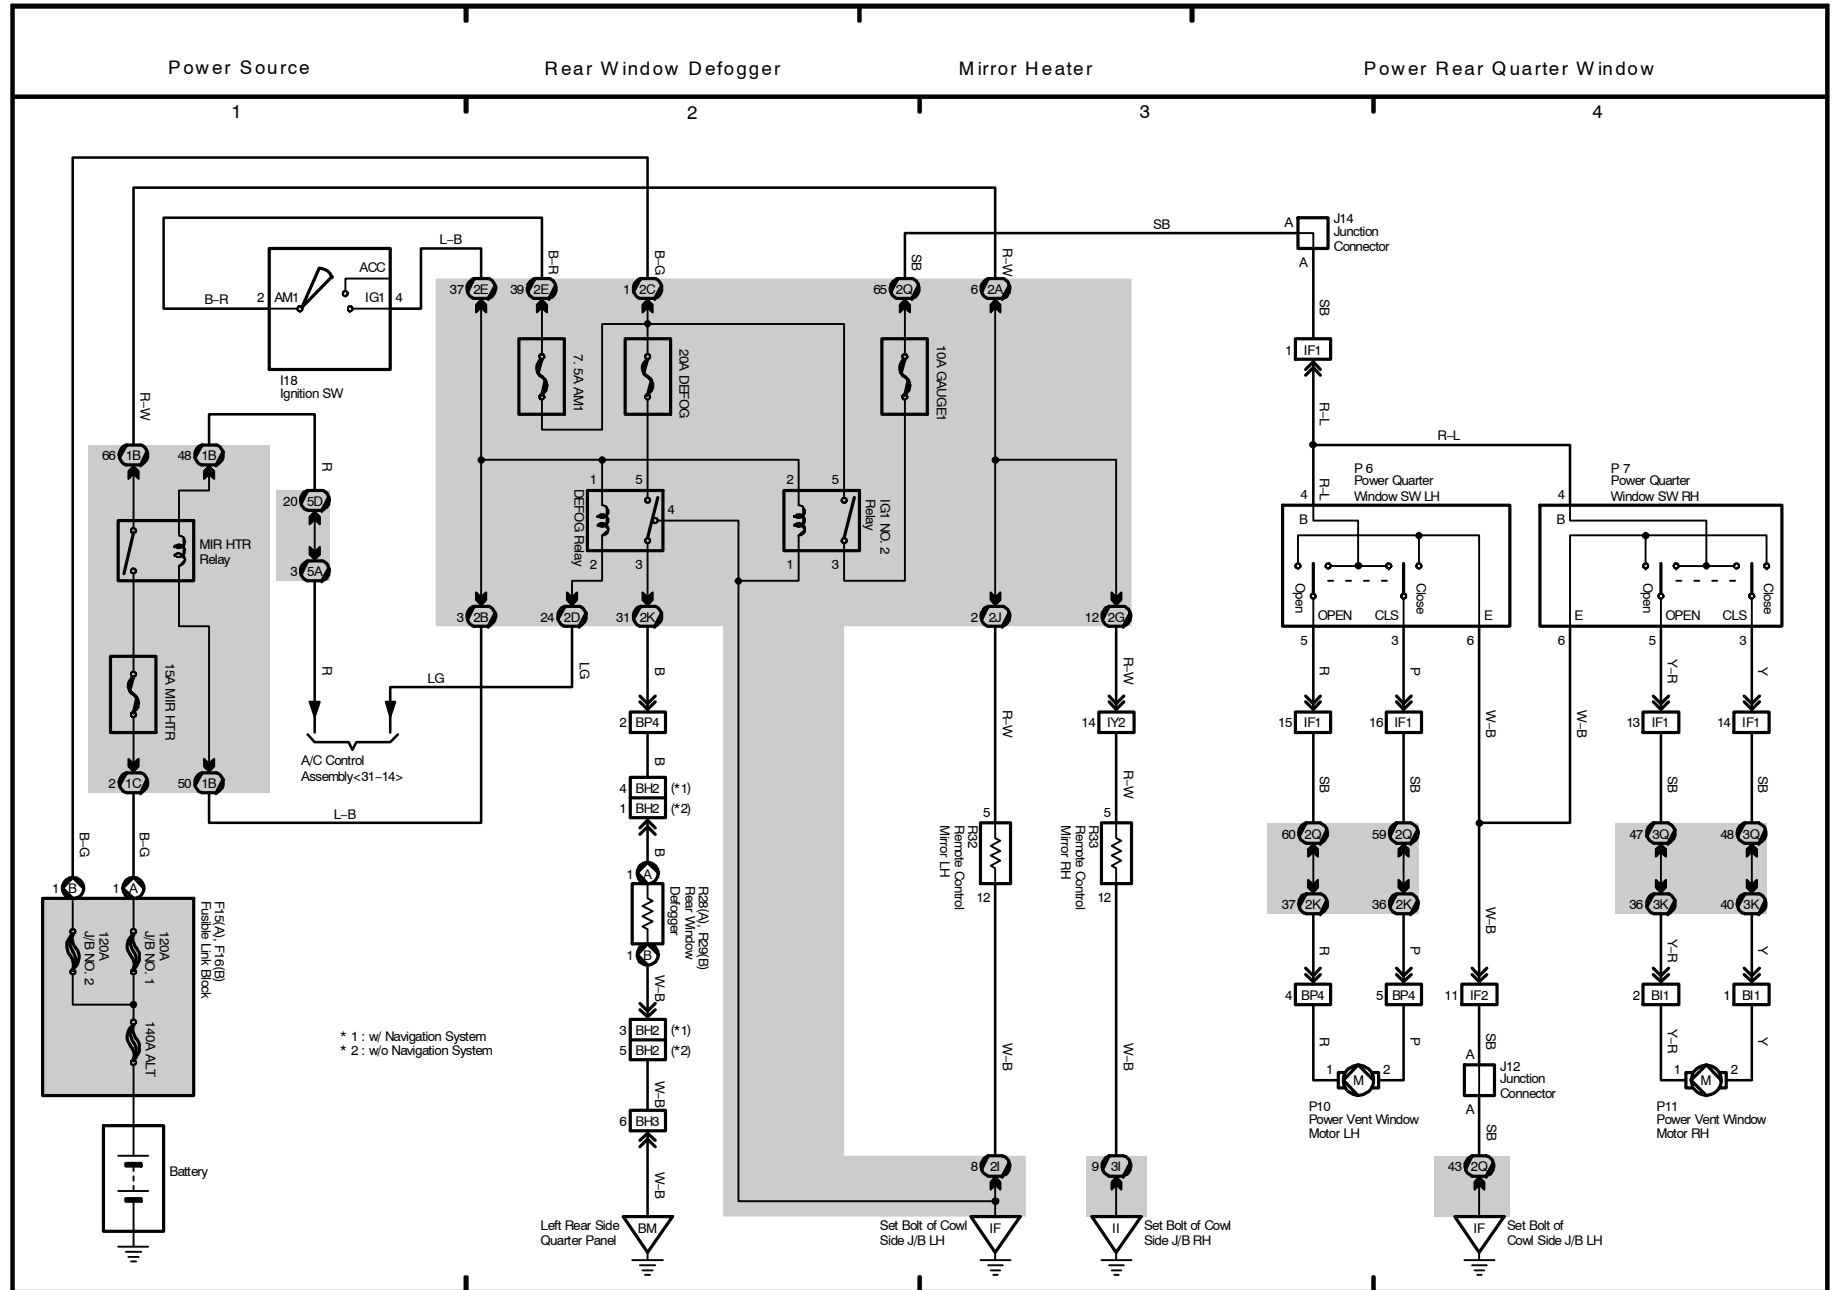


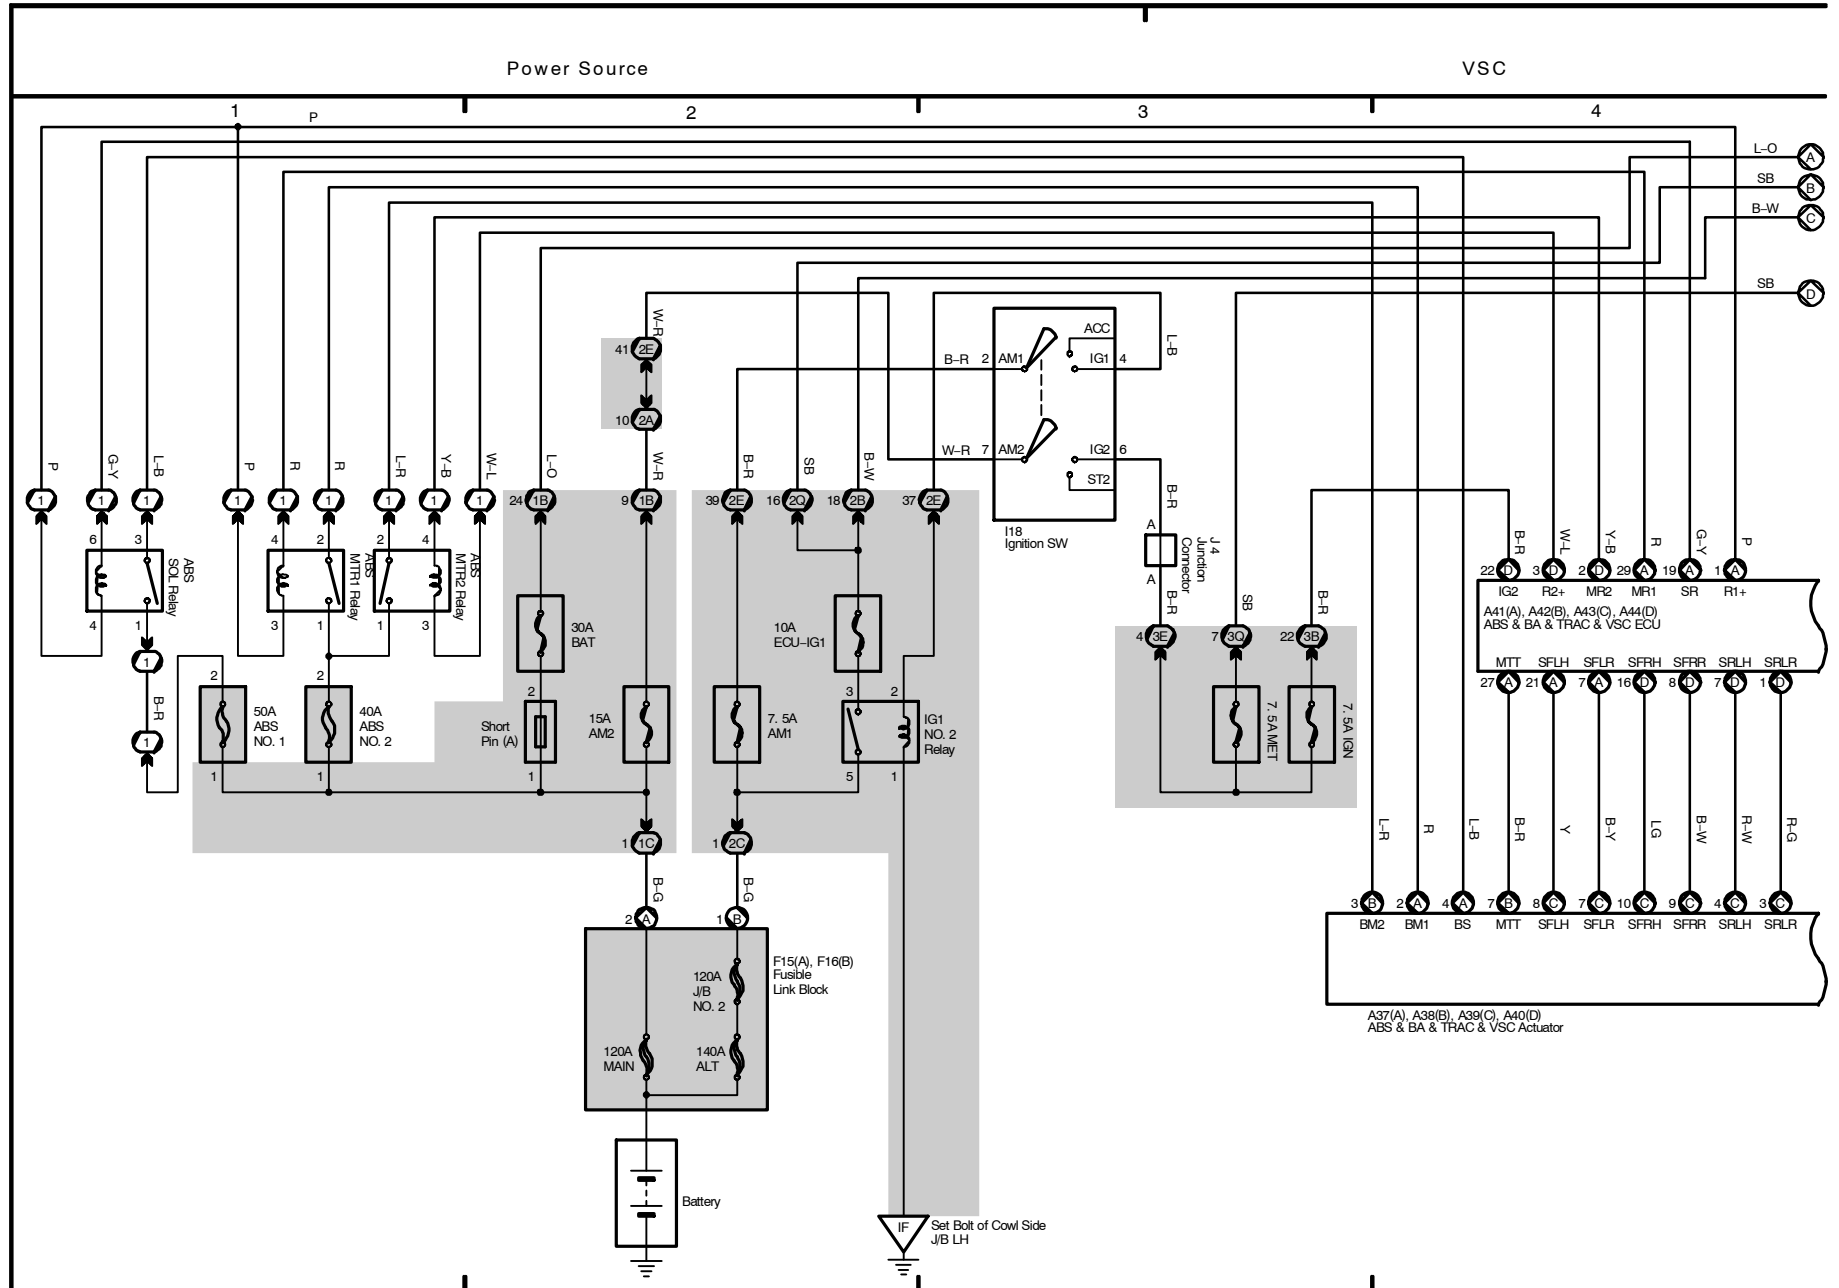

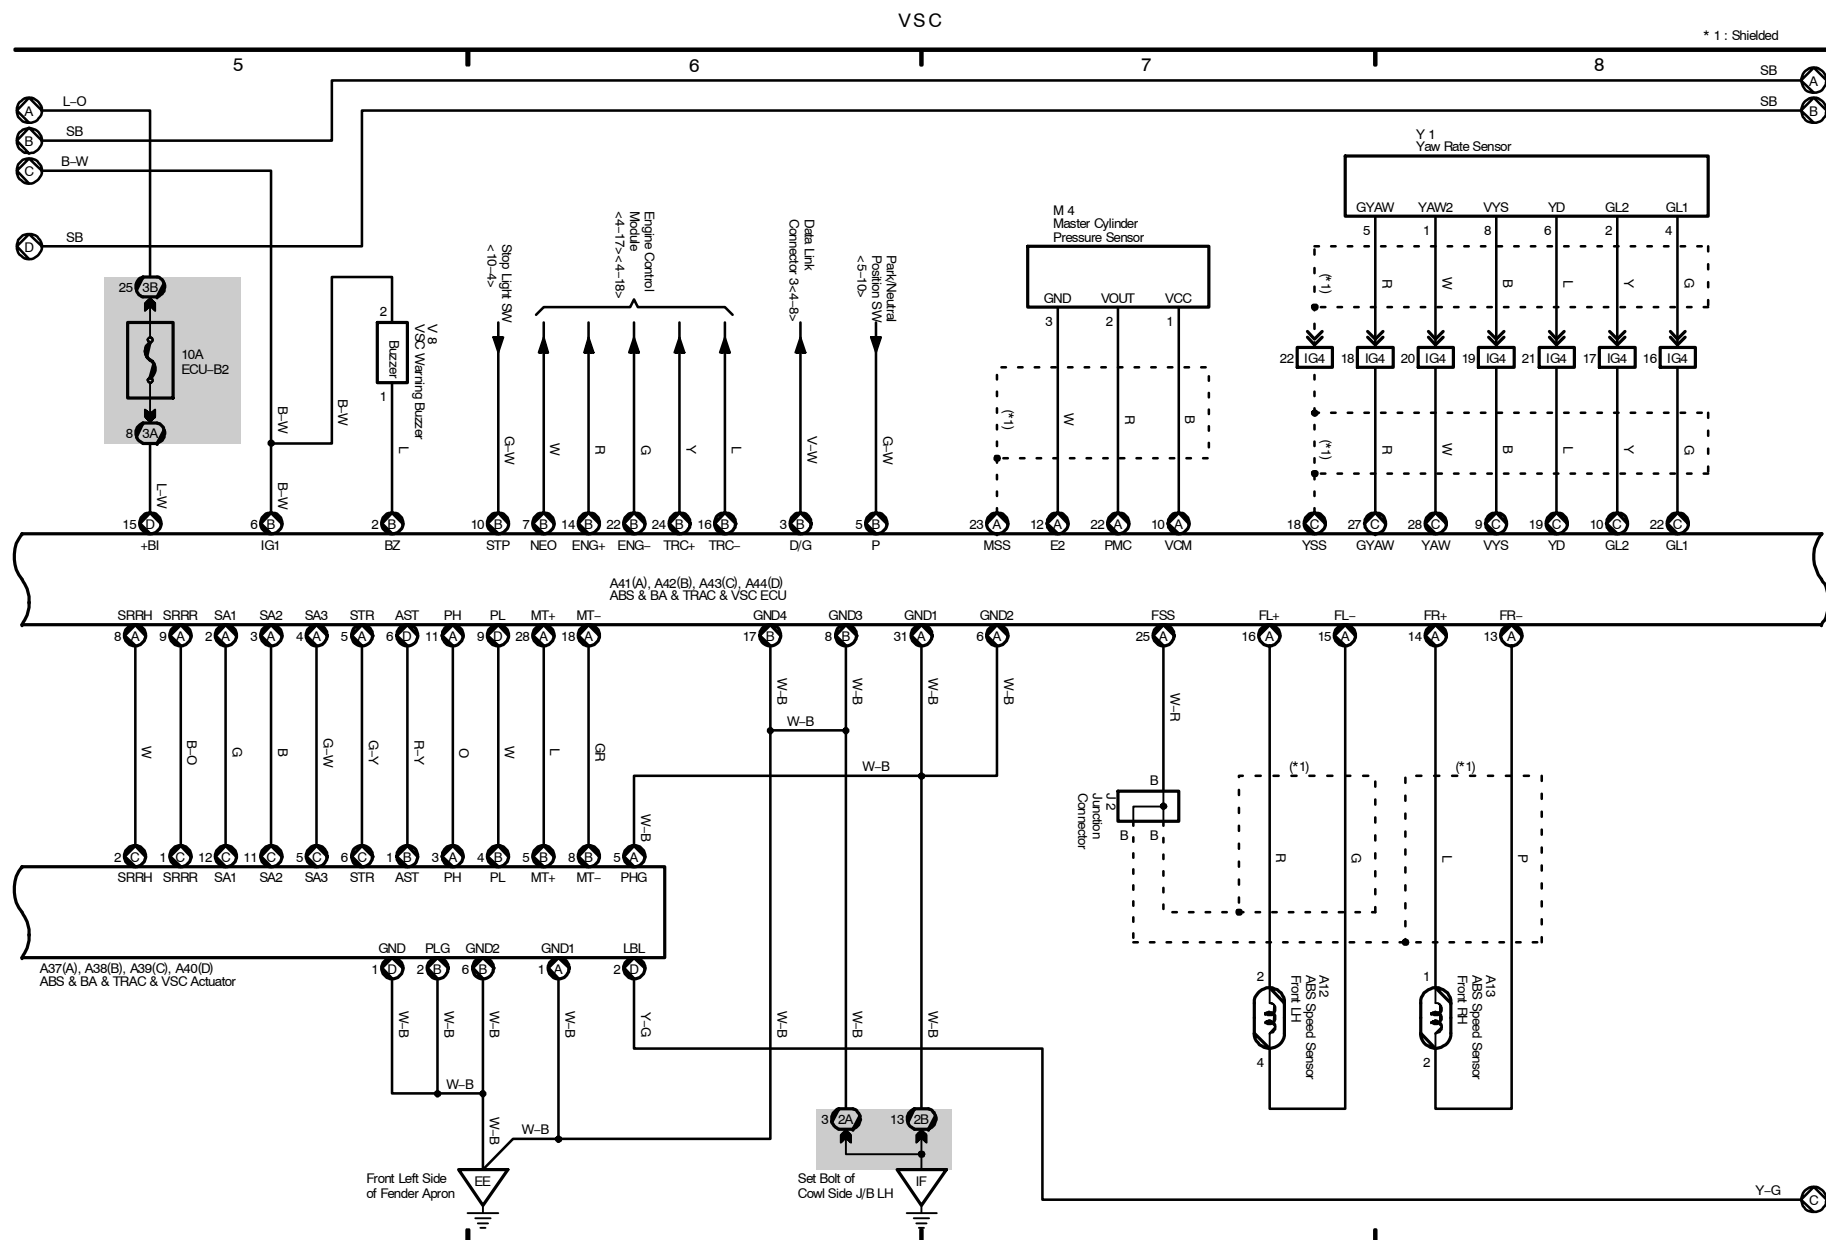


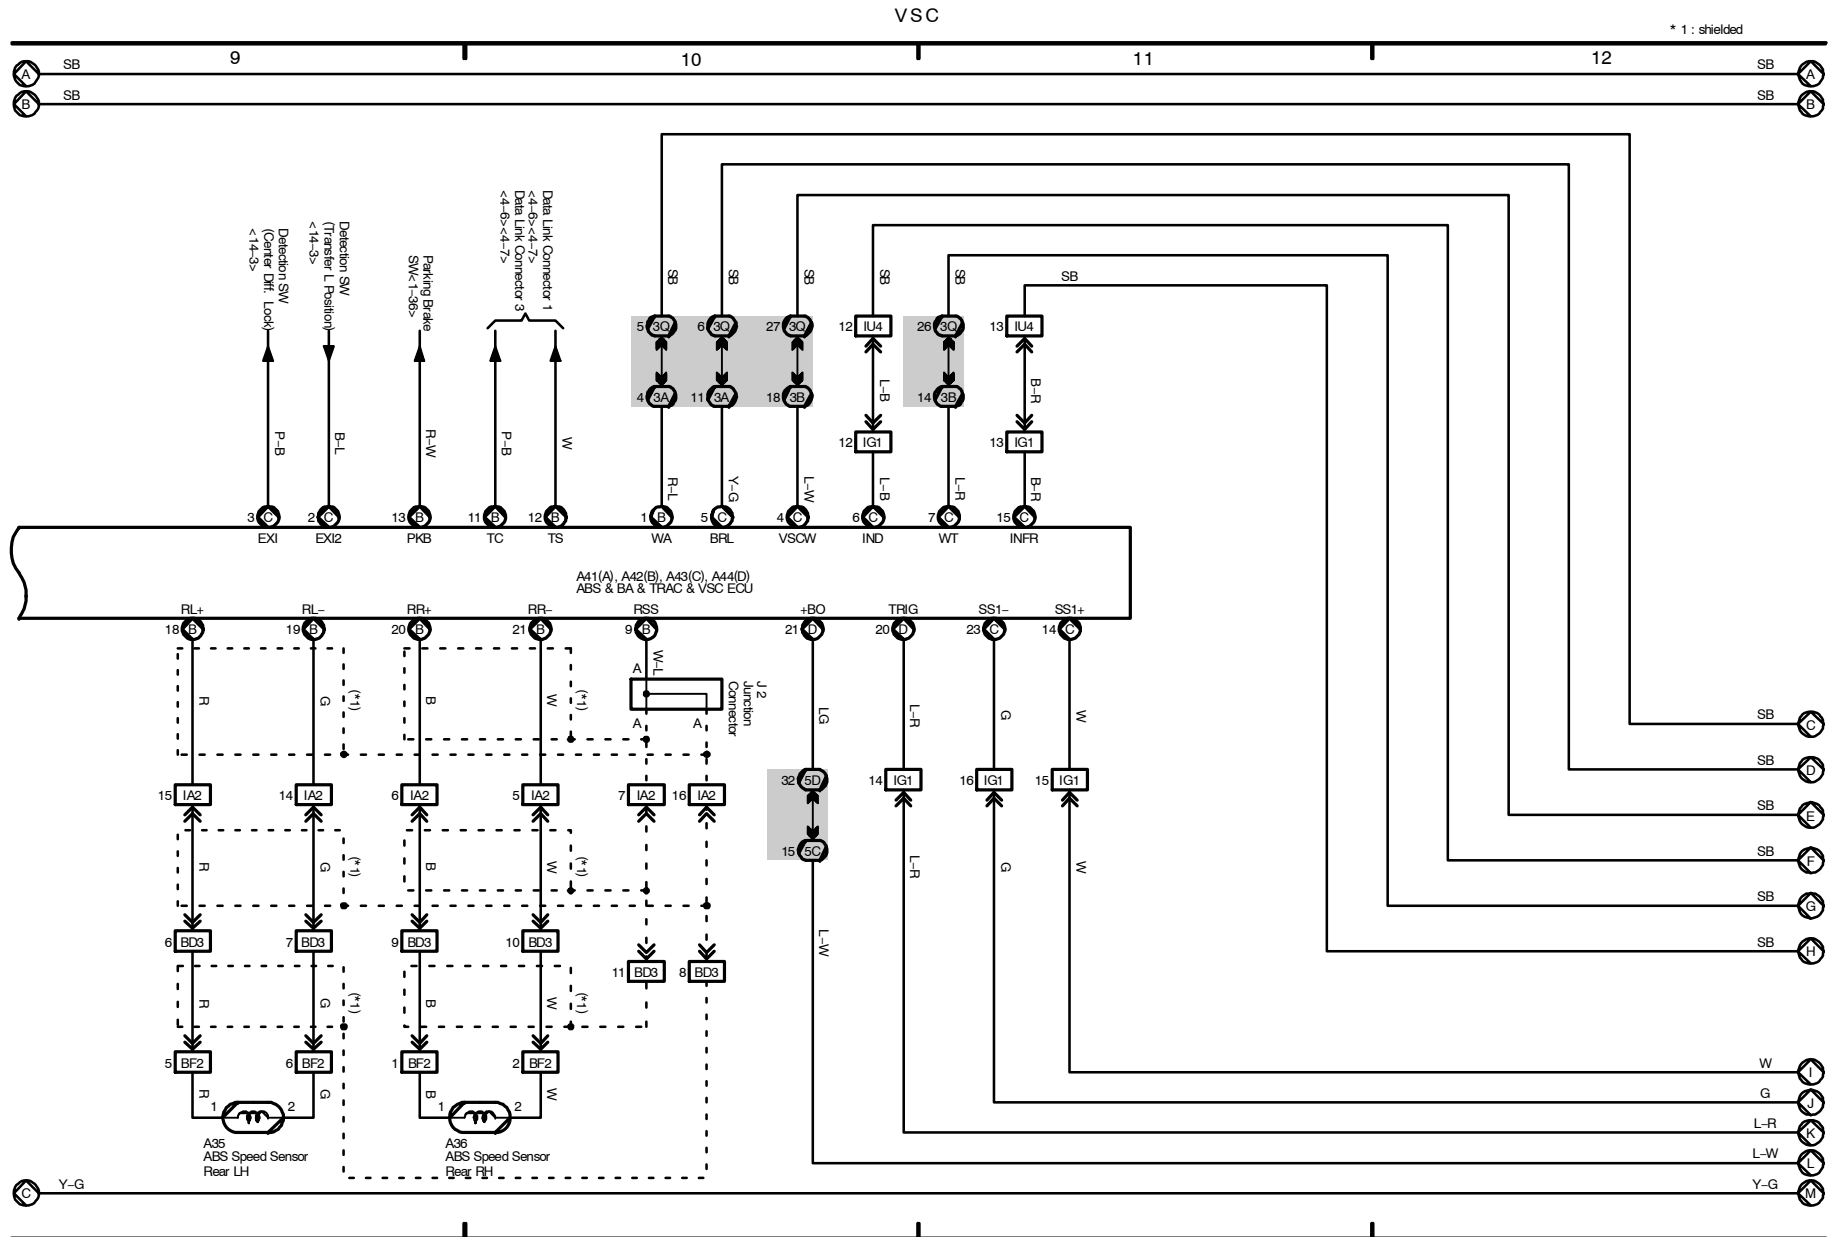

VSC

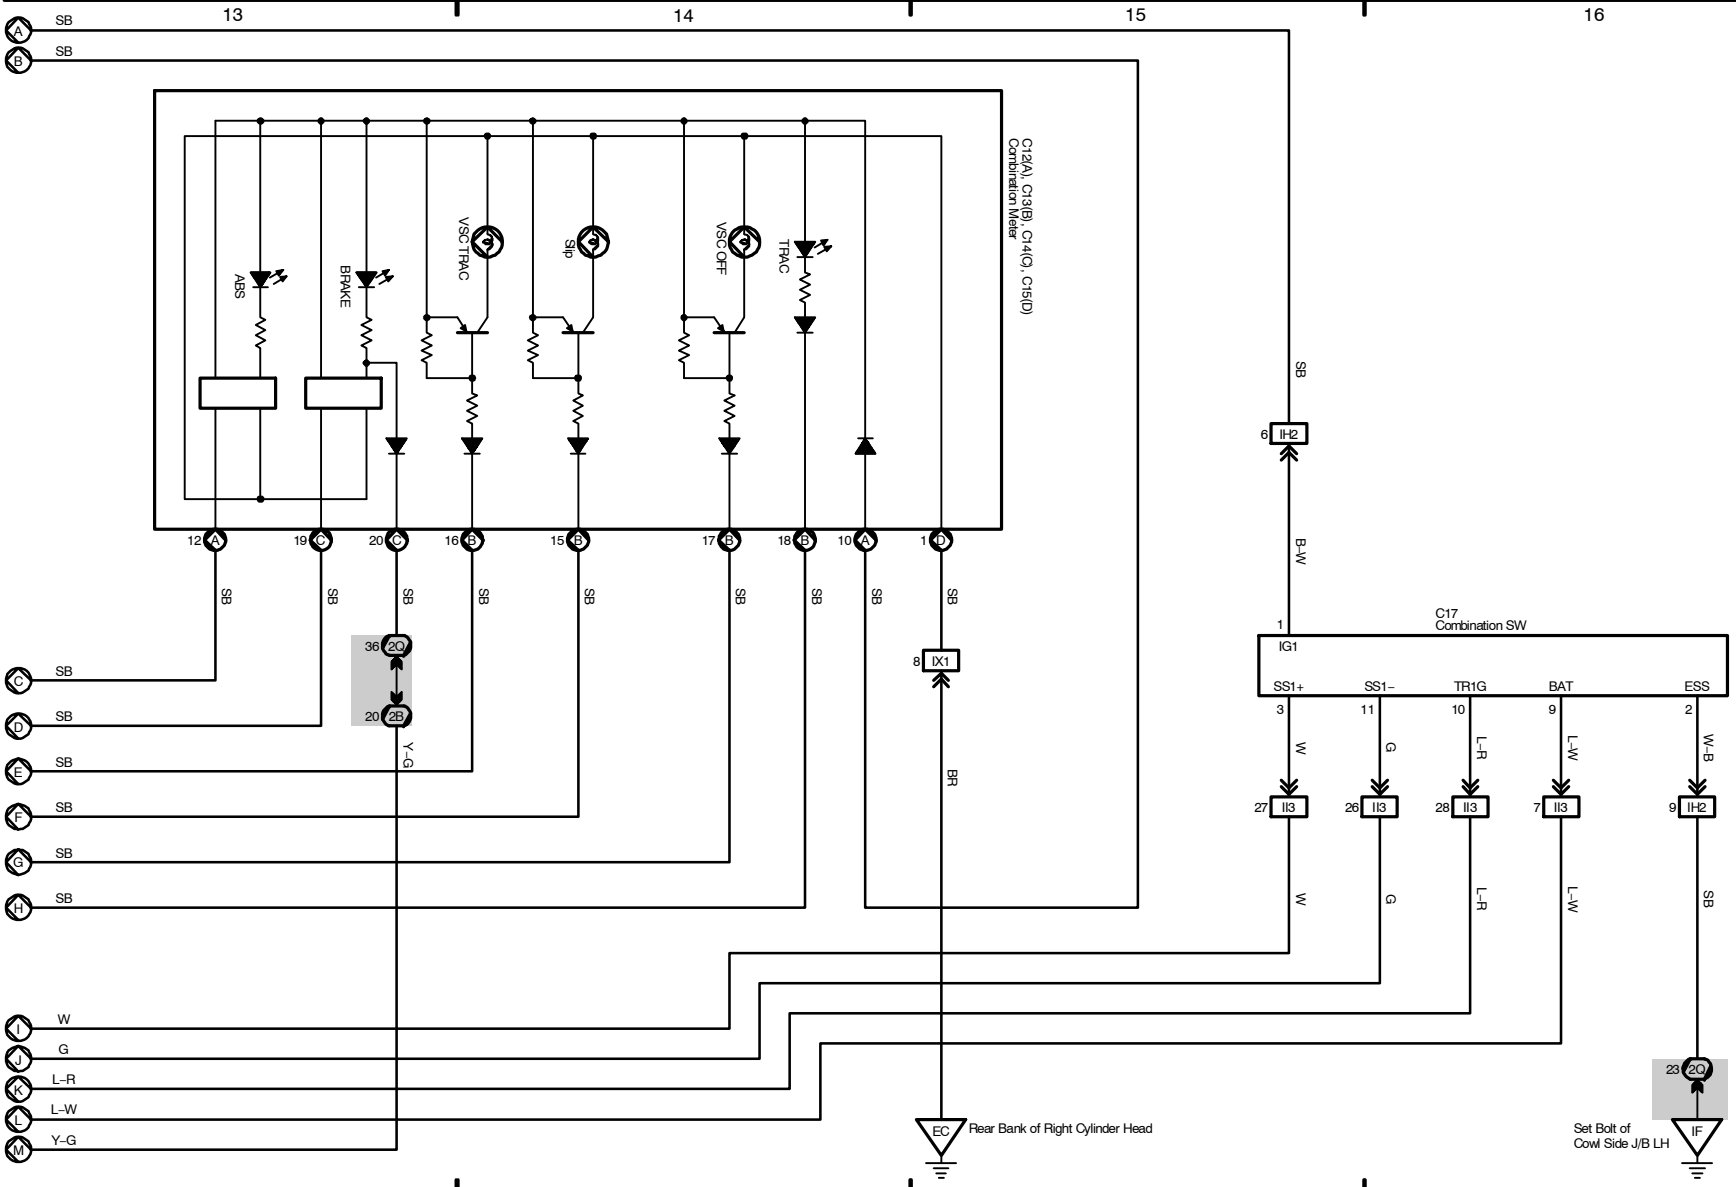


2004 LAND CRUISER (EWD548U)

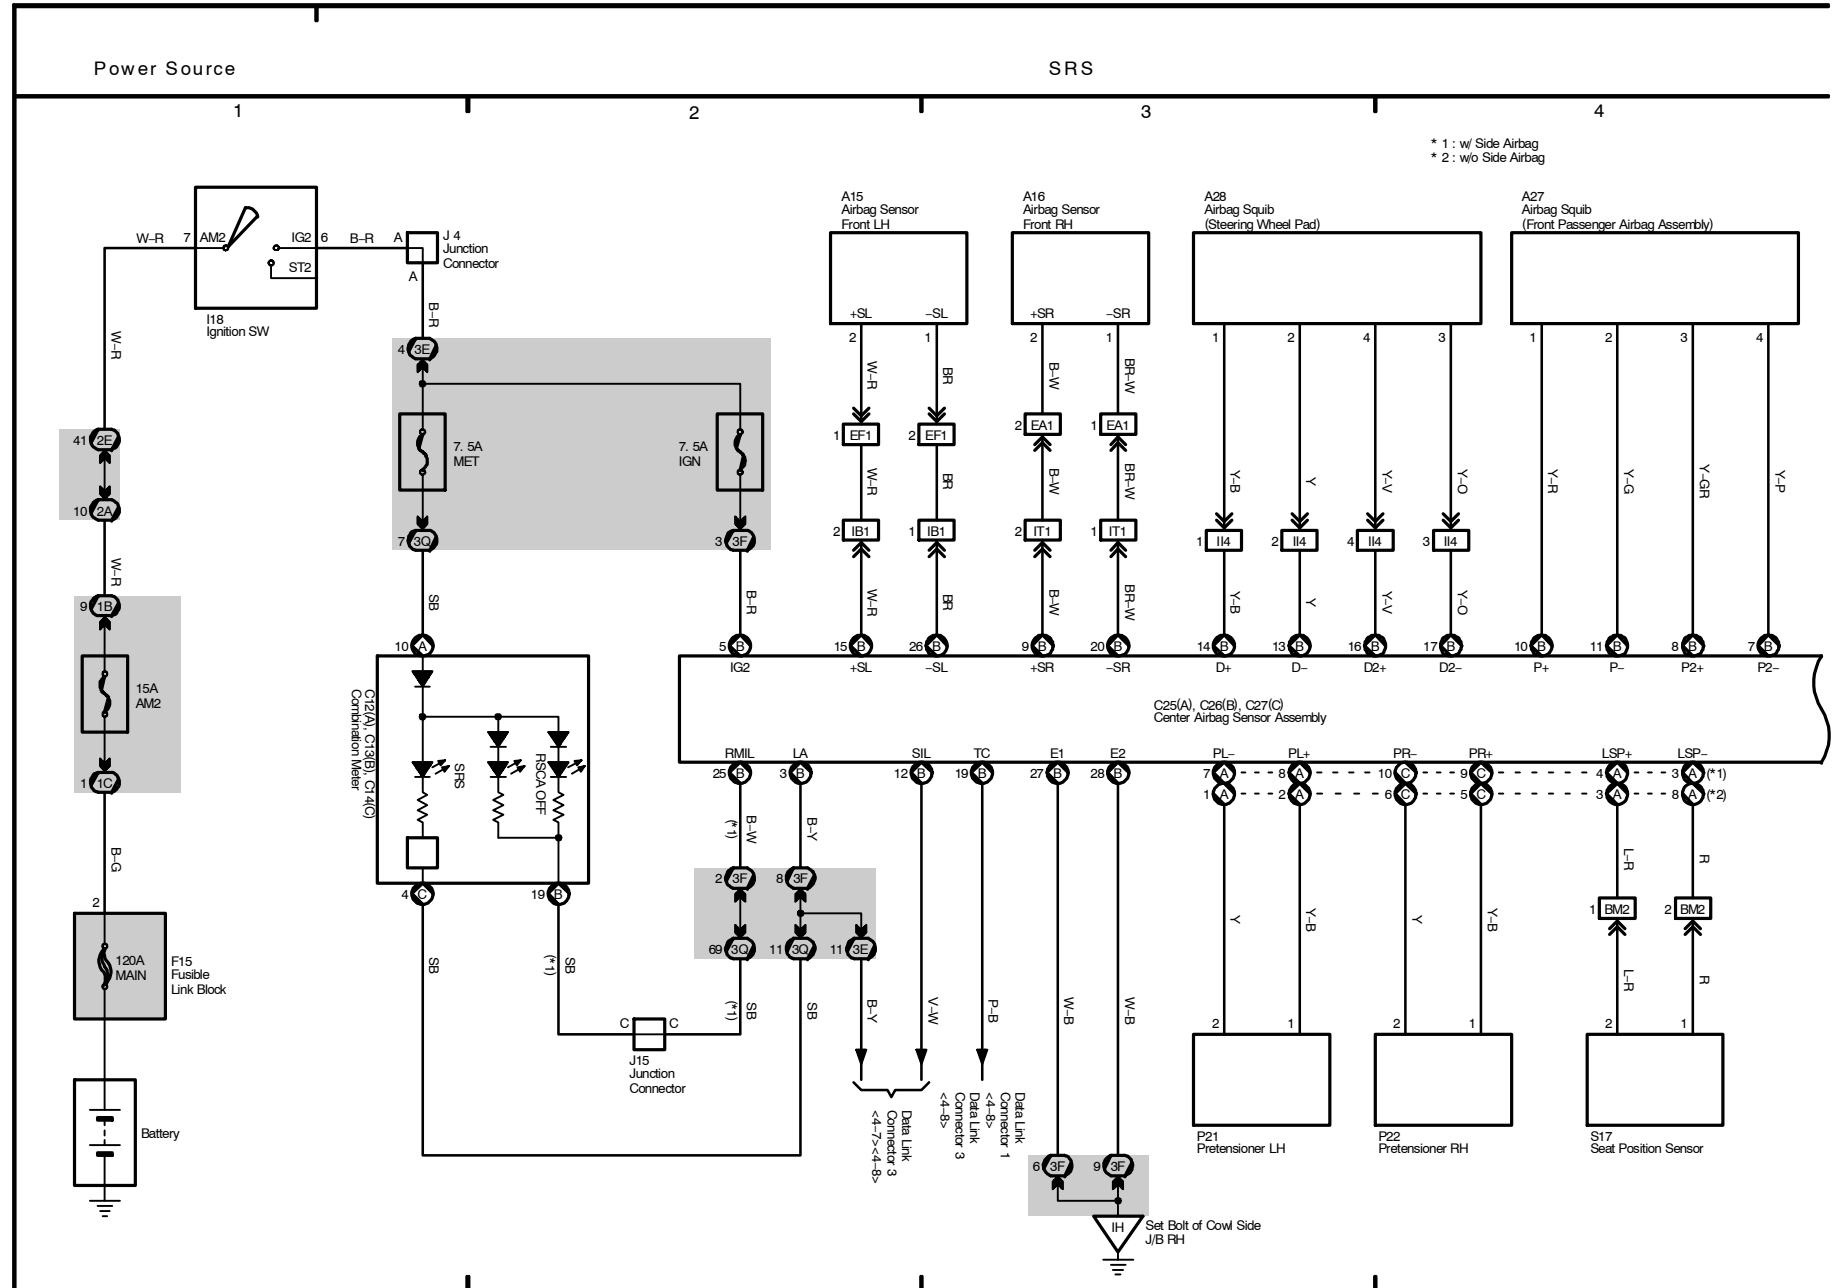


13 LAND CRUISER (Cont' d)


SRS

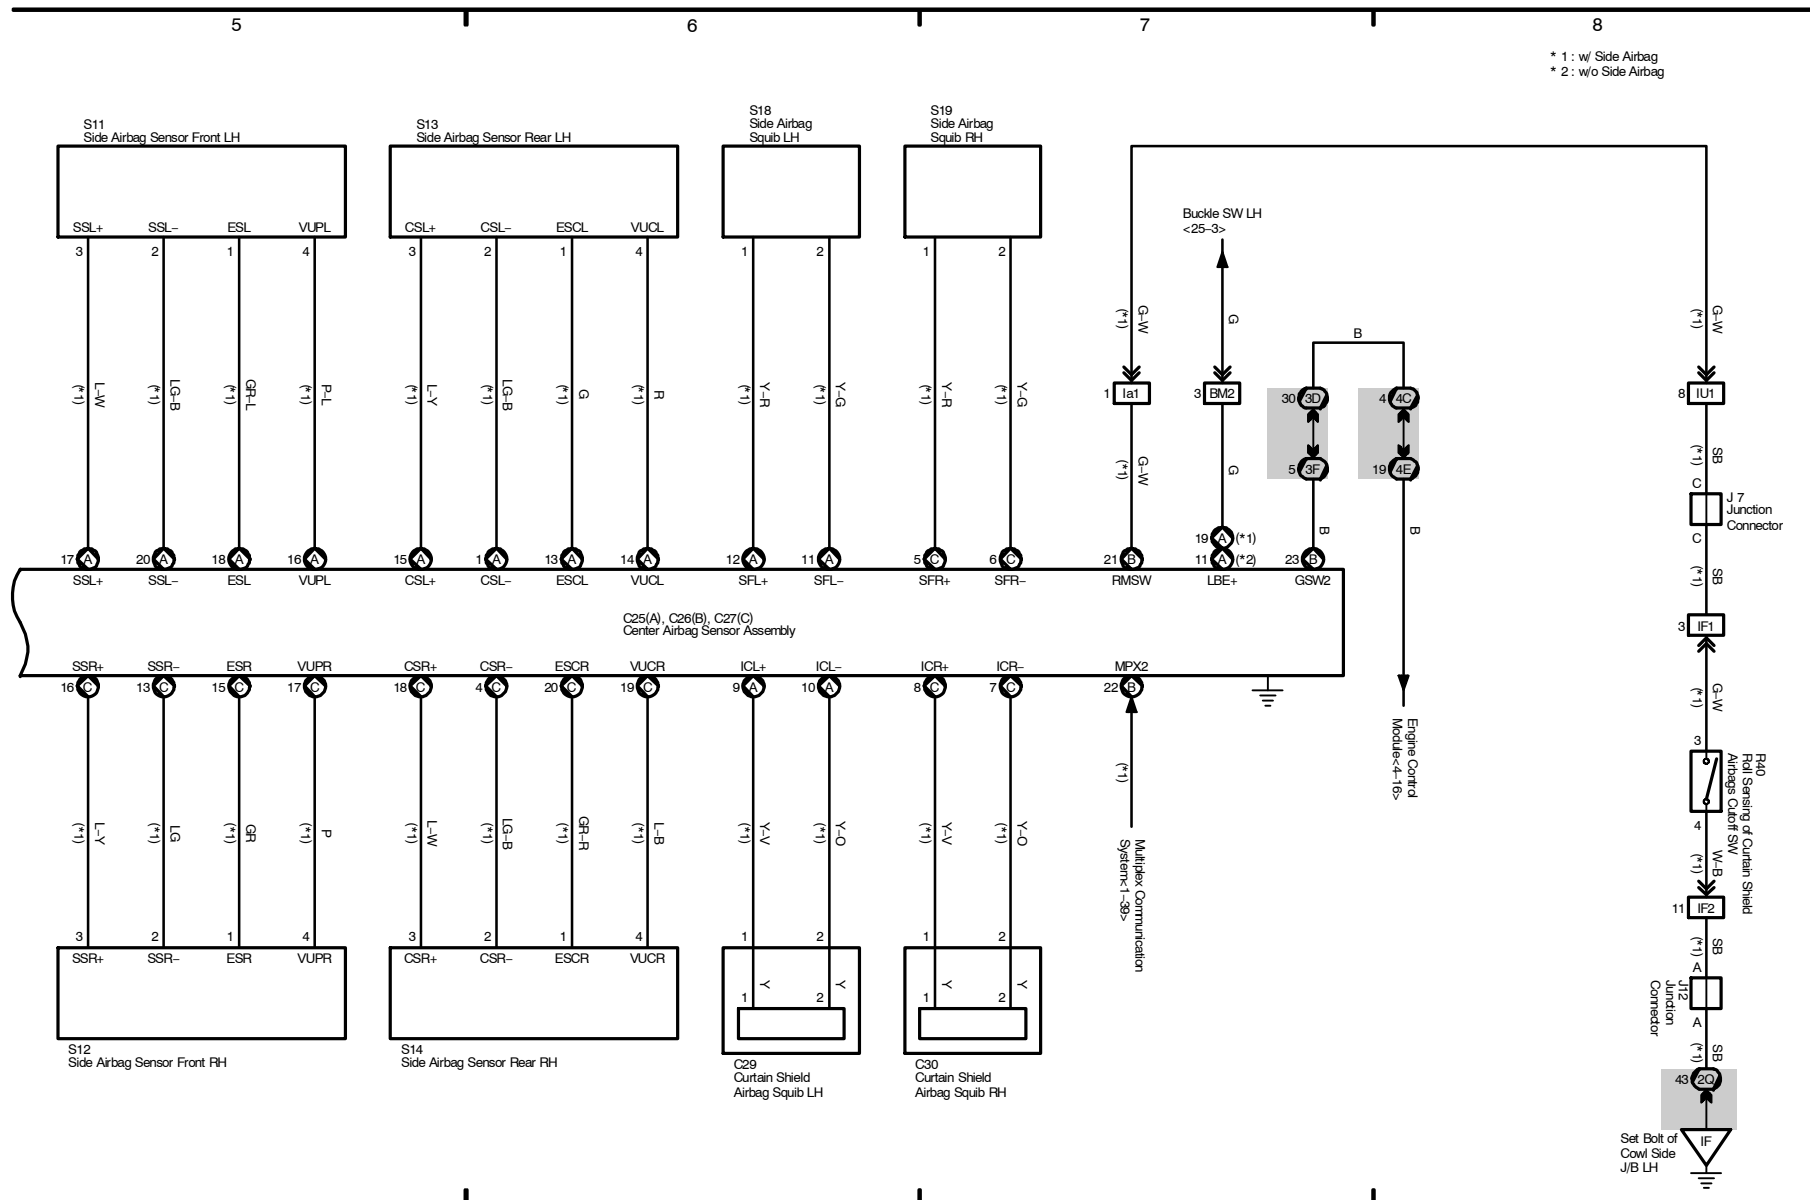

2004 LAND CRUISER (EWD548U)

 

15 LAND CRUISER

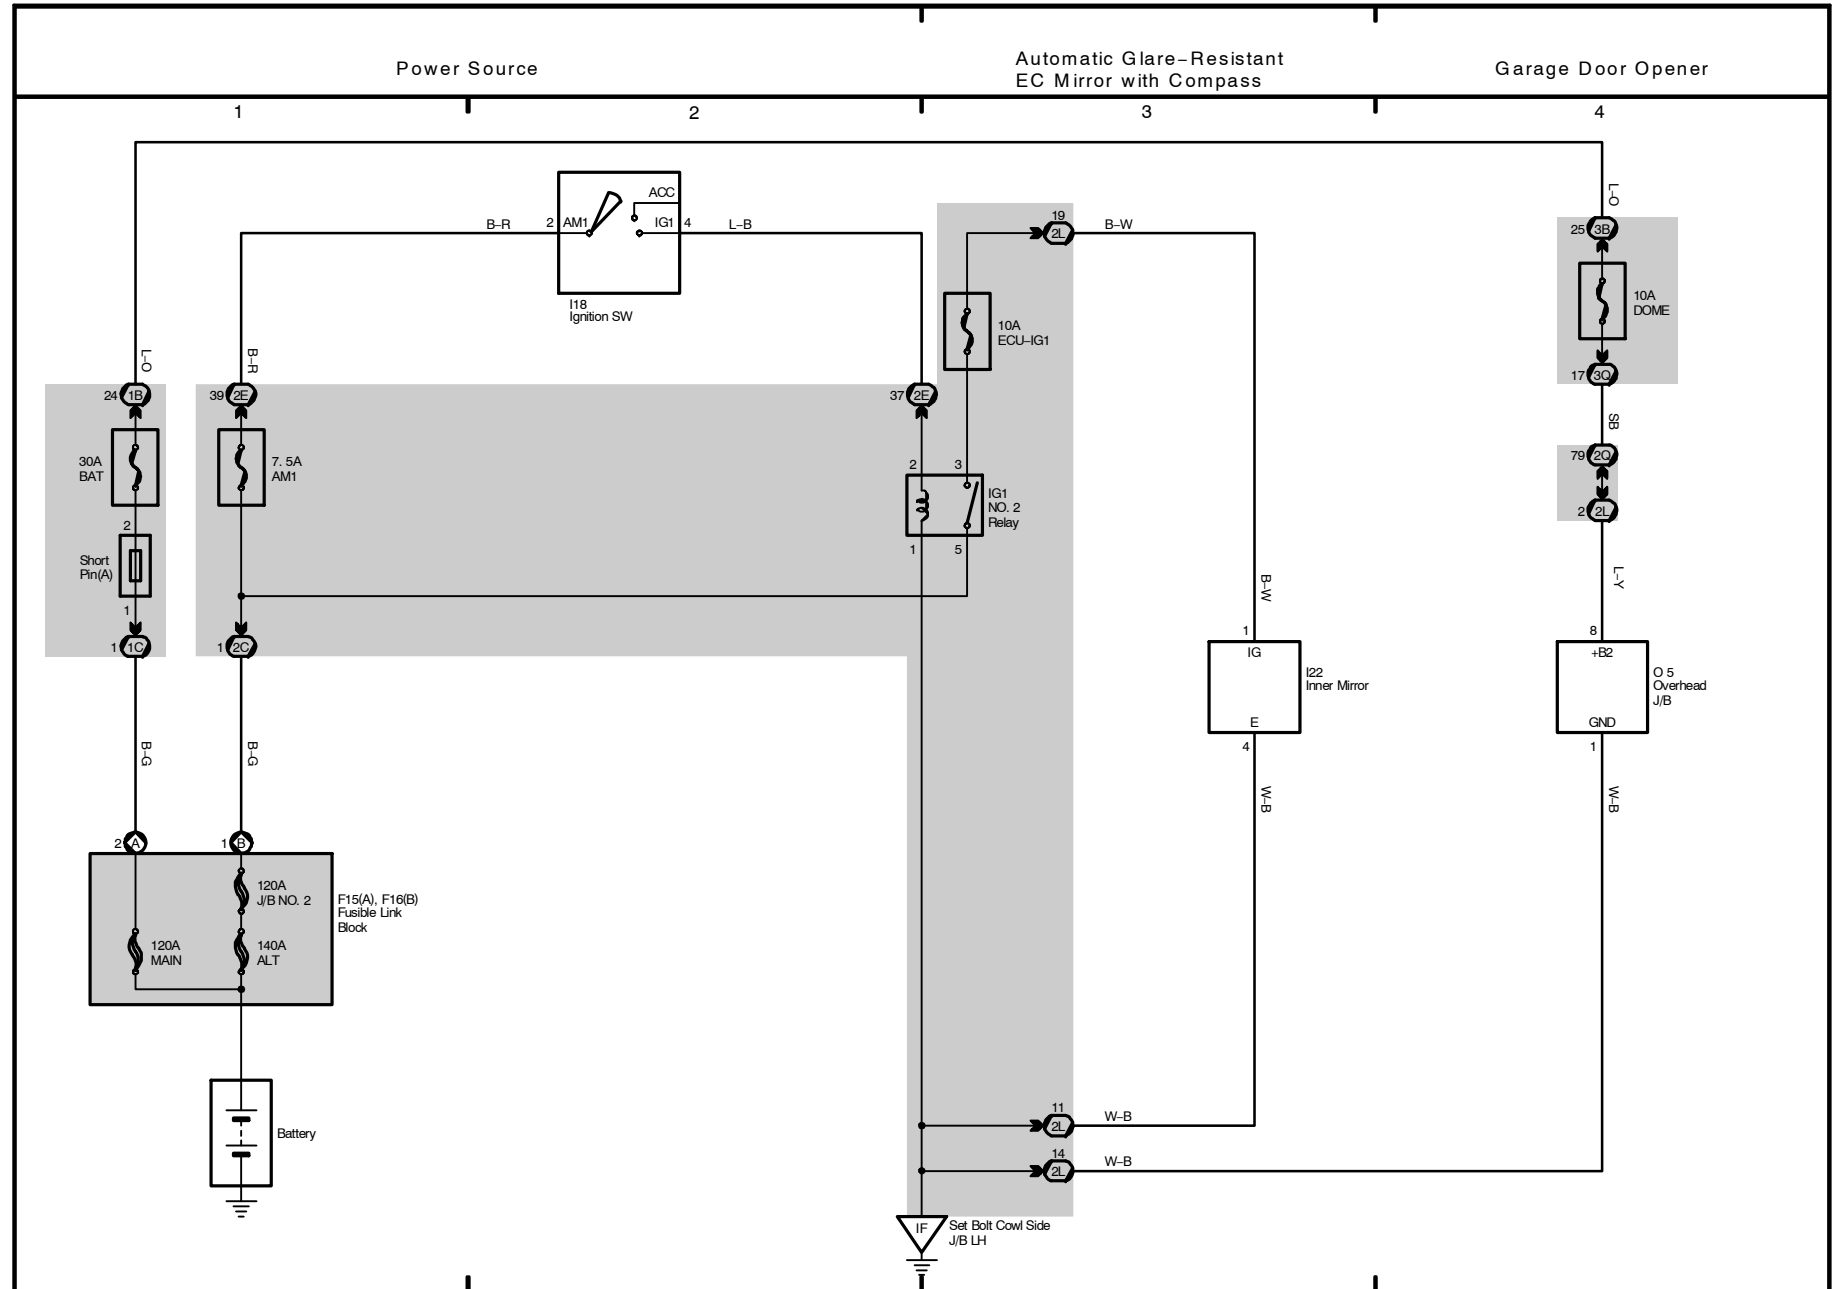


2004 LAND CRUISER (EWD548U)

M OVERALL ELECTRICAL WIRING DIAGRAM


16 LAND CRUISER

2004 LAND CRUISER (EWD548U)

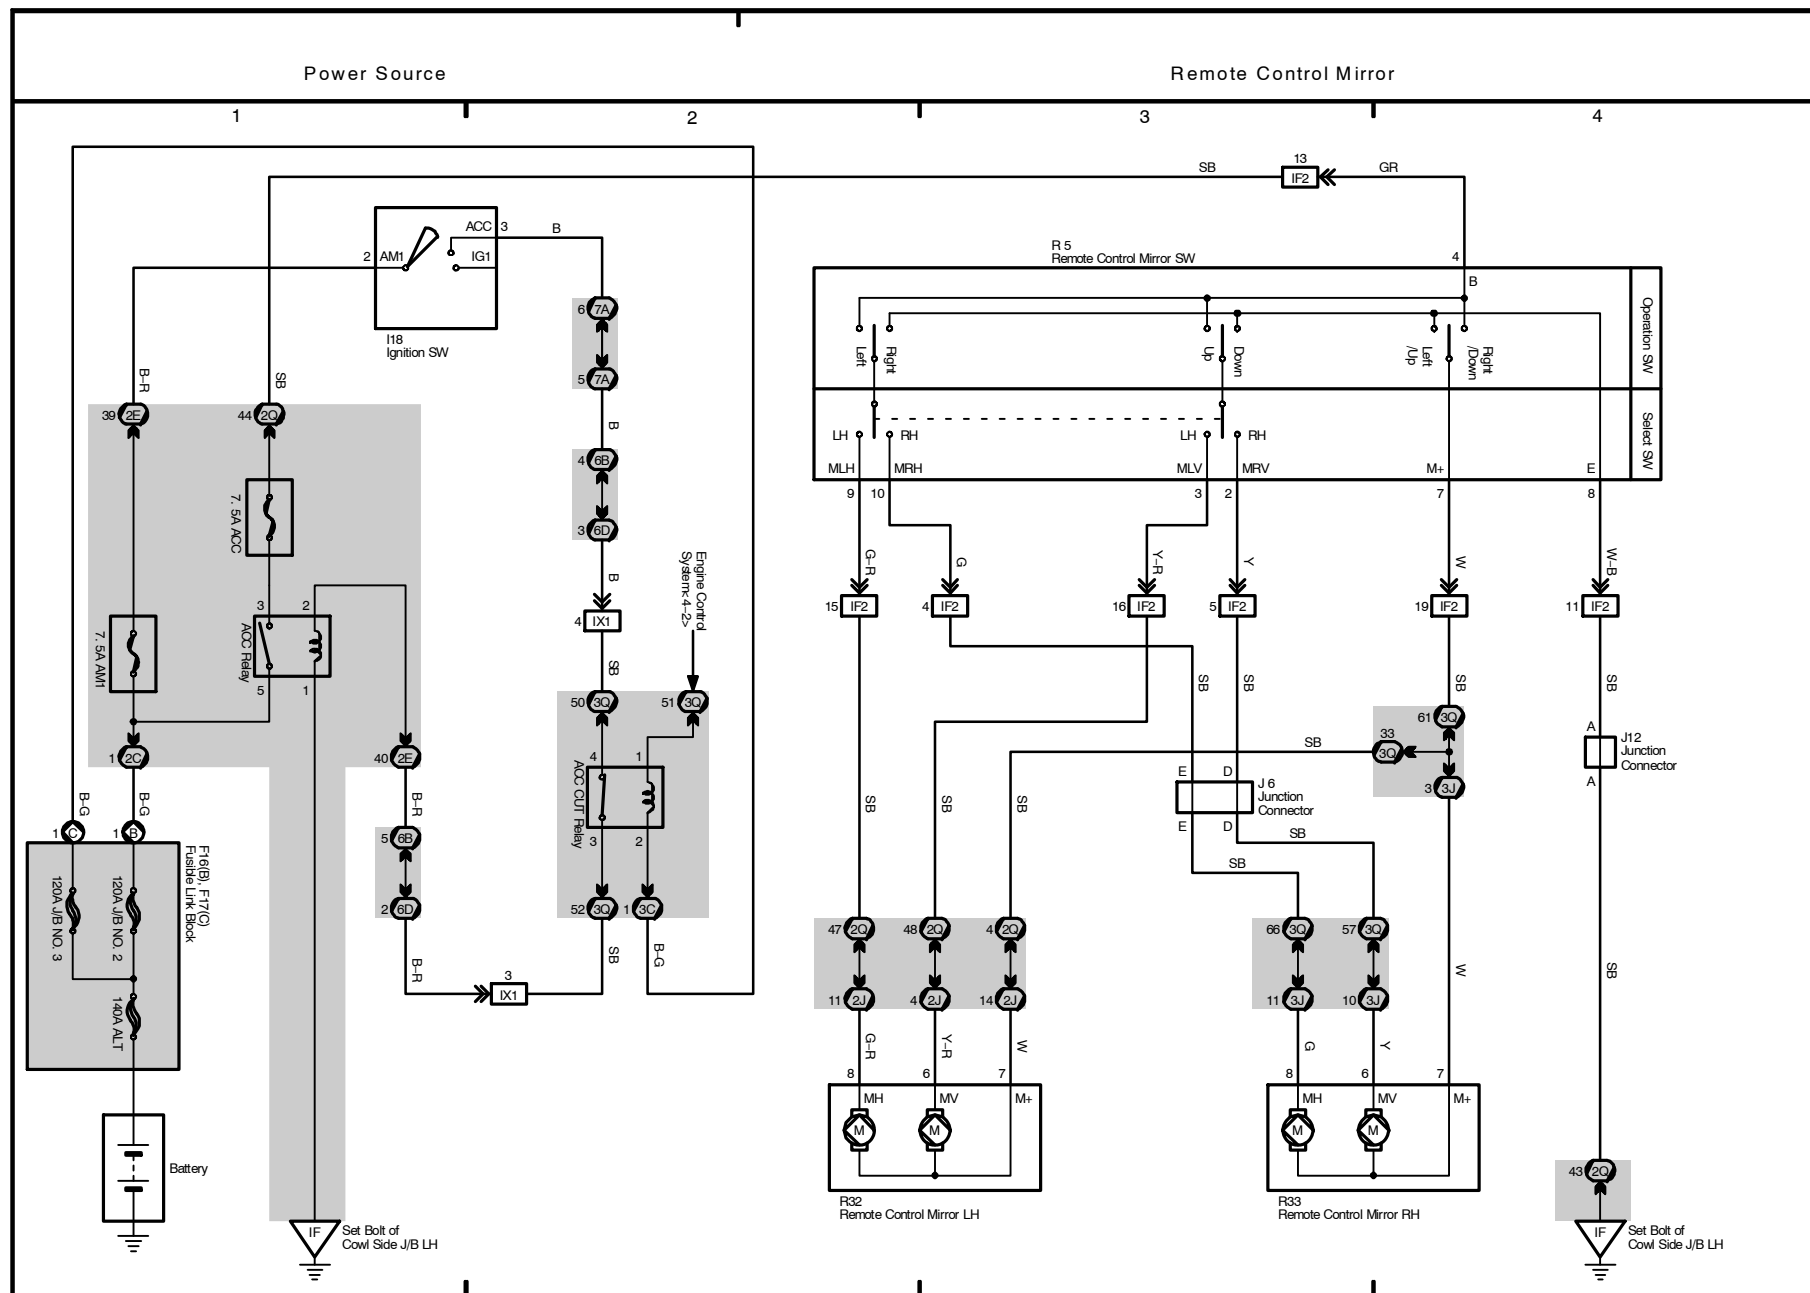


17 LAND CRUISER

2004 LAND CRUISER (EWD548U)

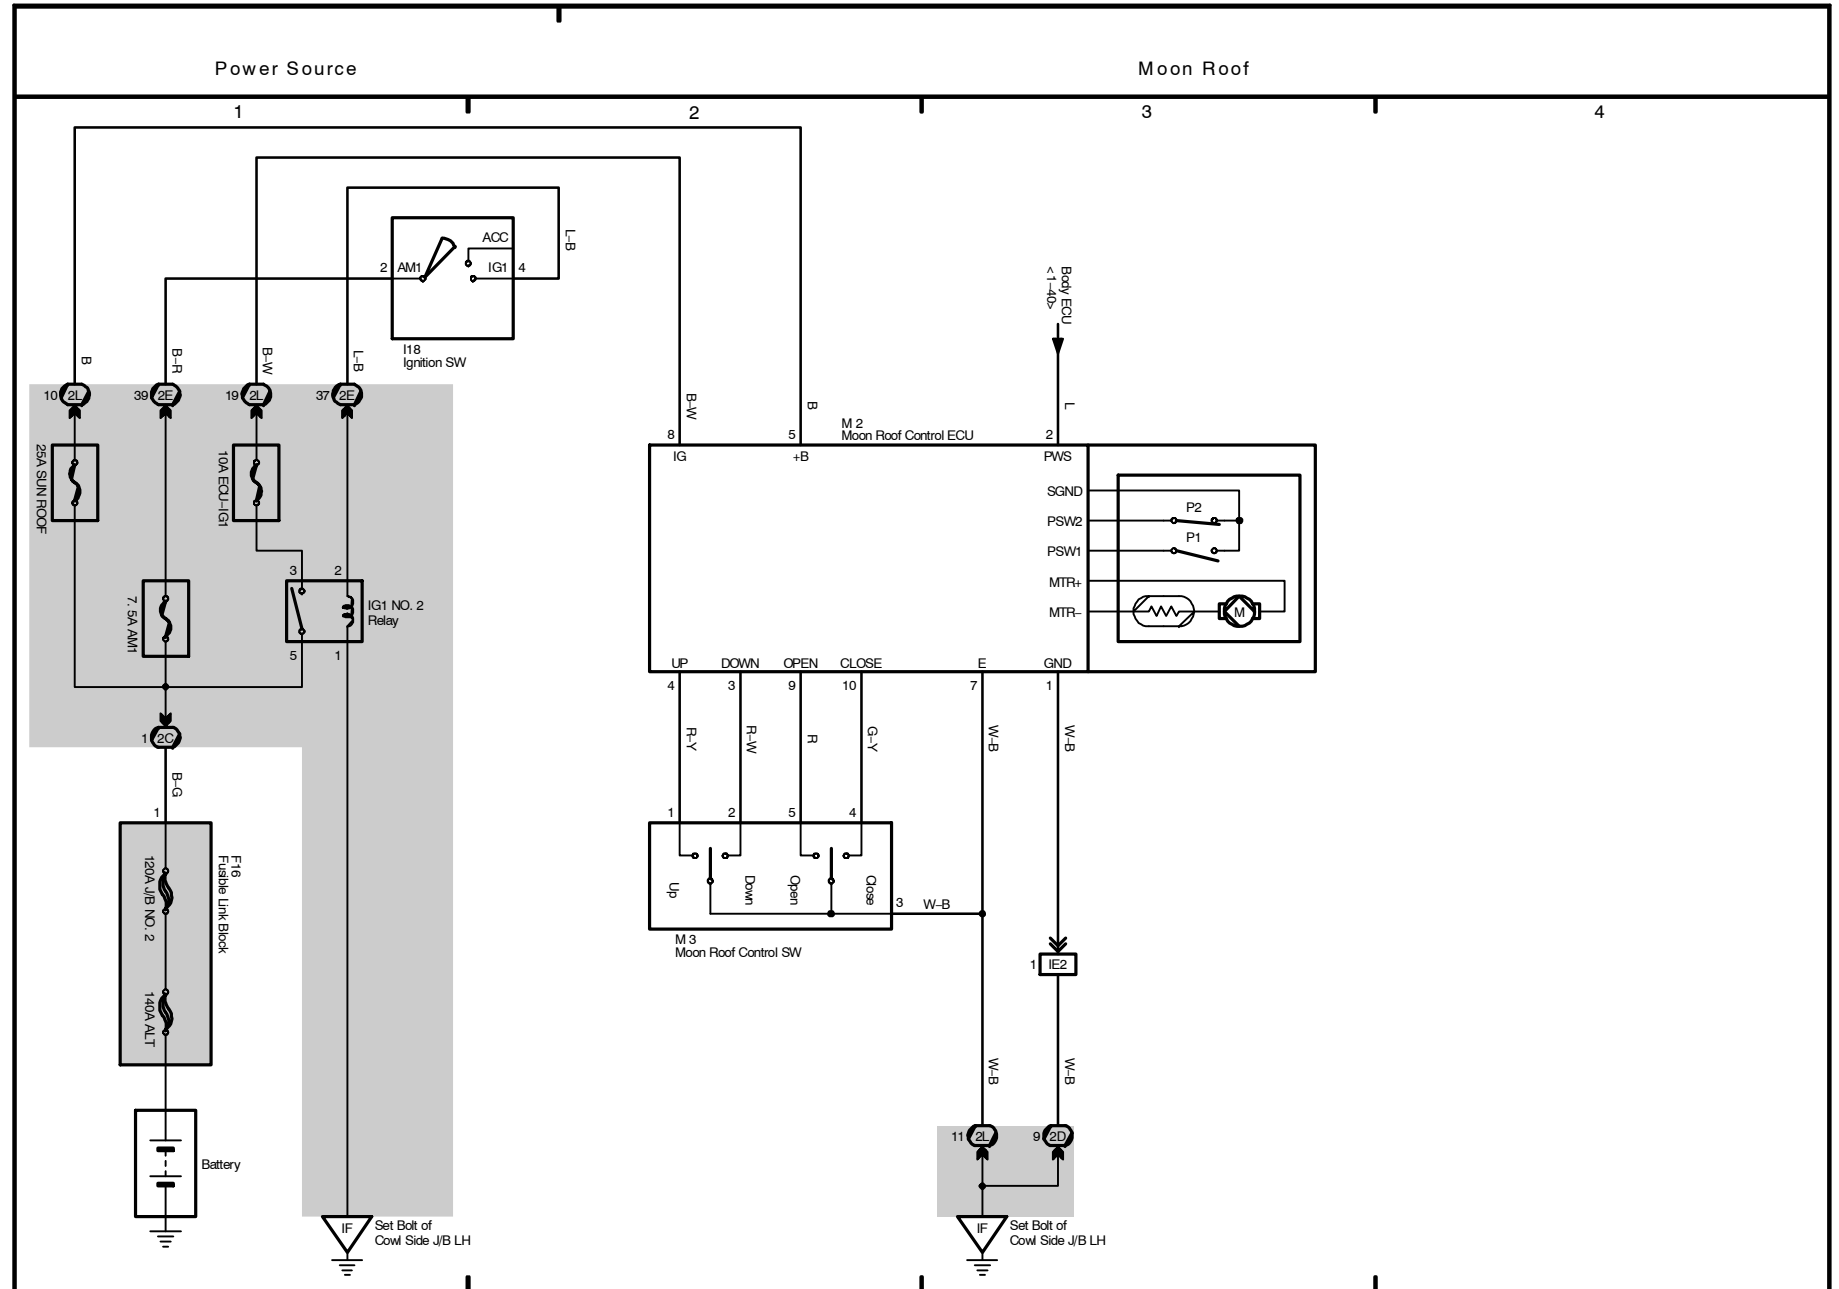

M OVERALL ELECTRICAL WIRING DIAGRAM


18 LAND CRUISER

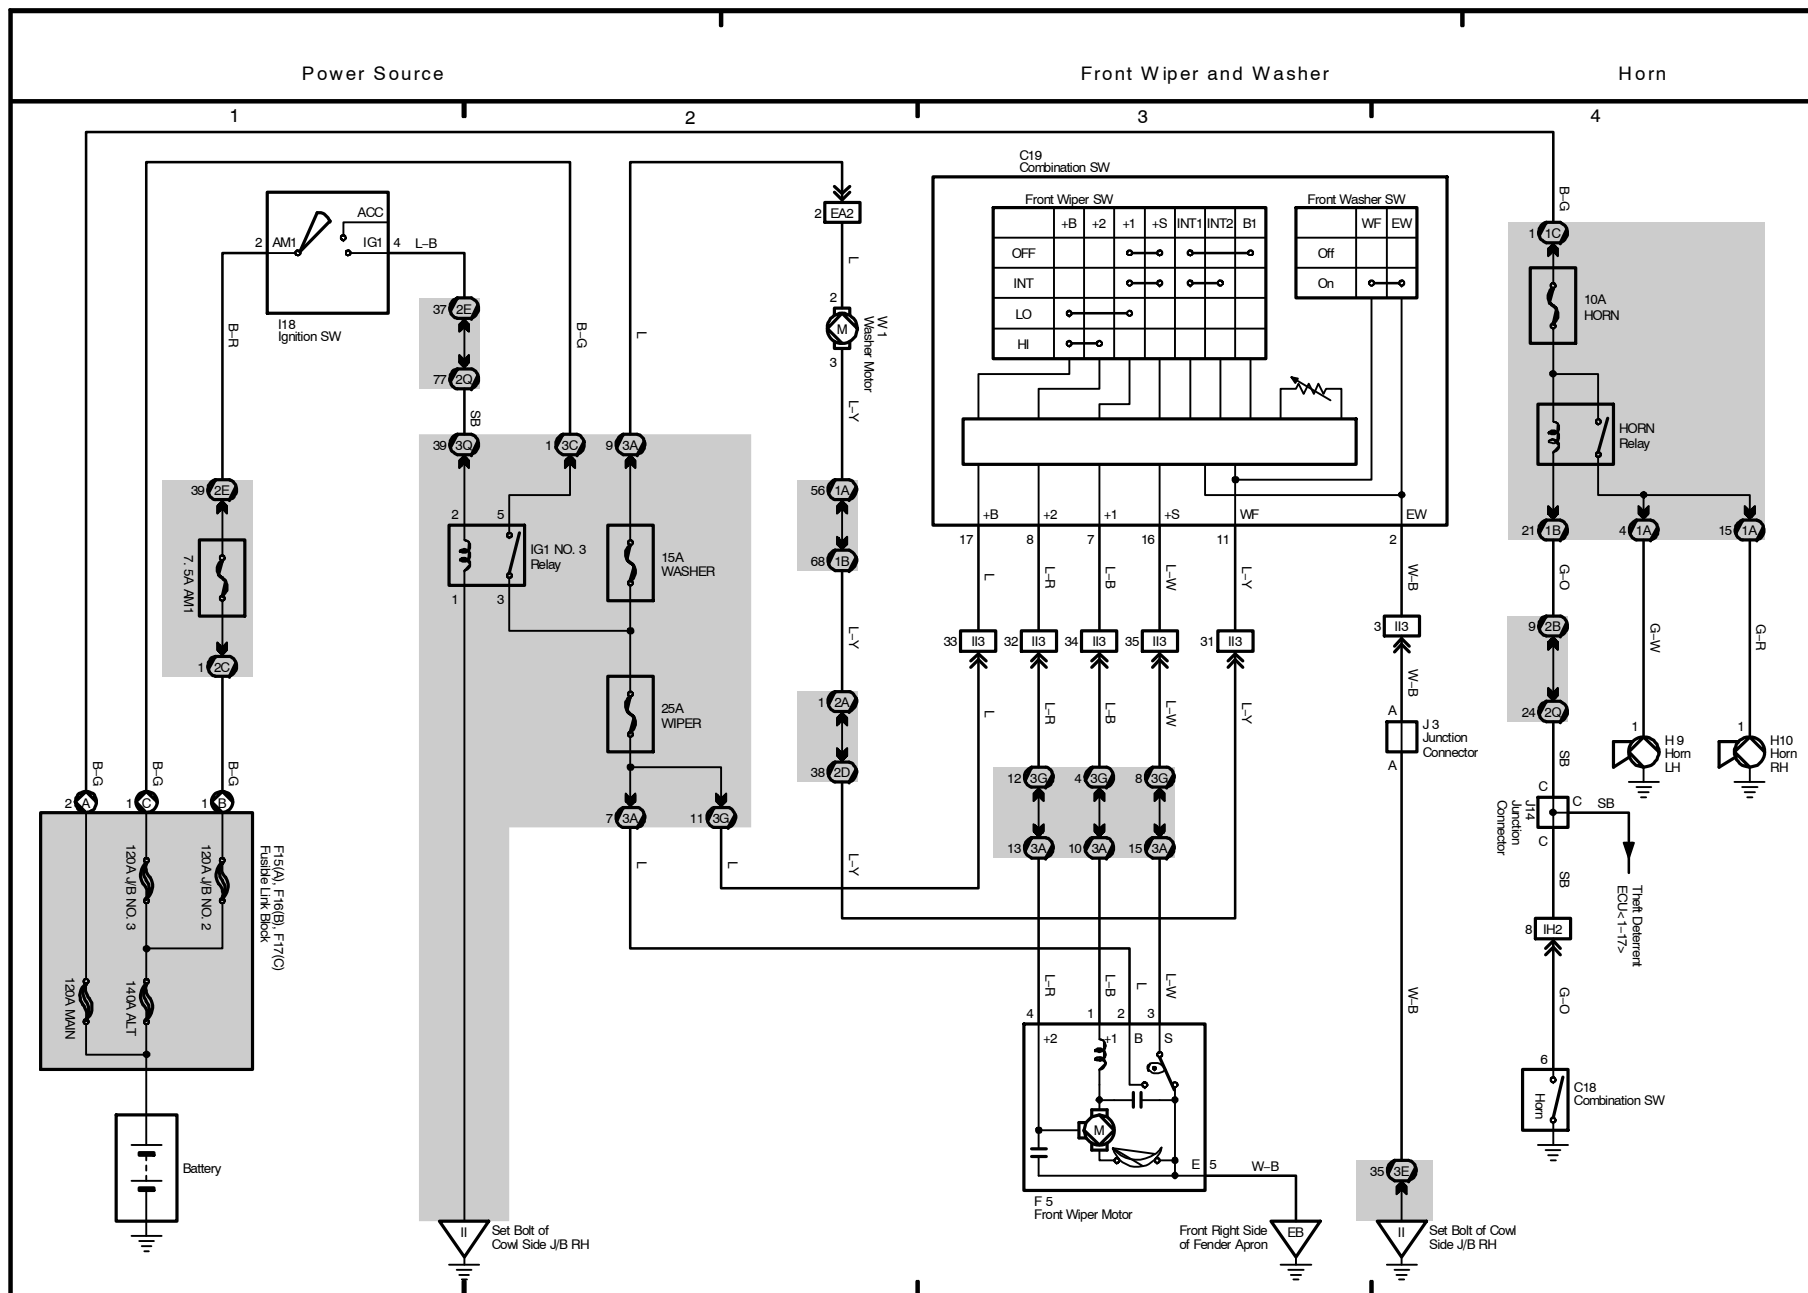

2004 LAND CRUISER (EWD548U)


19 LAND CRUISER

2004 LAND CRUISER (EWD548U)

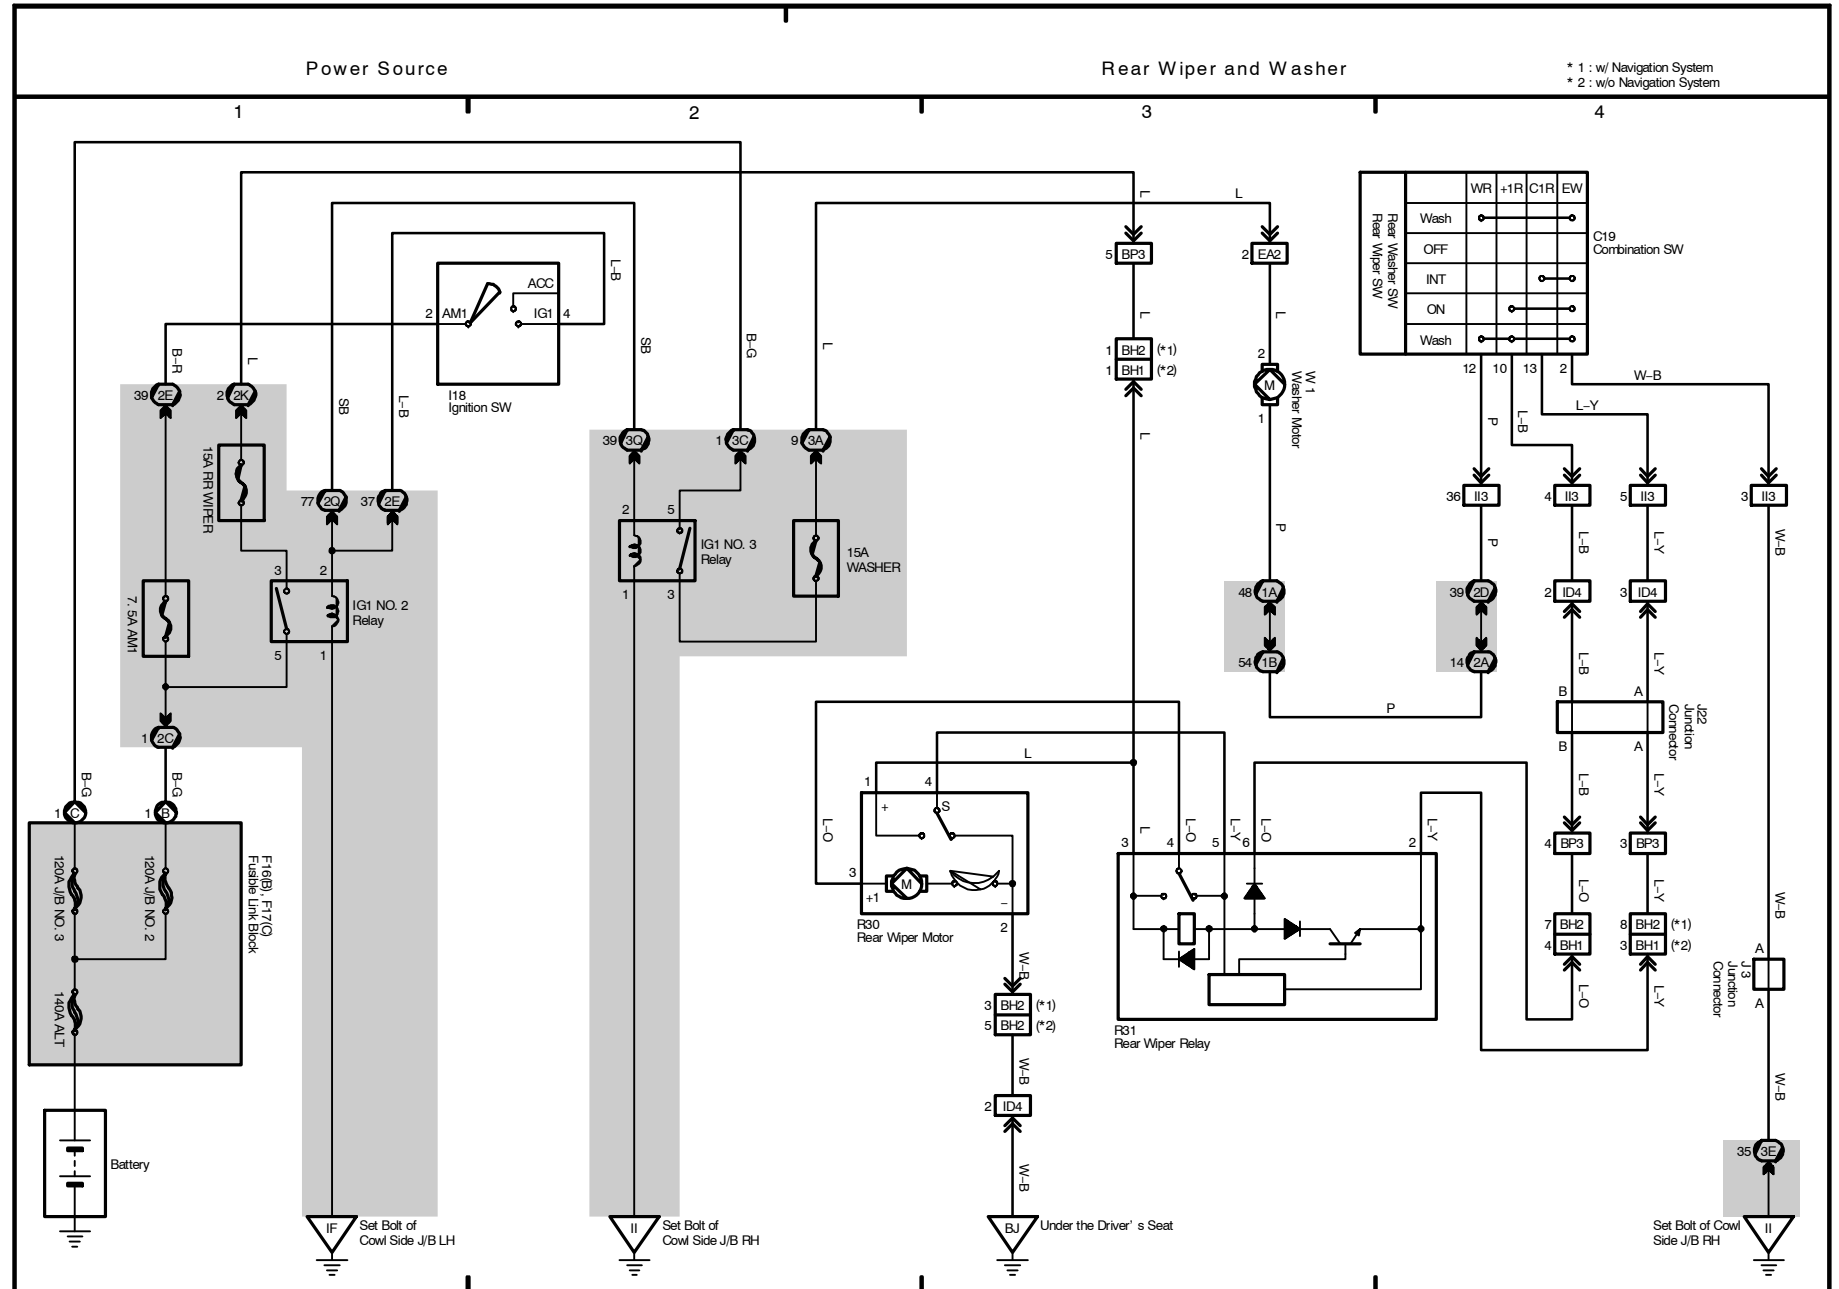


M OVERALL ELECTRICAL WIRING DIAGRAM

20 LAND CRUISER

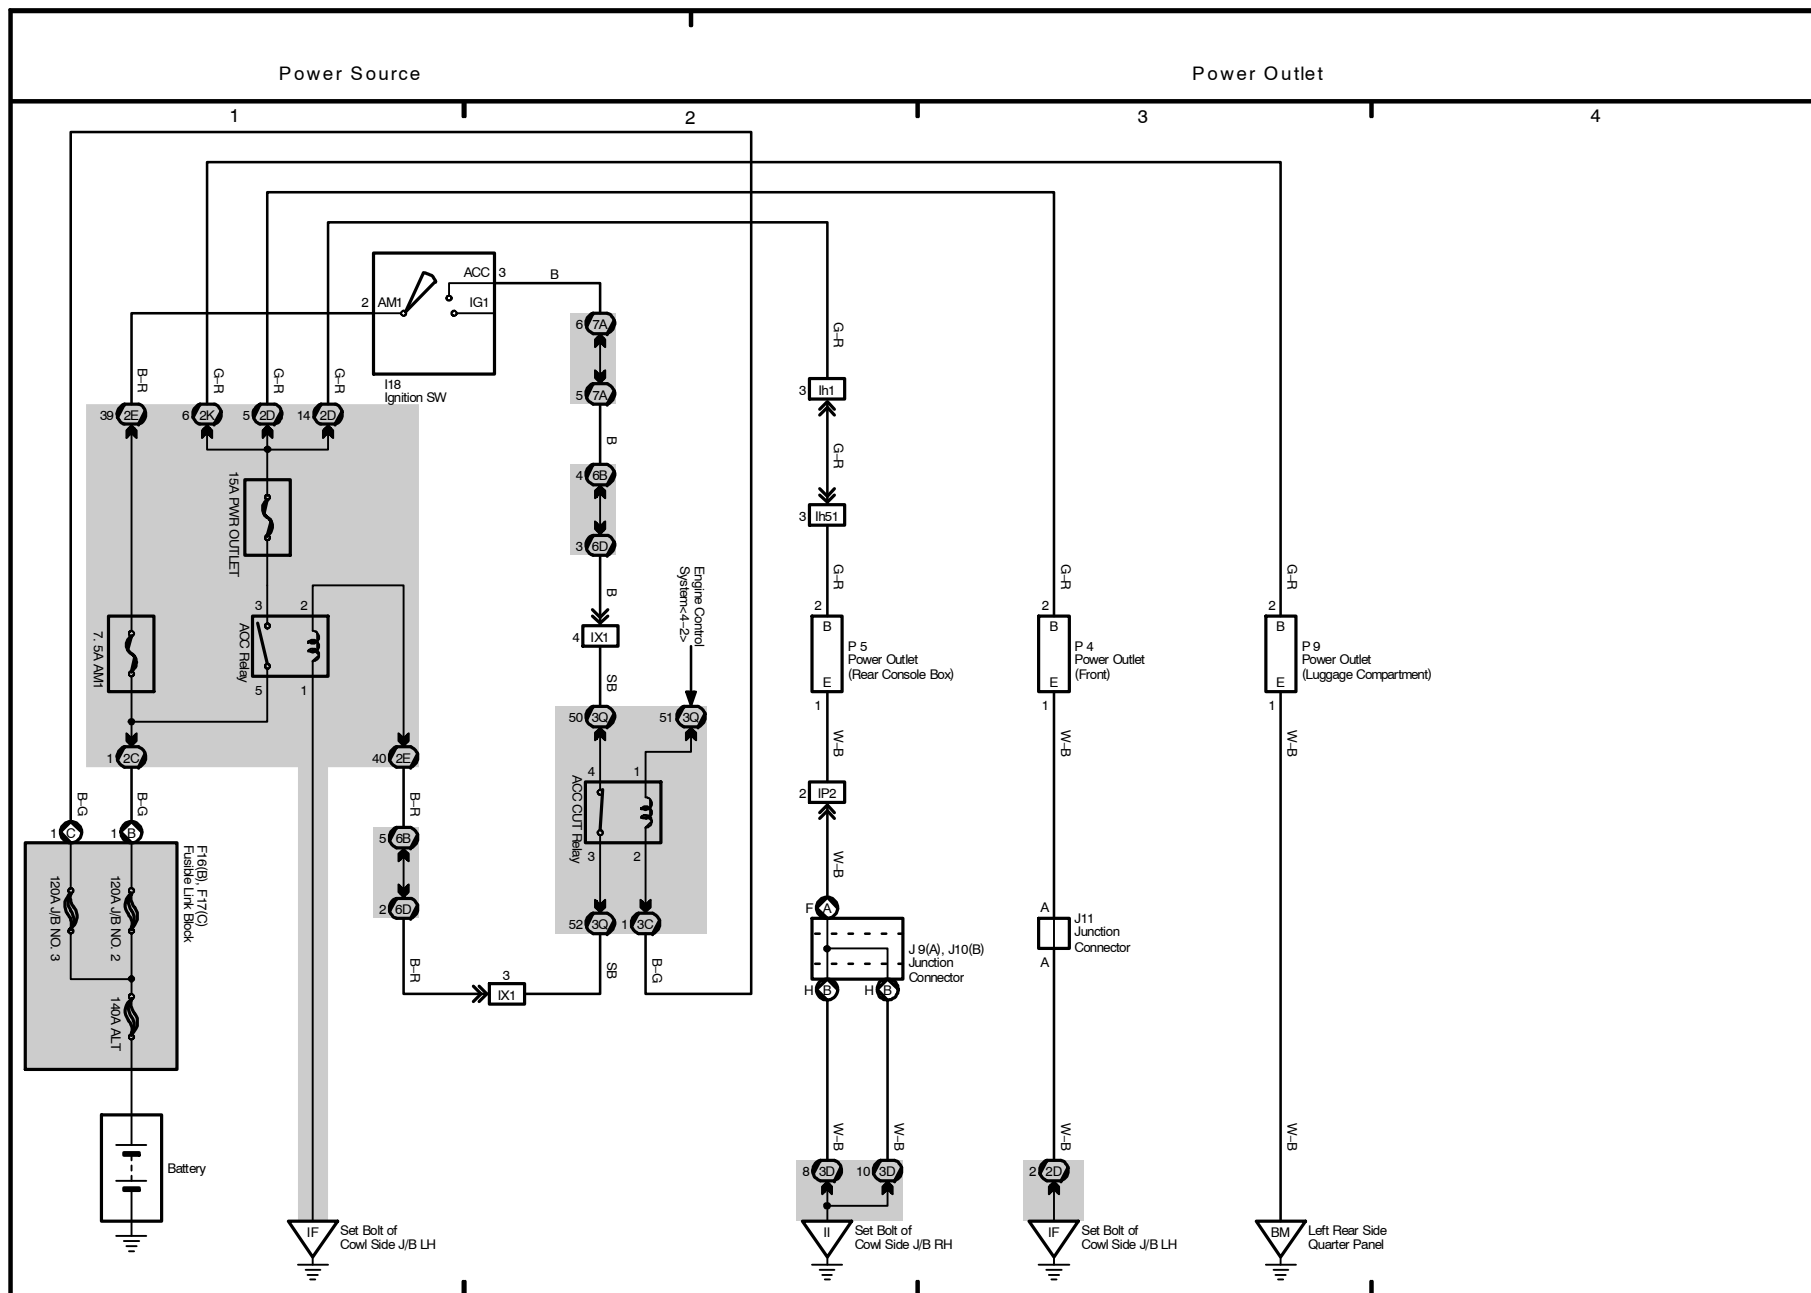


2004 LAND CRUISER (EWD548U)

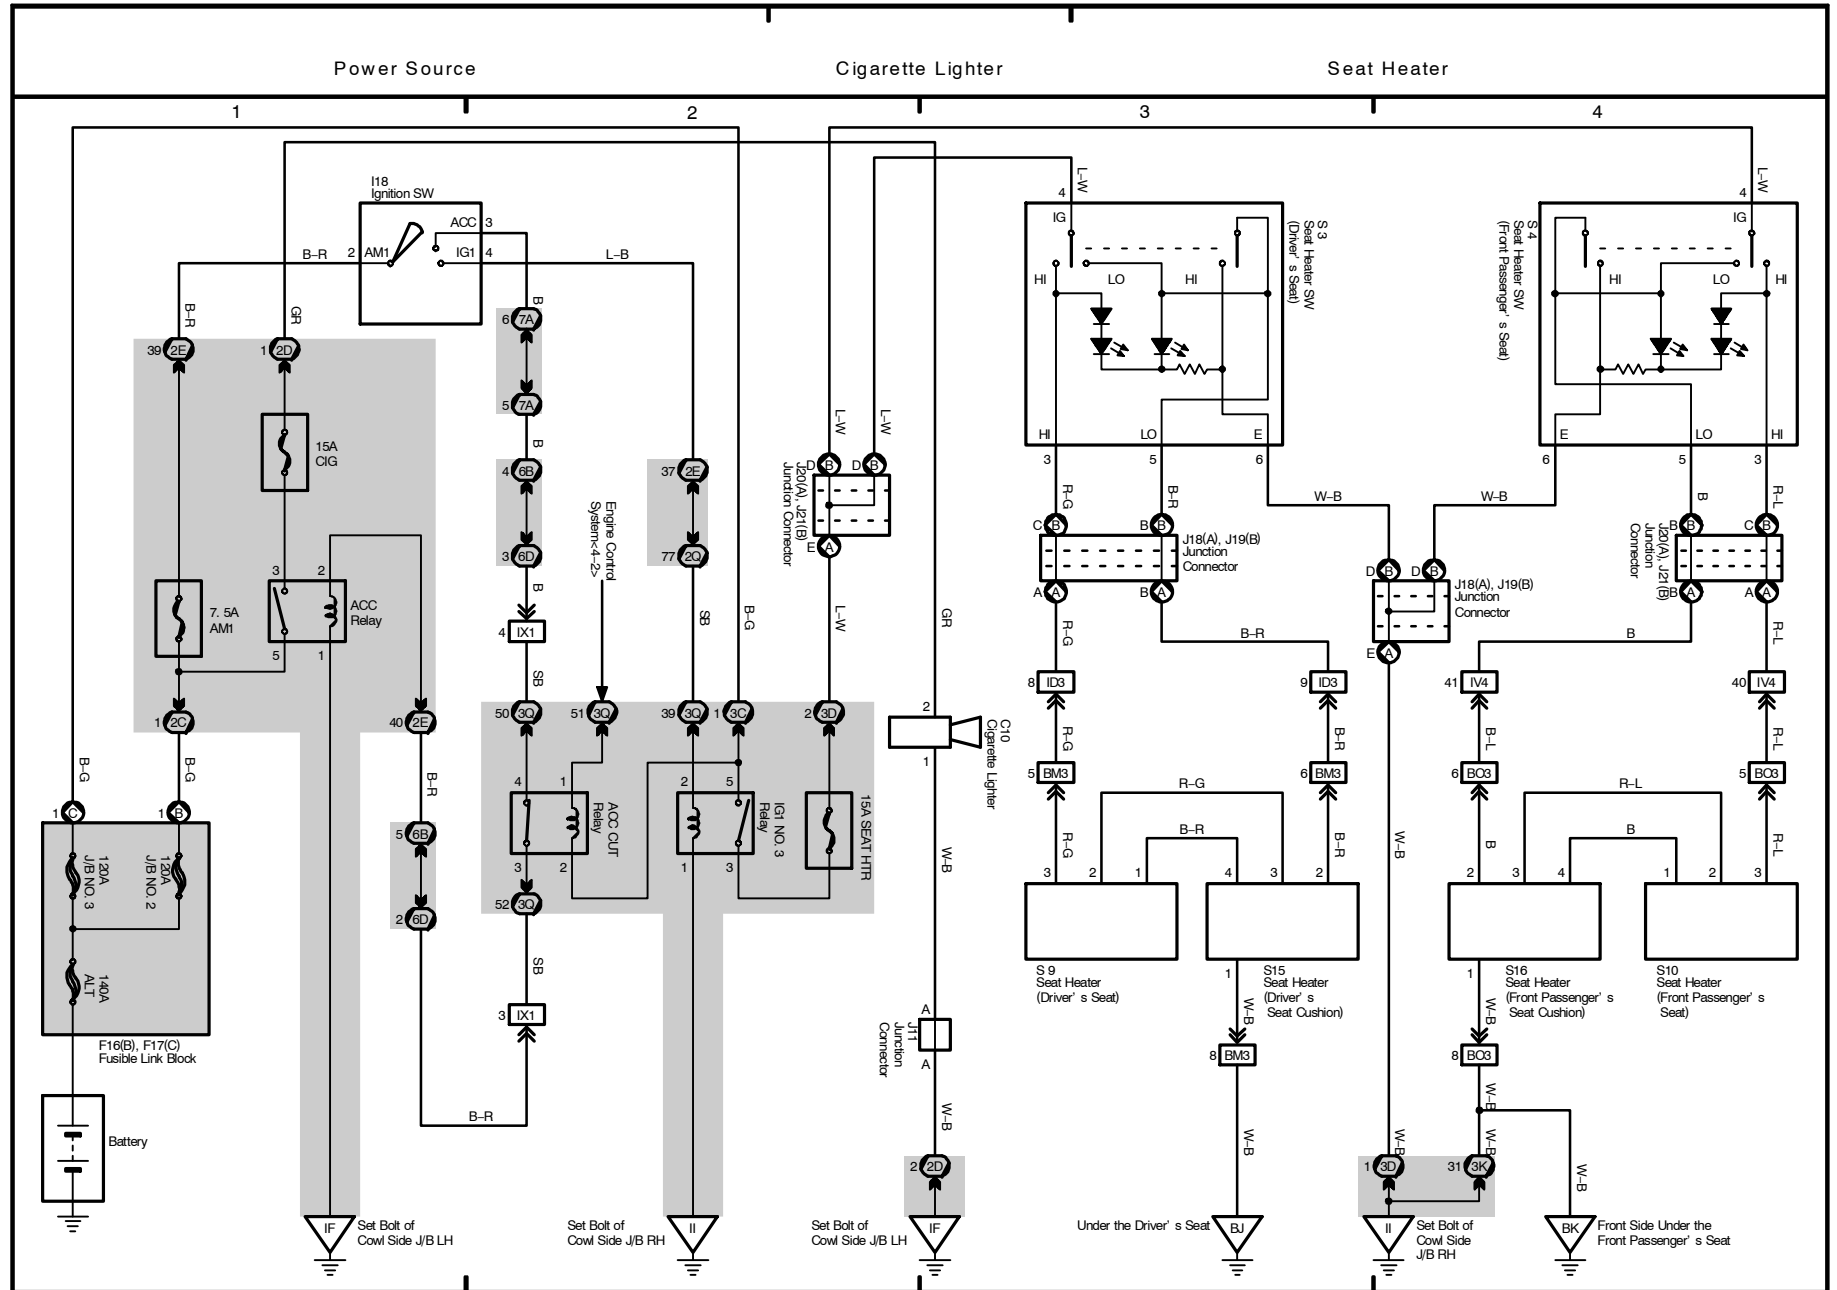

M OVERALL ELECTRICAL WIRING DIAGRAM


22 LAND CRUISER

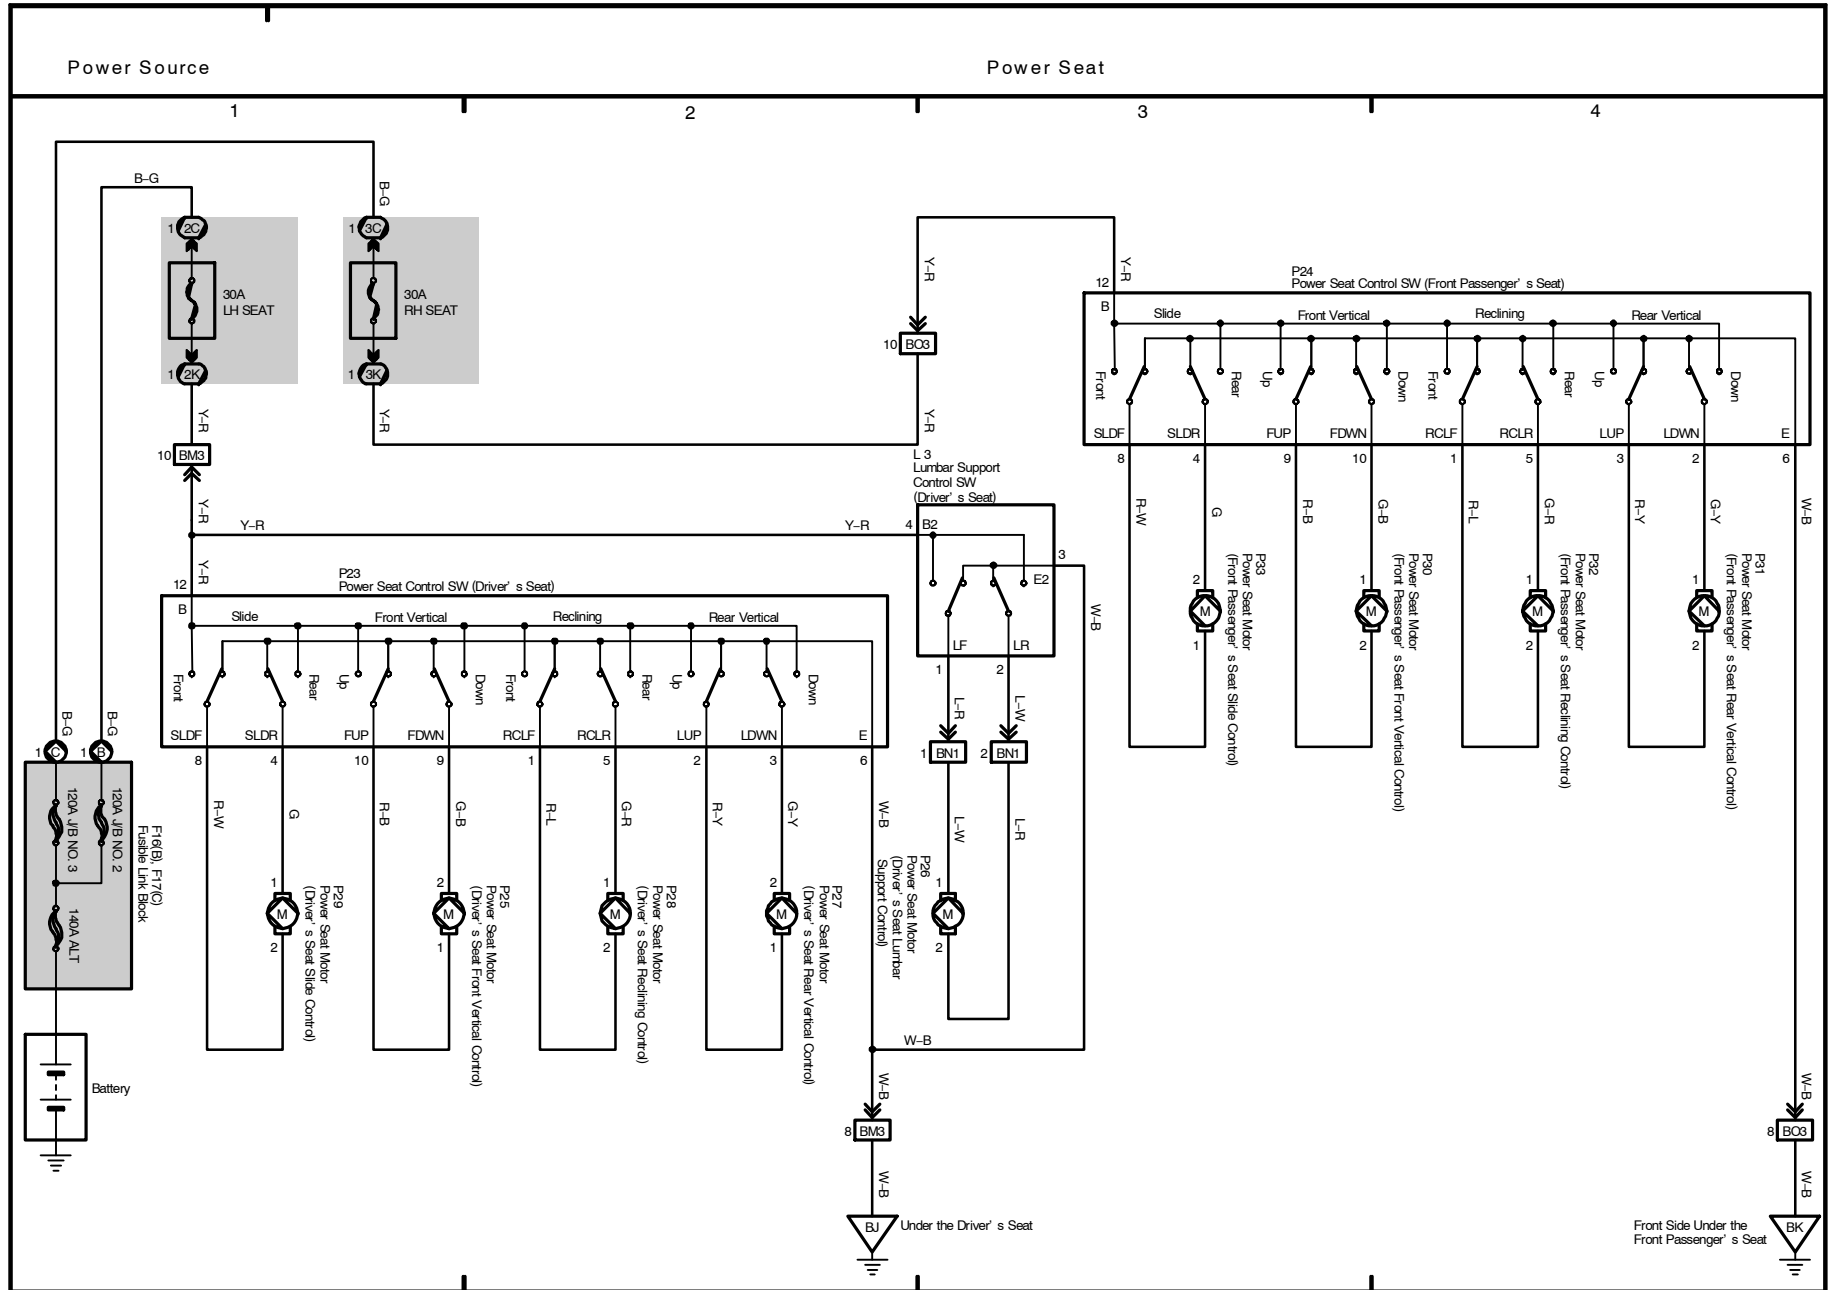

2004 LAND CRUISER (EWD548U)


23 LAND CRUISER

2004 LAND CRUISER (EWD548U)

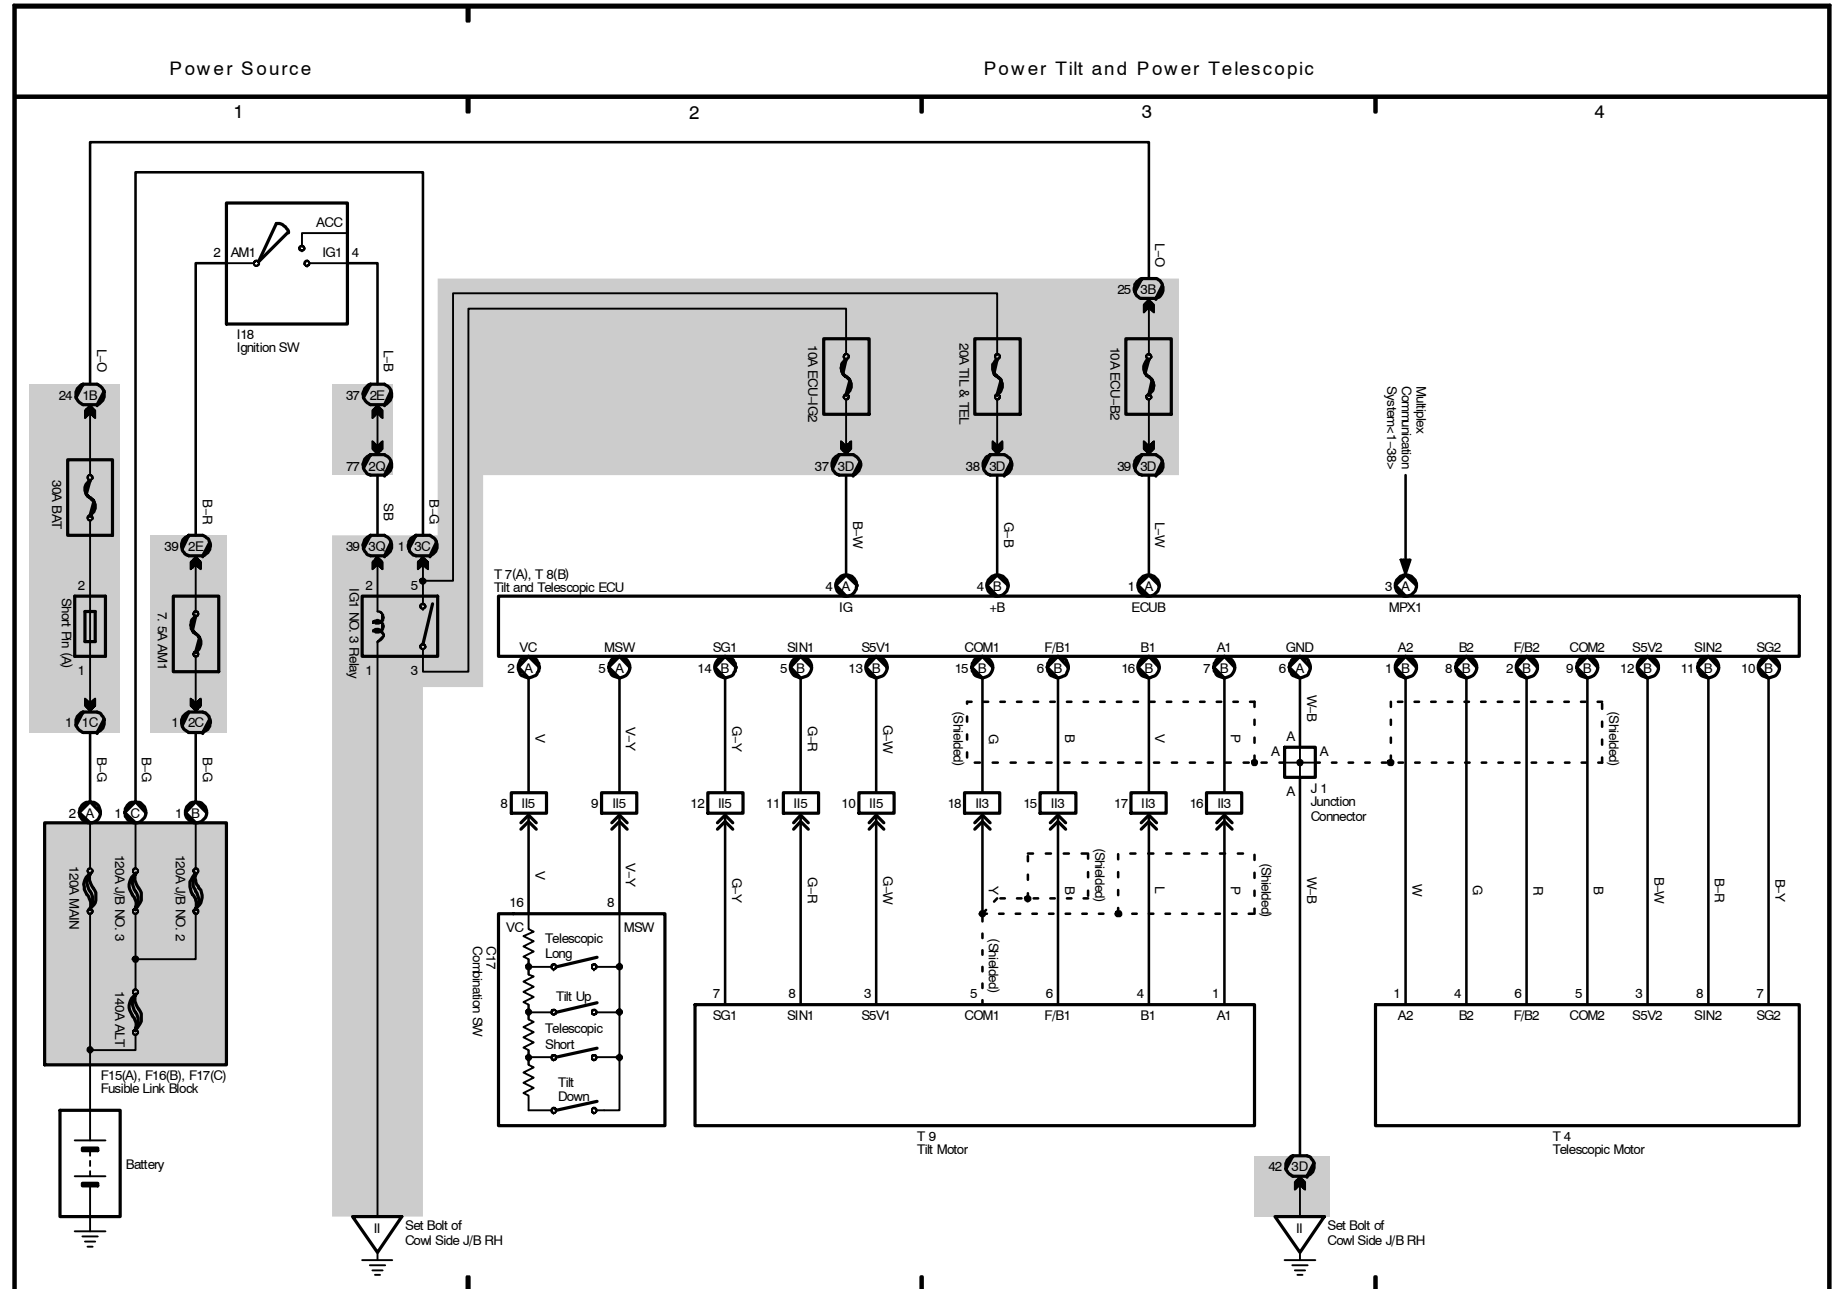

M OVERALL ELECTRICAL WIRING DIAGRAM


24 LAND CRUISER

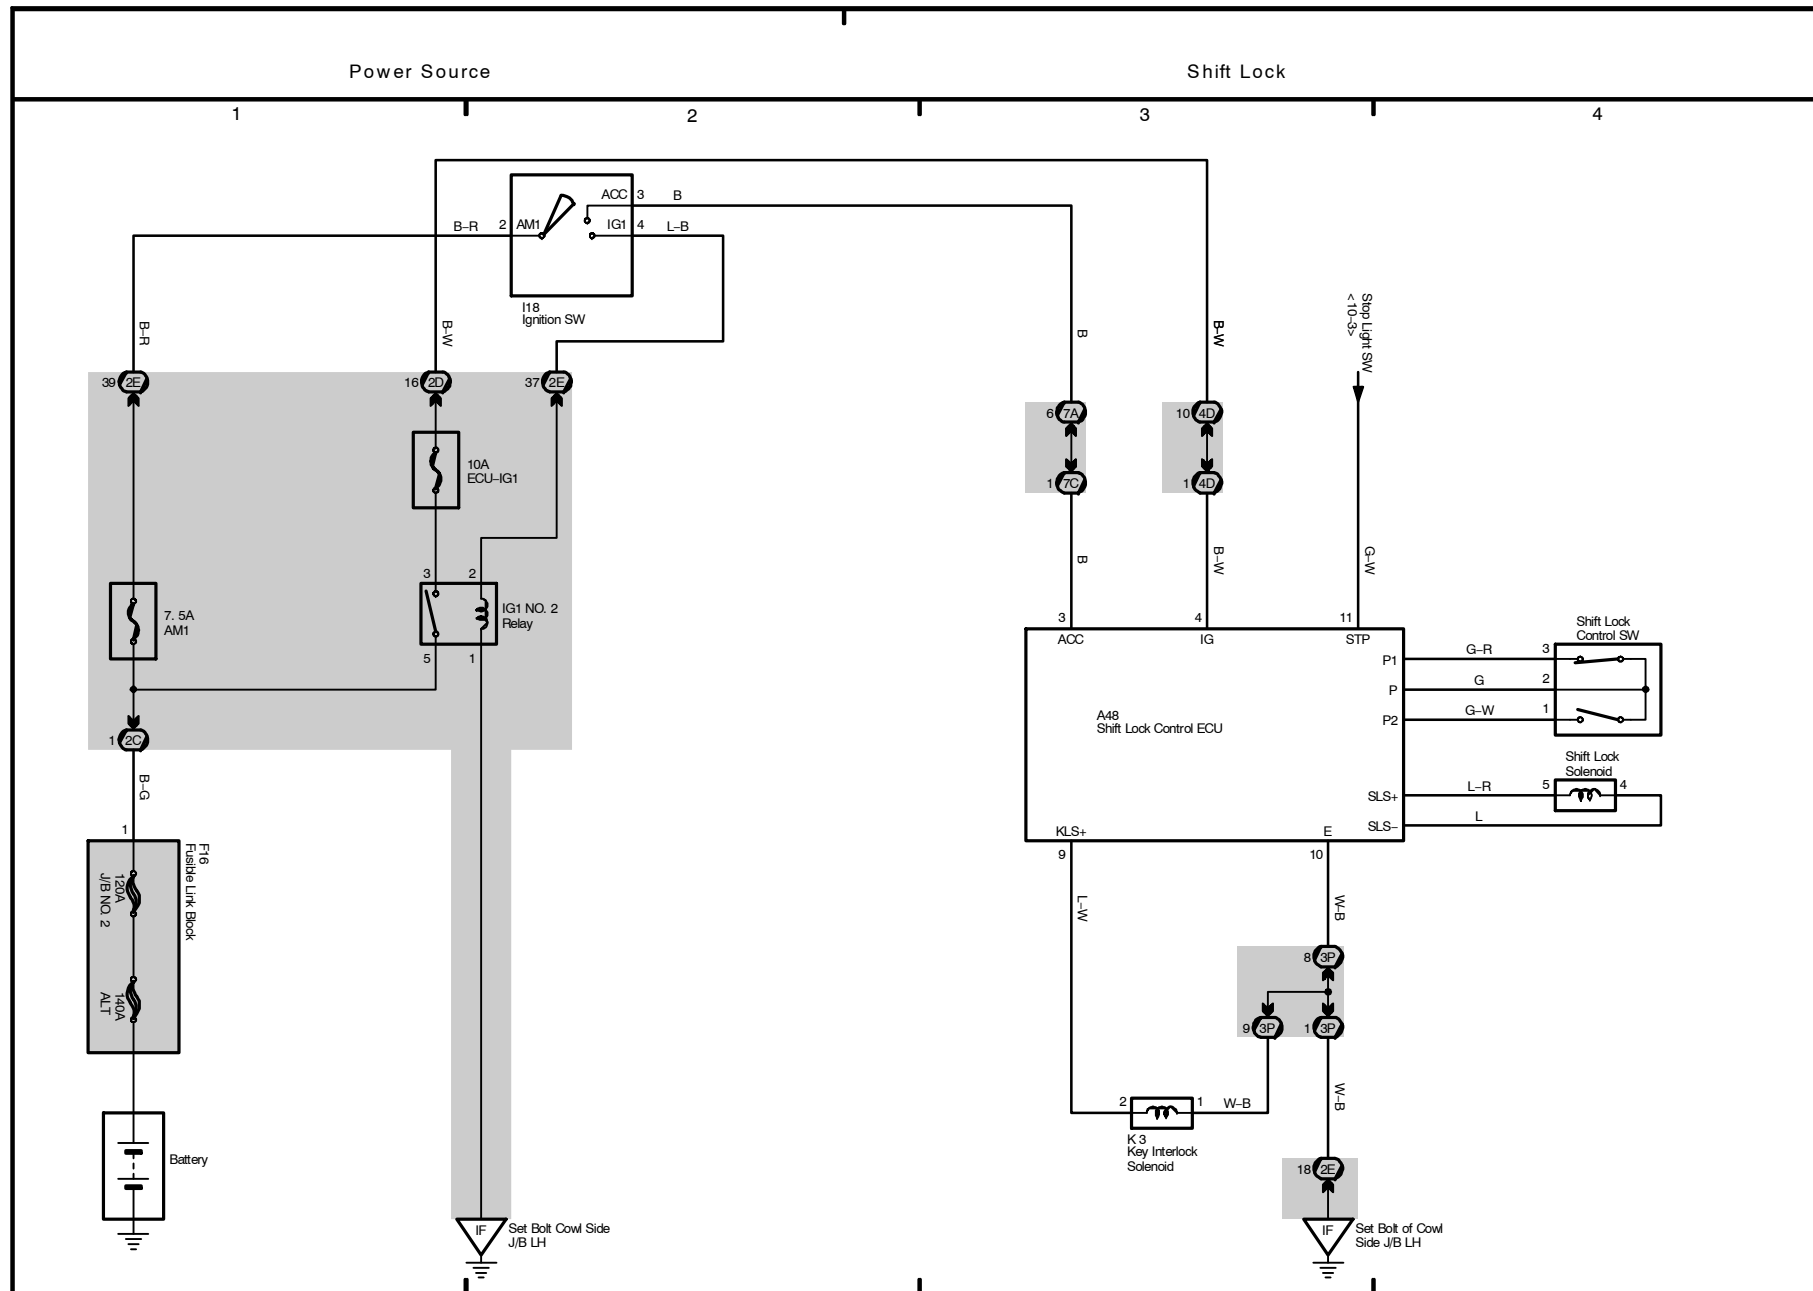


2004 LAND CRUISER (EWD548U)

2004 LAND CRUISER (EWD548U)



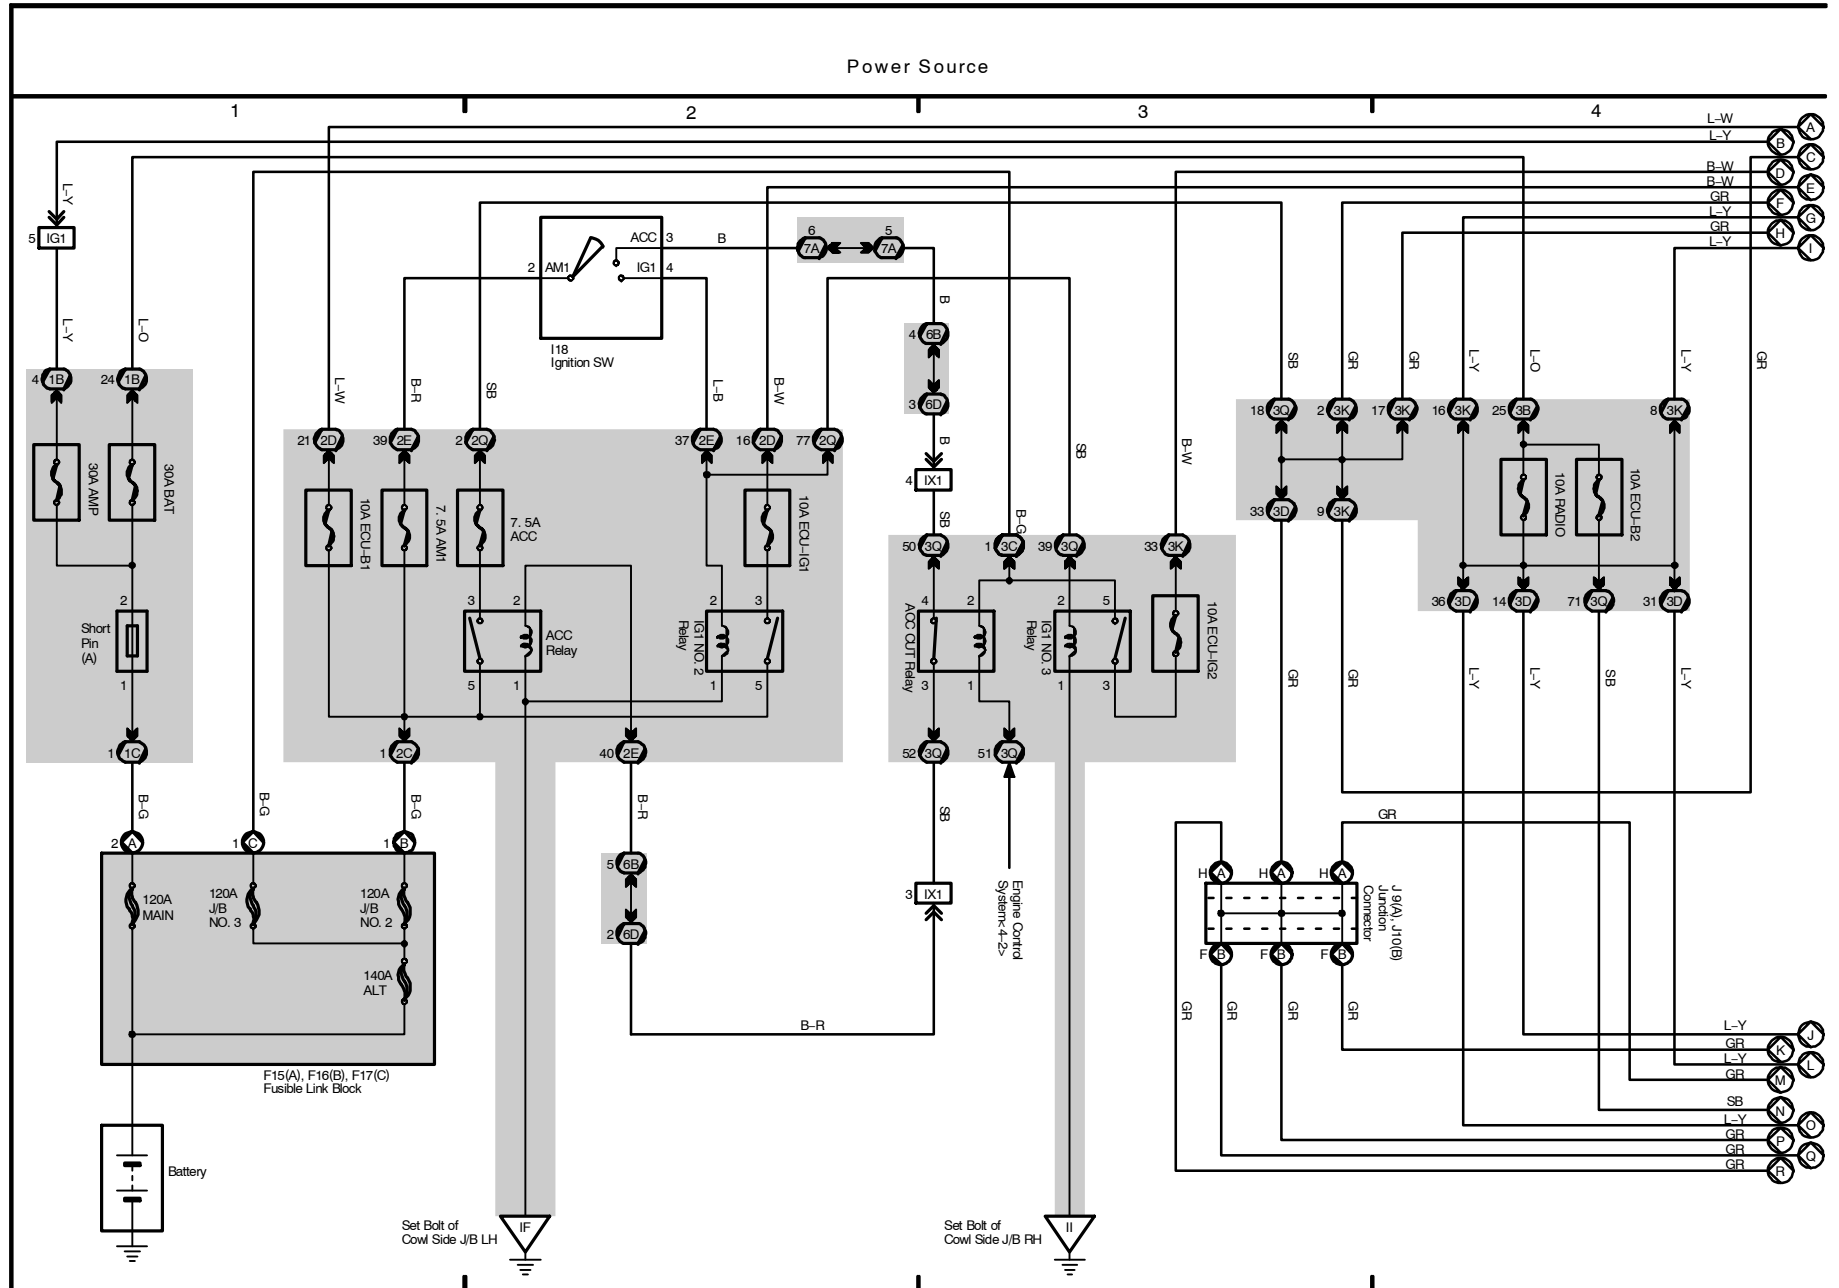

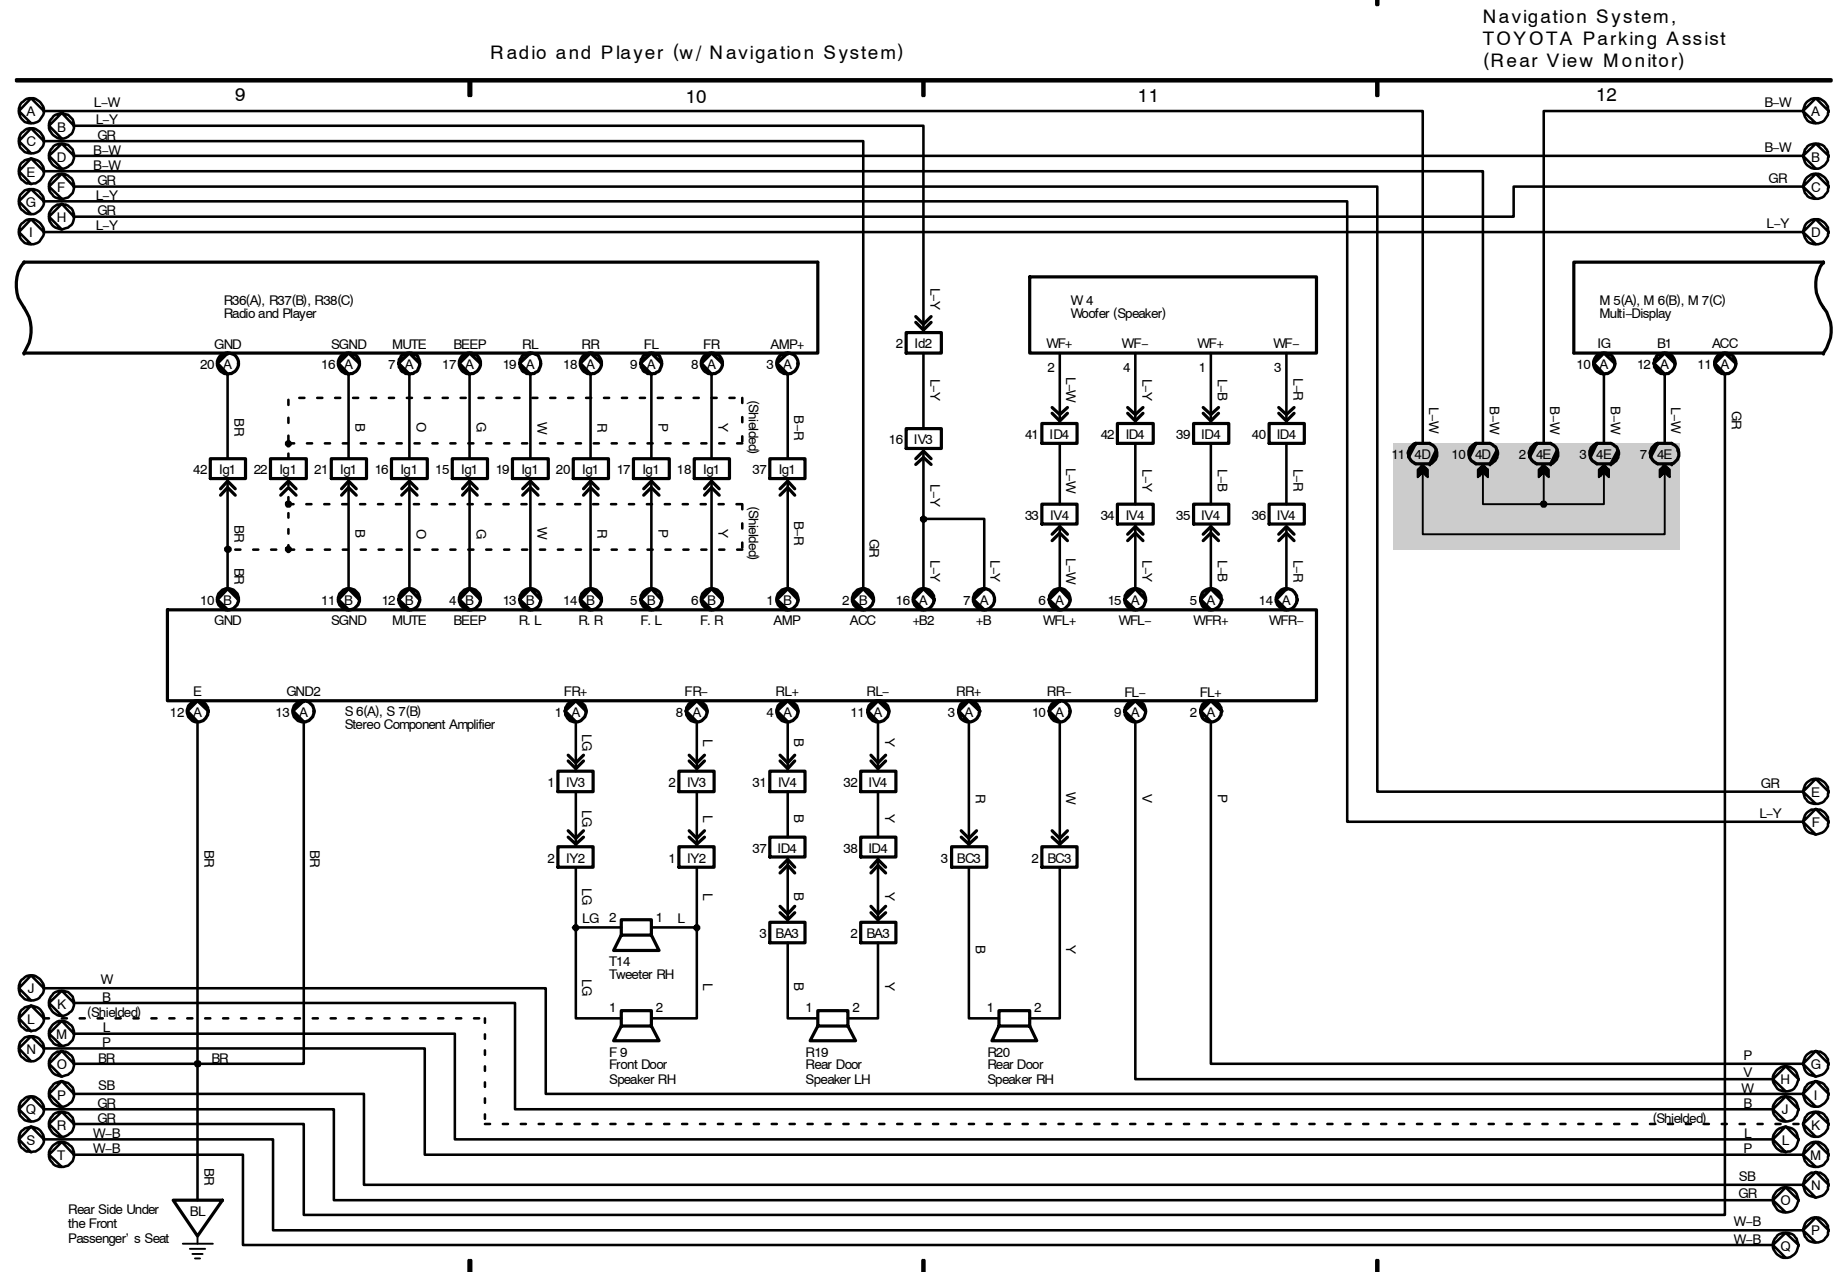

This wiring diagram illustrates the electrical connections for the front side under the front passenger's seat. The diagram is organized into several sections, each representing a different component or system.

Top Section: Multi-Display and Navigation ECU

- Multi-Display (M 5(A), M 6(B), M 7(C))**: Includes connections for NTSC, SGD1, SGND, TX-, TX+, IVO+, IVO-, MCO+, MCO-, SGND, SPD, DR, PKB, TC, and LP.
- Navigation ECU (N 2(A), N 3(B), N 4(C))**: Includes connections for VOI+, VOI-, SLD1, MIC+, MIC-, ACC, +B, AUI+, AUI-, AUO-, AUO+, SPD, REV, GND, SNSE, R, G, B, SYNC, VR, VG, TX+, and TX-.

Bottom Section: Speakers and Sensors

- Speakers**: Includes T13 Tweeter LH and F8 Front Door Speaker LH.
- Sensors**: Includes J25(A) Junction Connector and J25(B) Junction Connector.


Wiring Details

- Wires**: Various colored wires are shown, including B-W, GR, L-Y, W, P, V, R, G, B, Y, SB, GR, W-B, and BK.
- Connectors**: Includes J25(A) and J25(B) Junction Connectors, and various multi-pin connectors.
- Grounding**: Multiple ground points are indicated, including GND and SGND.


Legend

- Wires**: B-W, GR, L-Y, W, P, V, R, G, B, Y, SB, GR, W-B, BK.
- Connectors**: J25(A), J25(B).
- Grounding**: GND, SGND.


Navigation System, TOYOTA Parking Assist (Rear View Monitor)

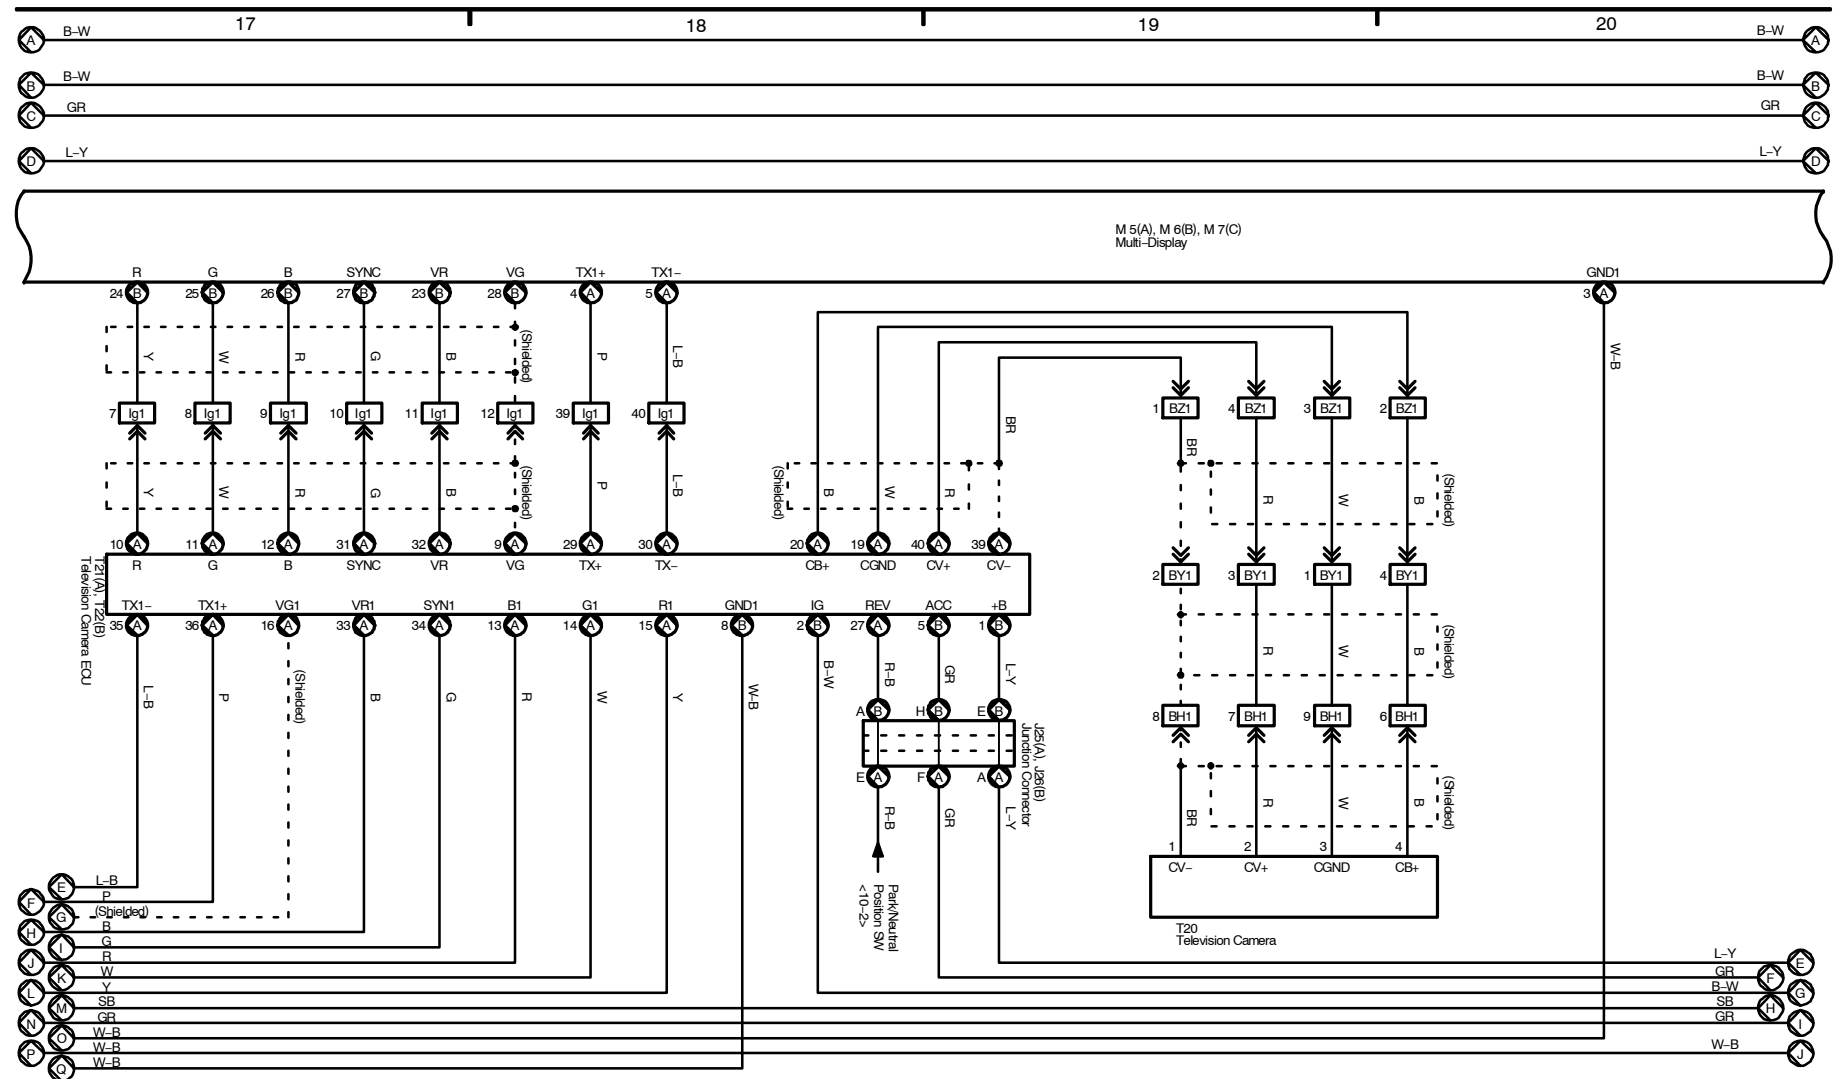


Navigation System, TOYOTA Parking Assist (Rear View Monitor)

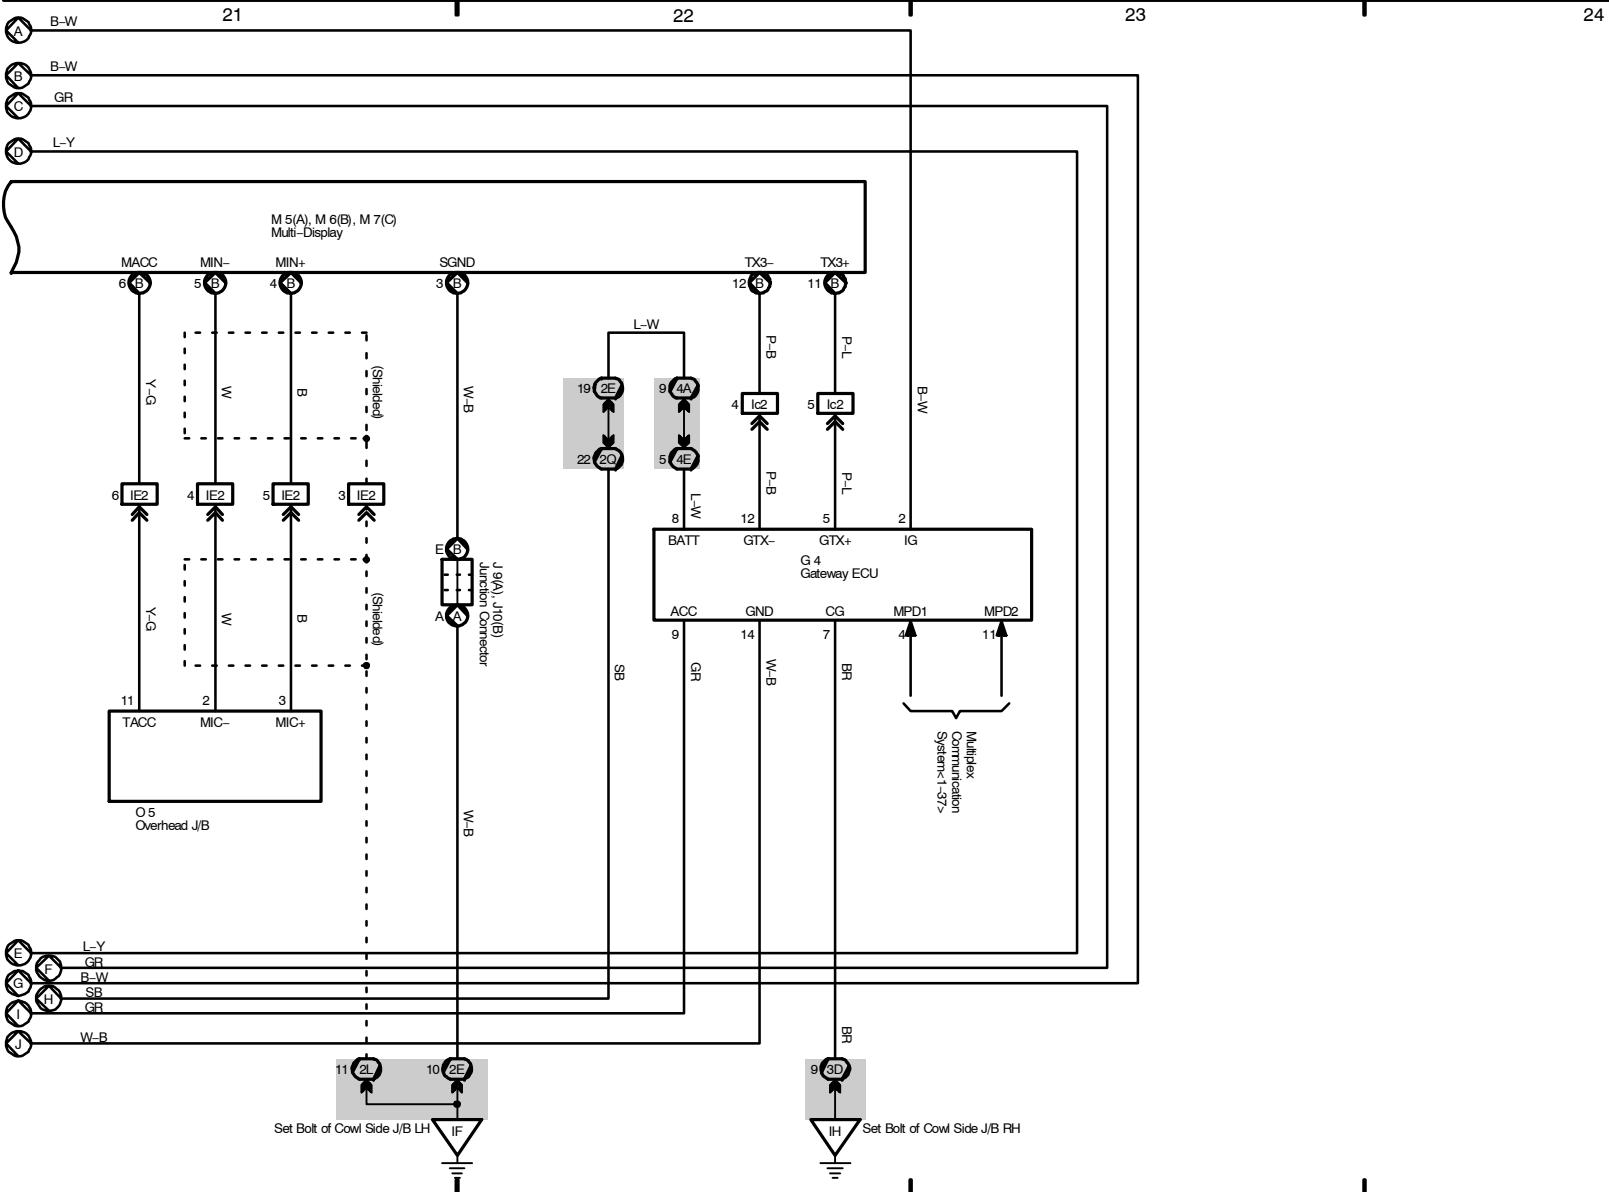



2004 LAND CRUISER (EWD548U)

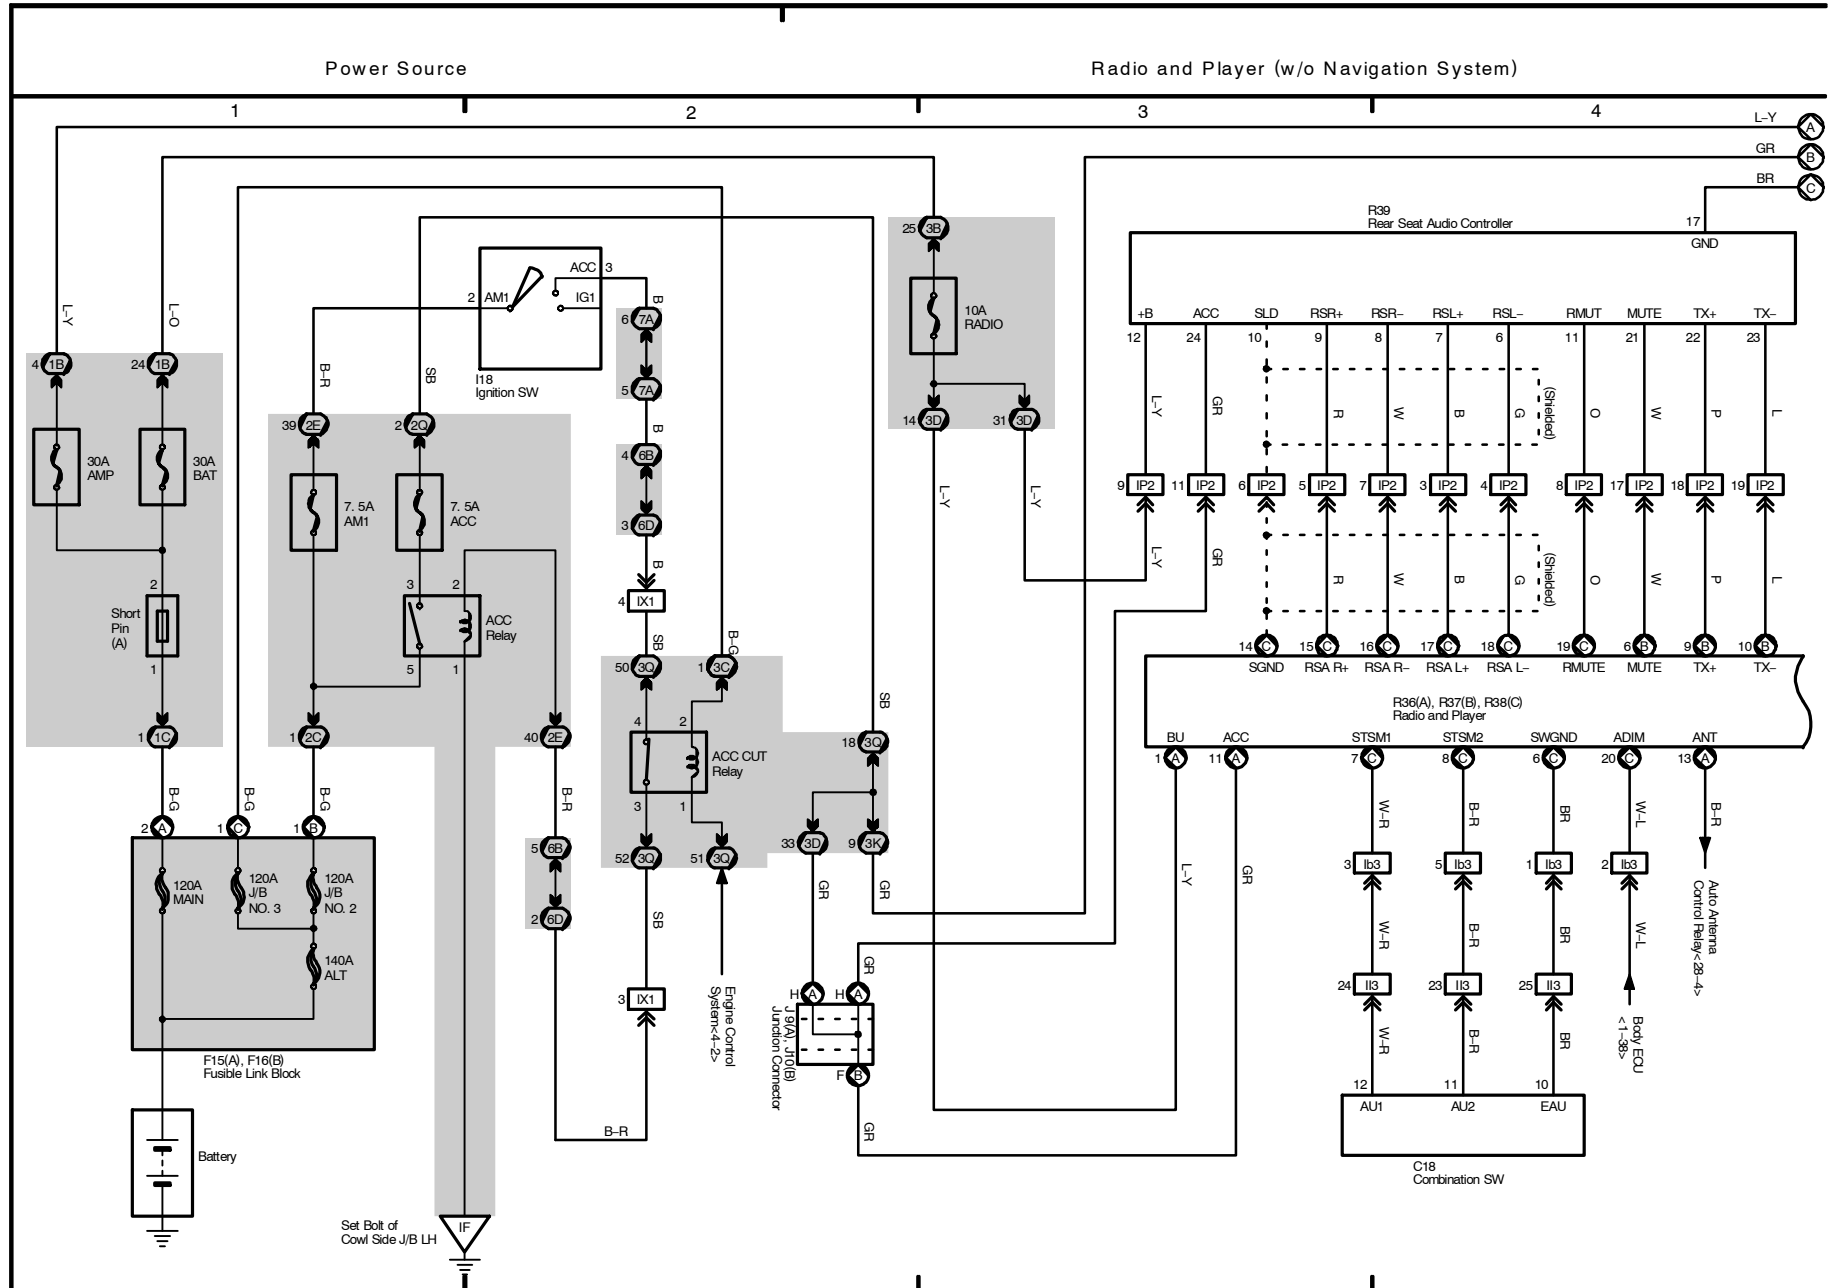





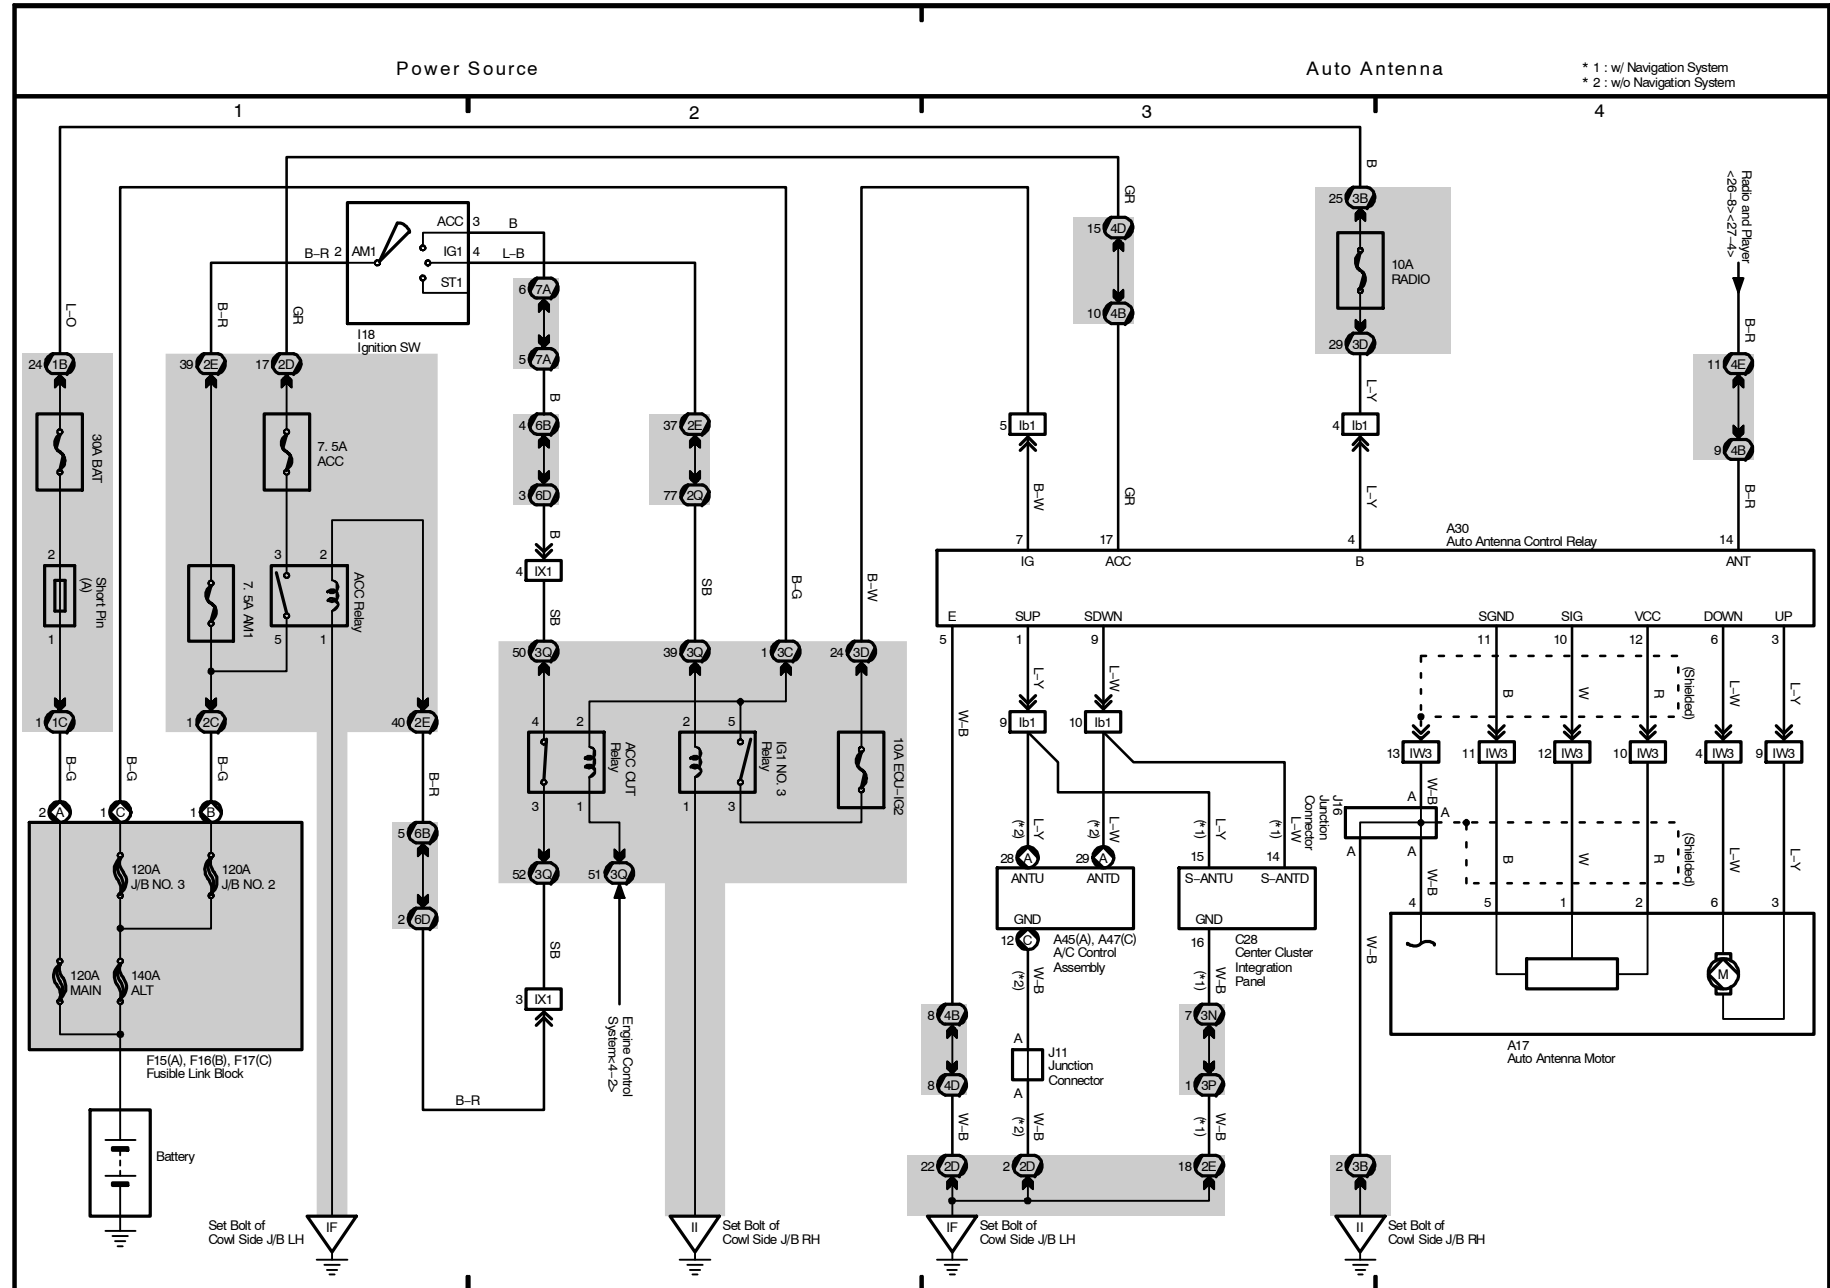


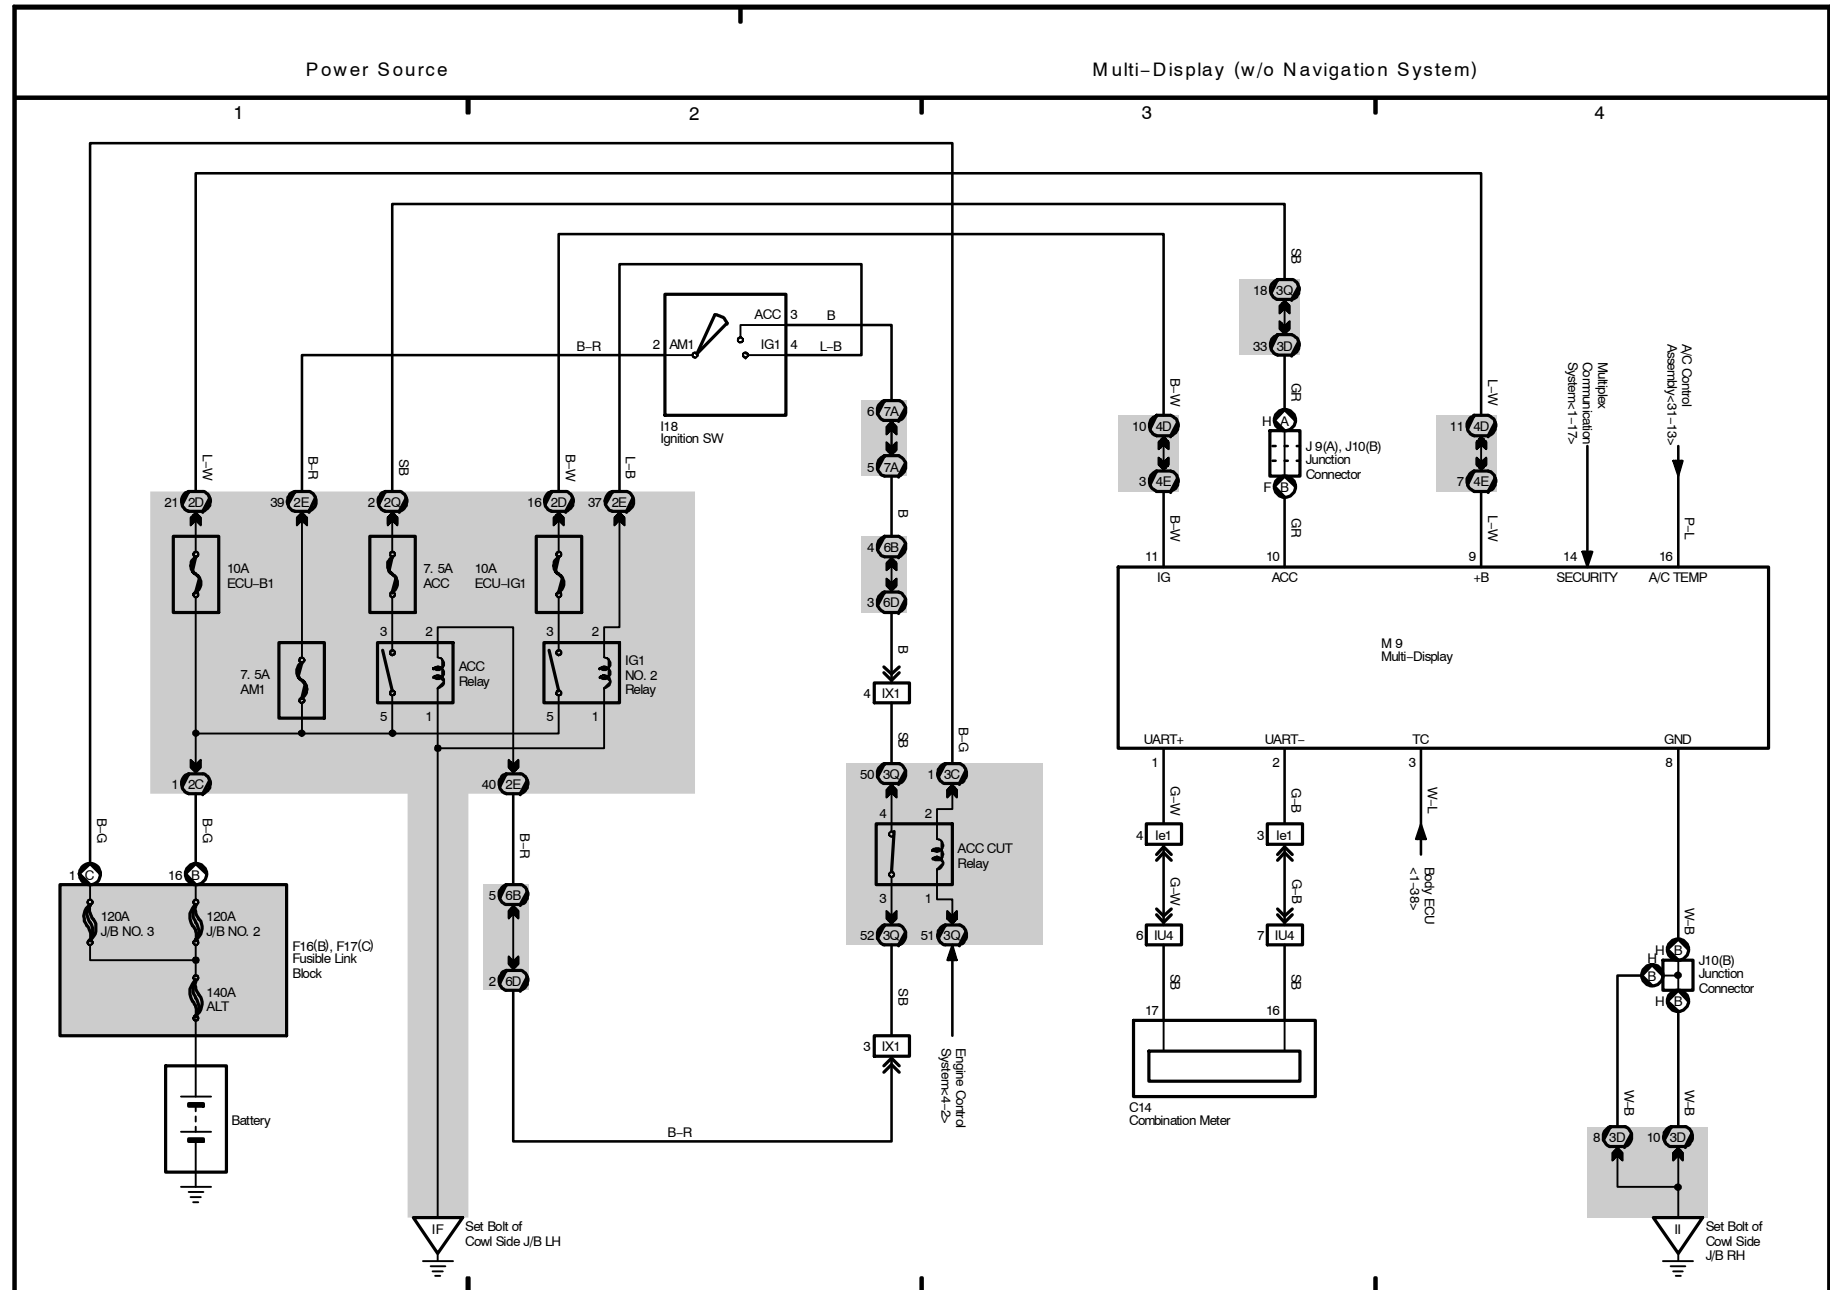


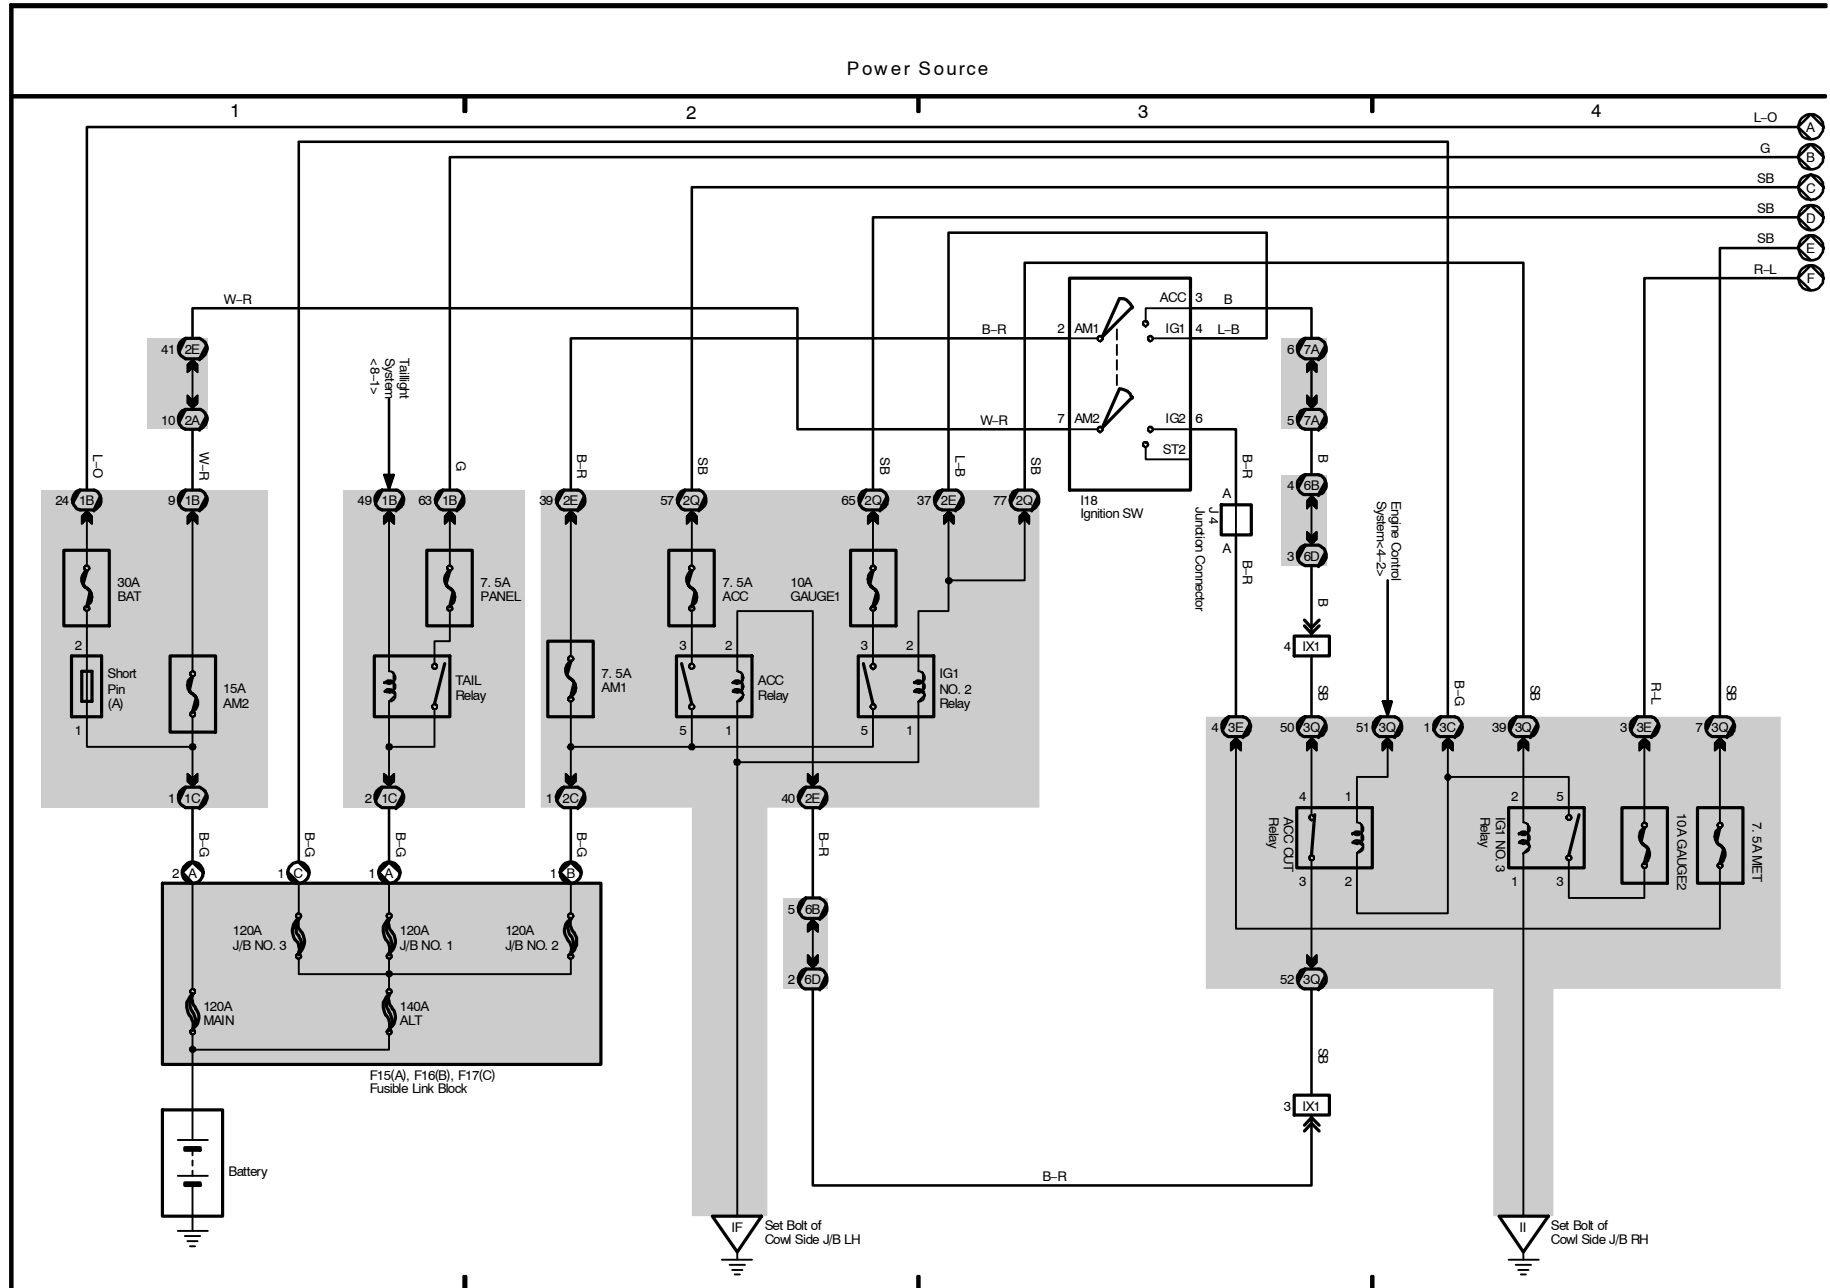


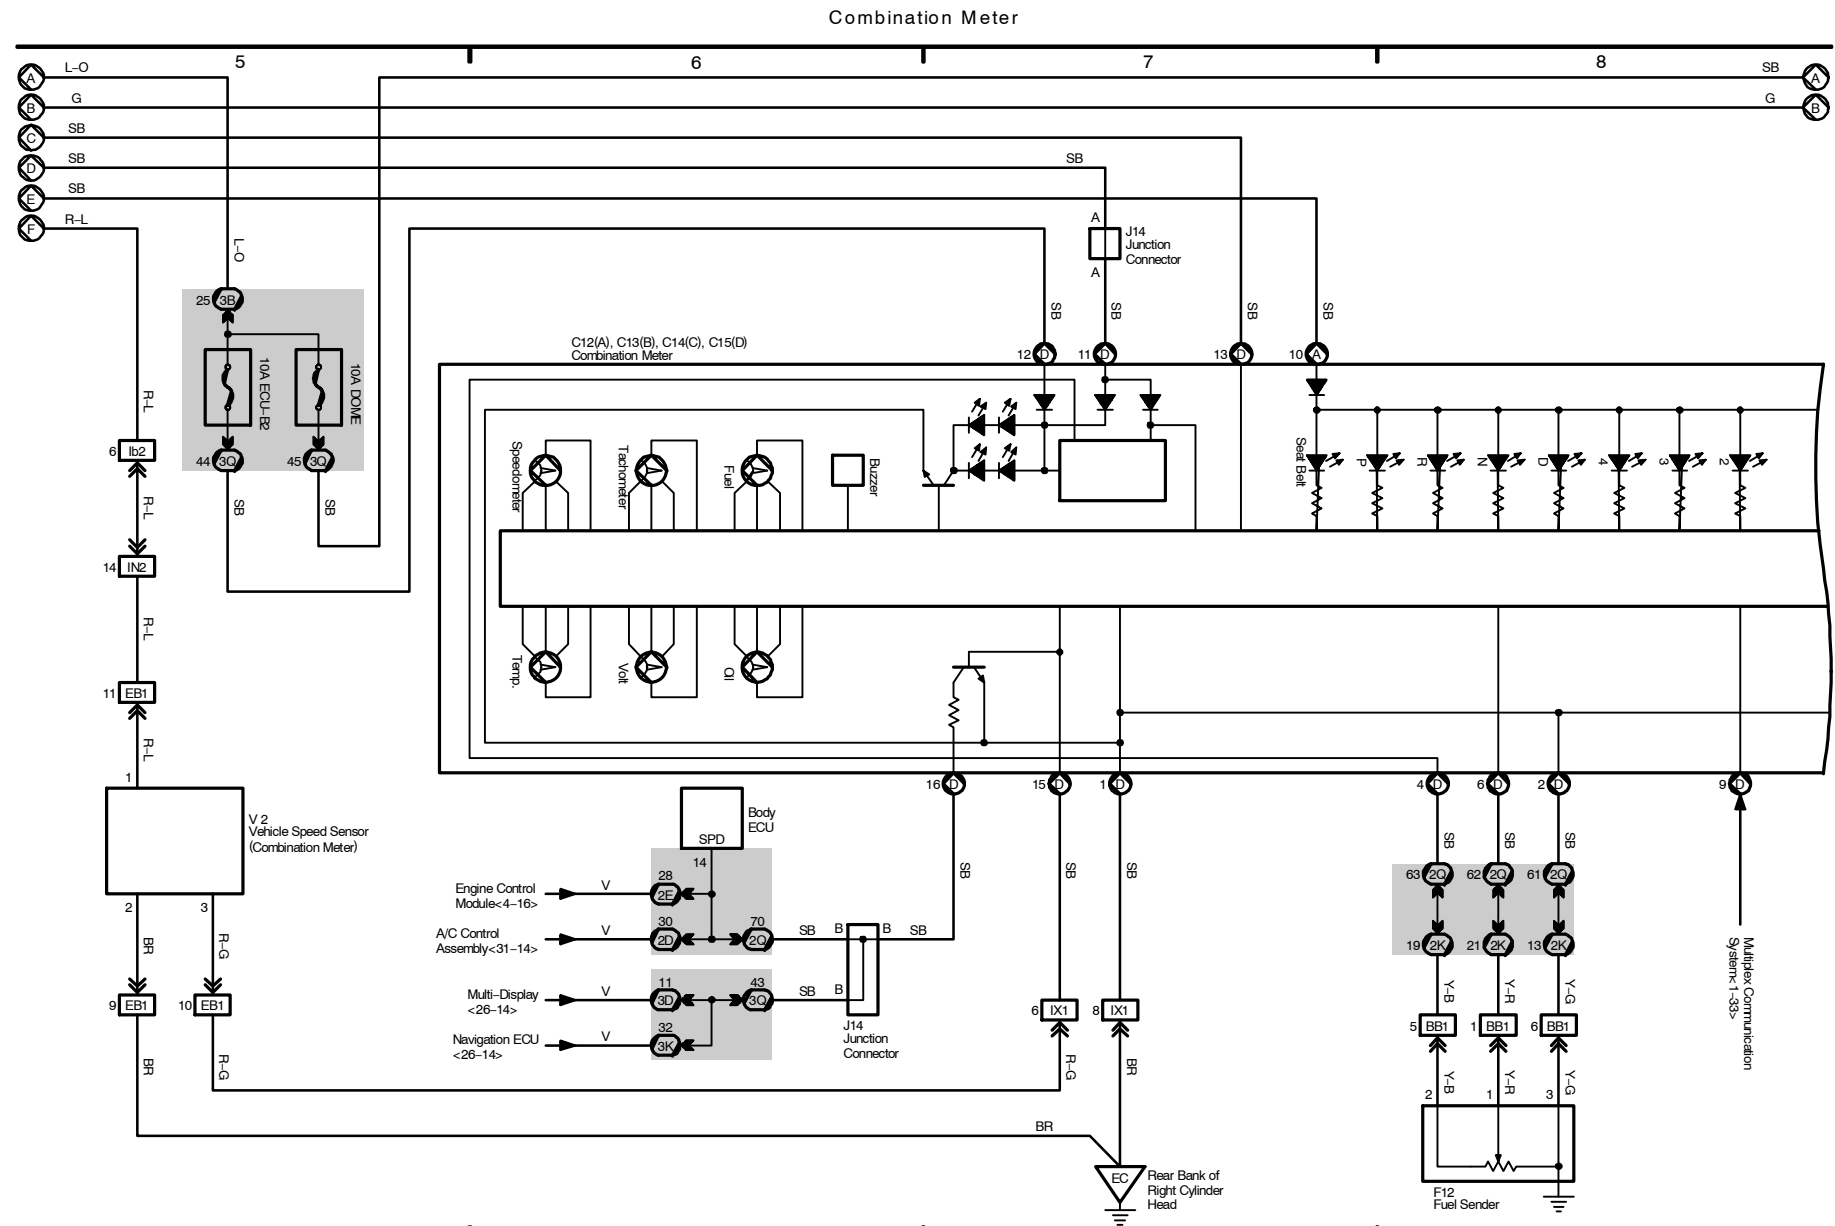


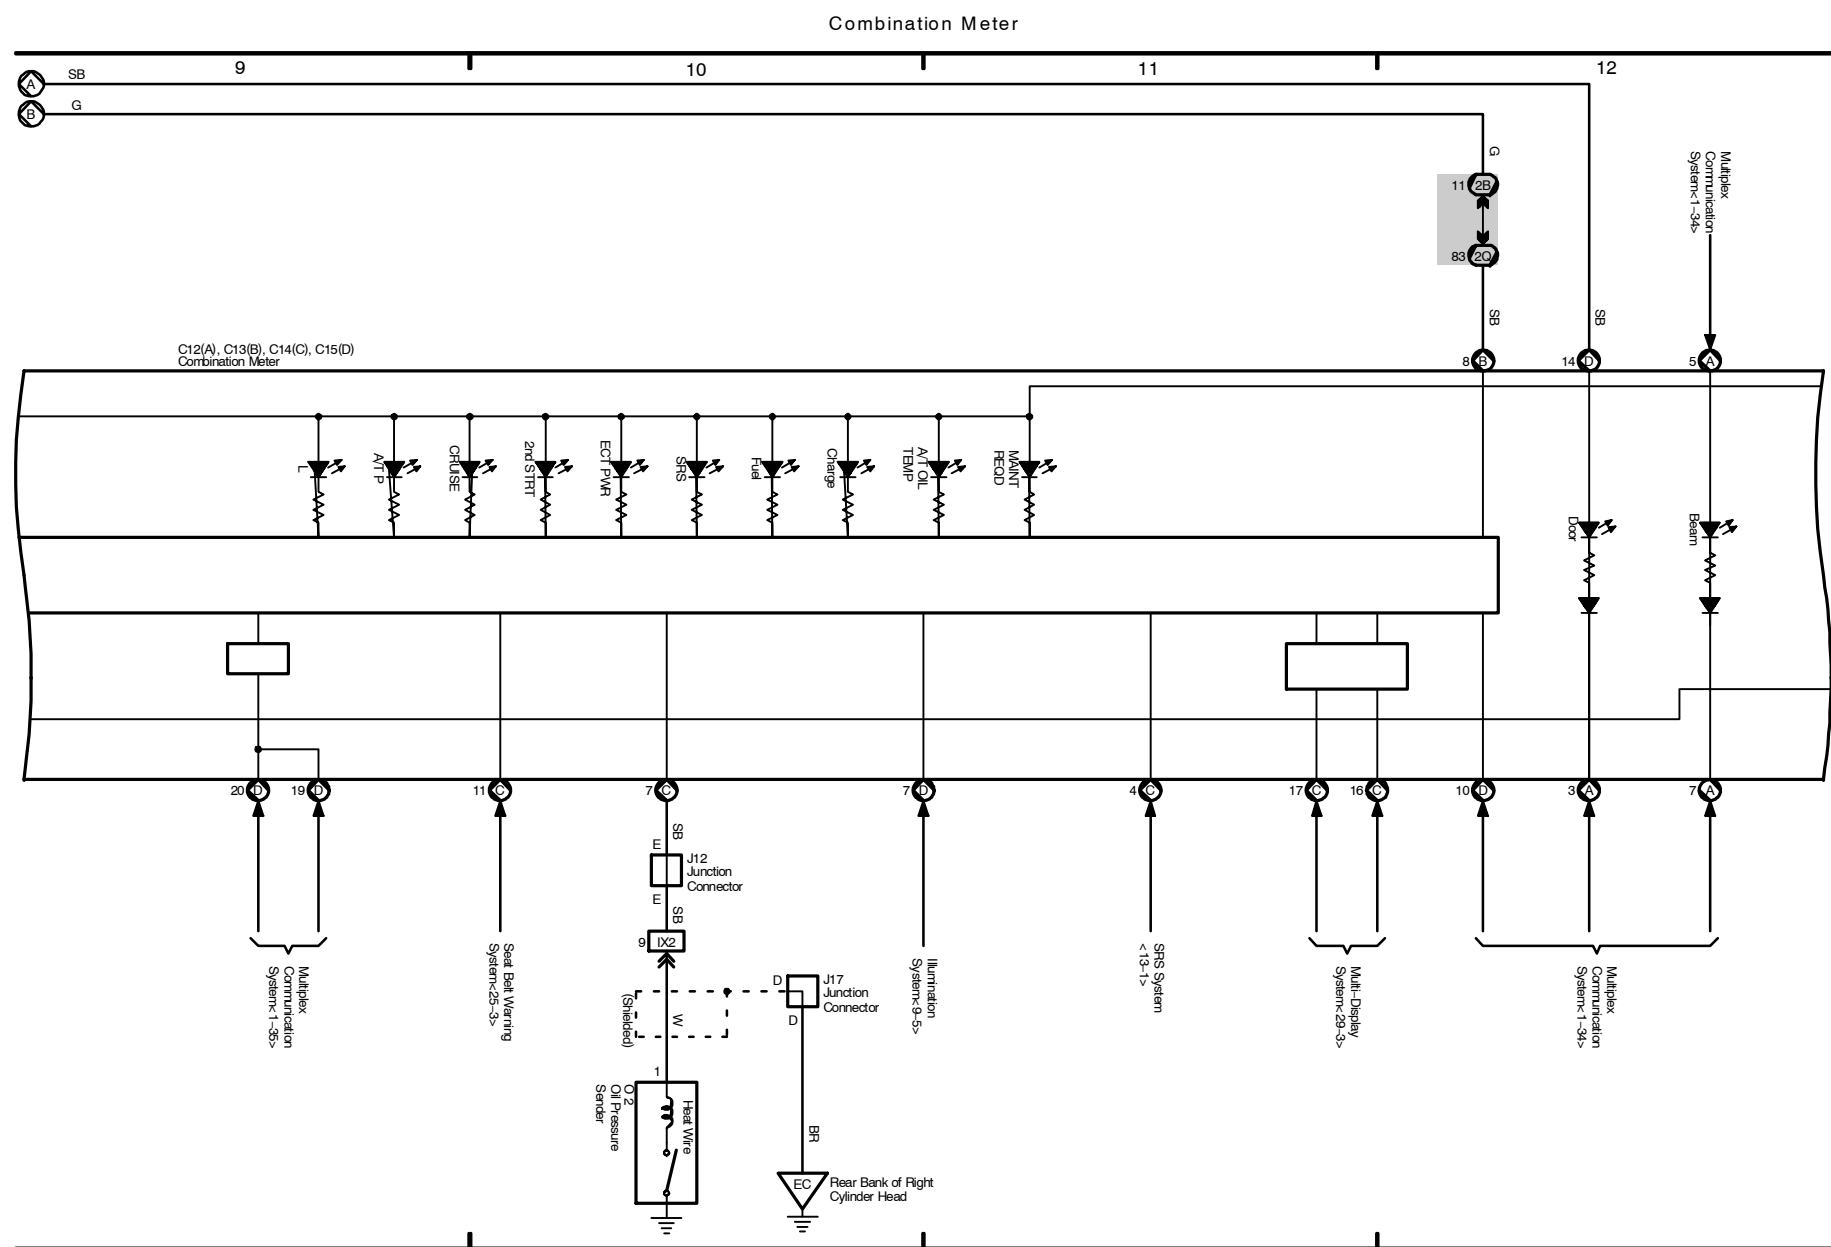


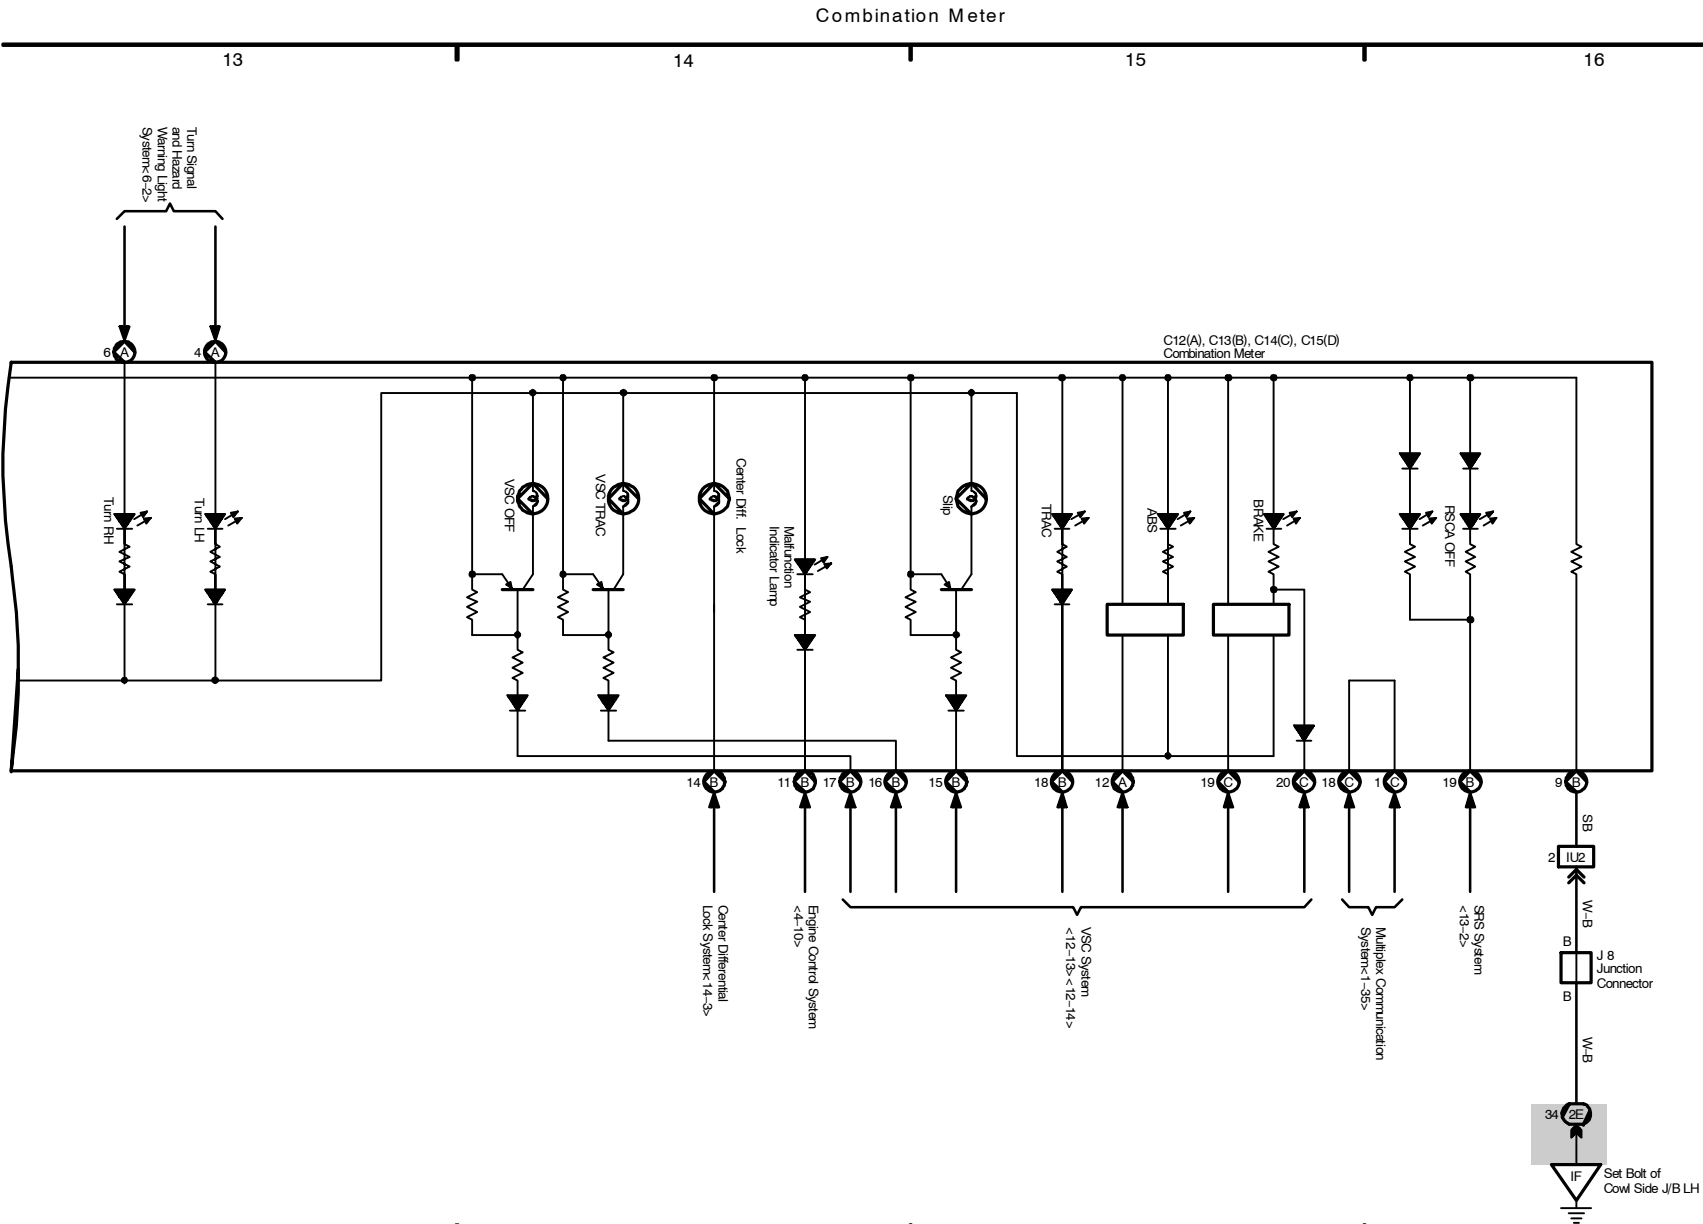


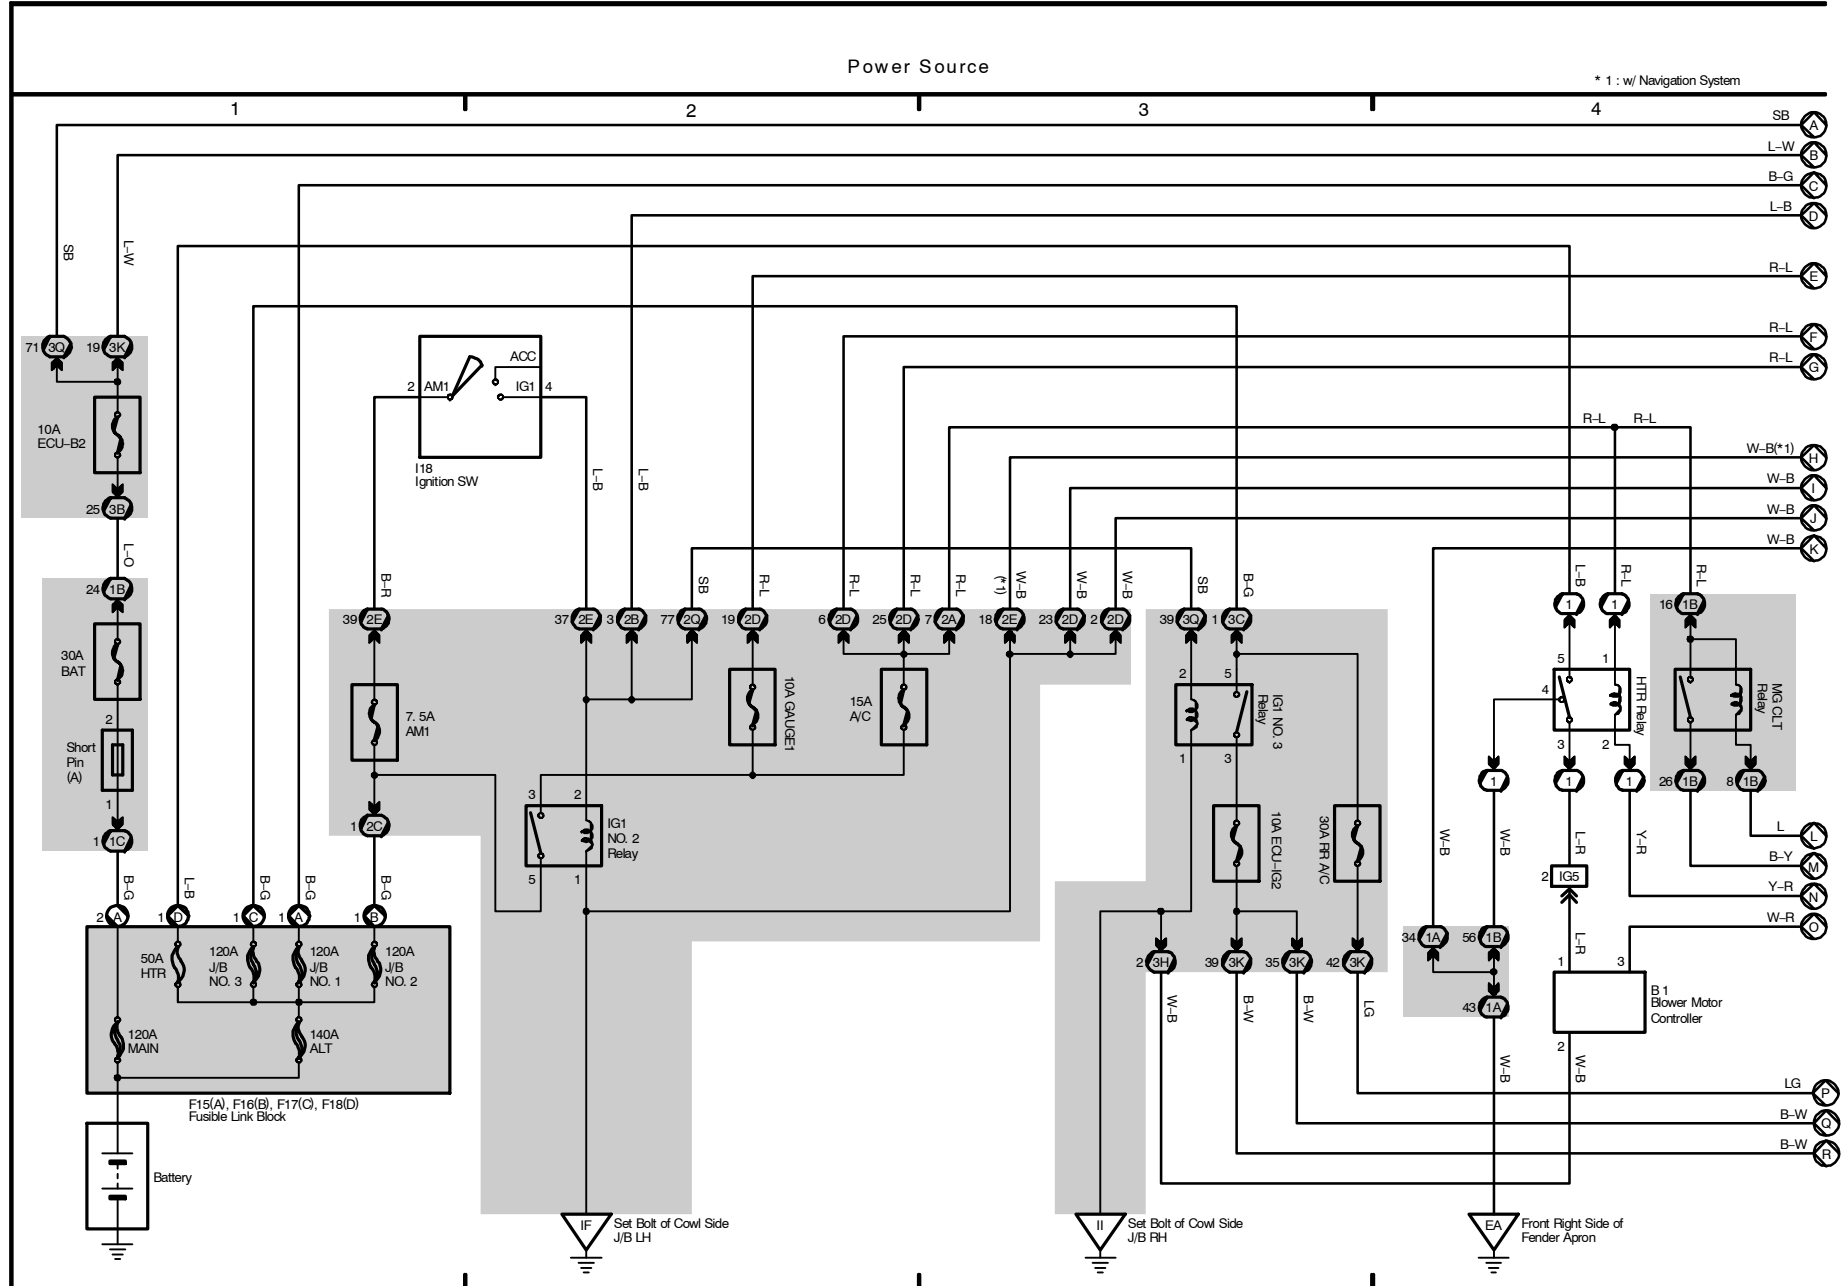


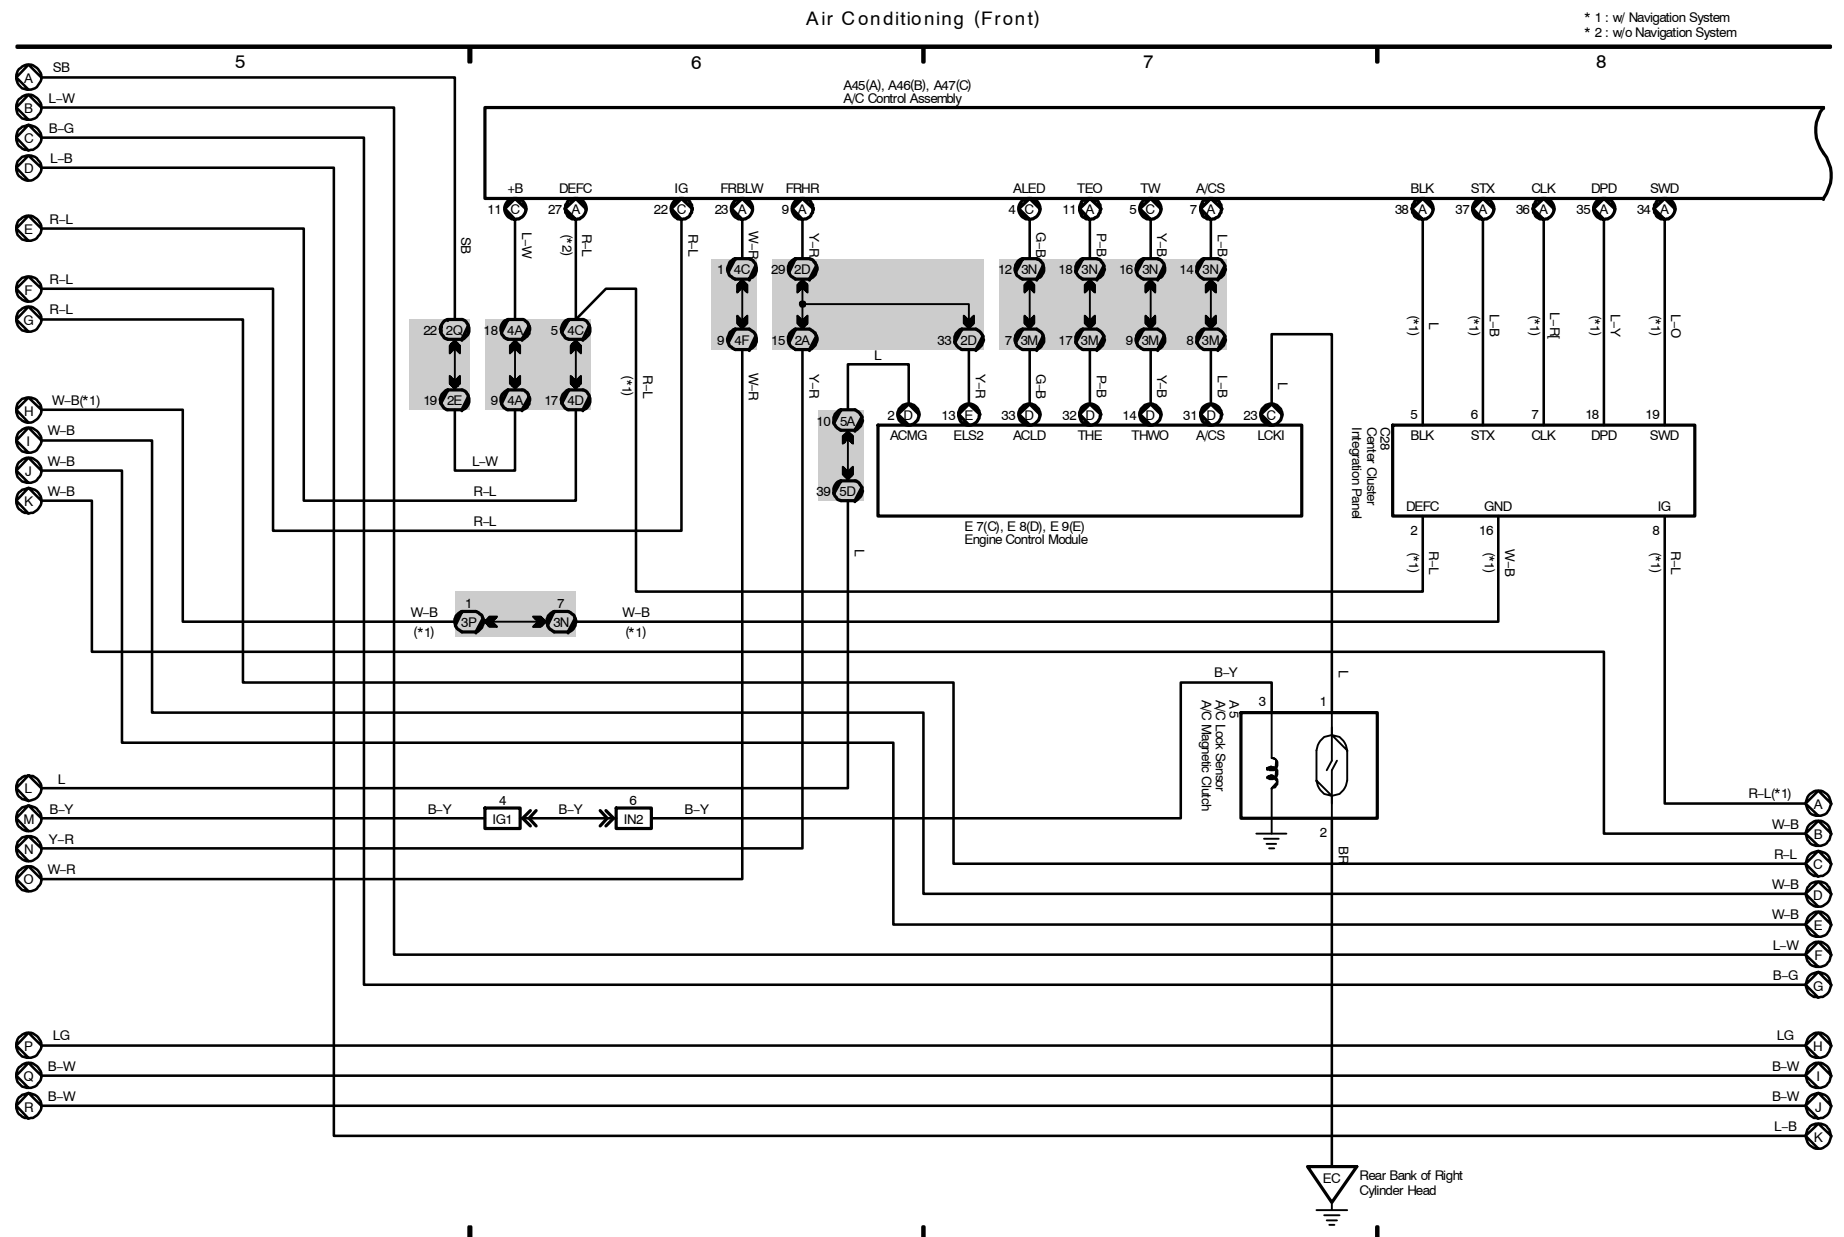

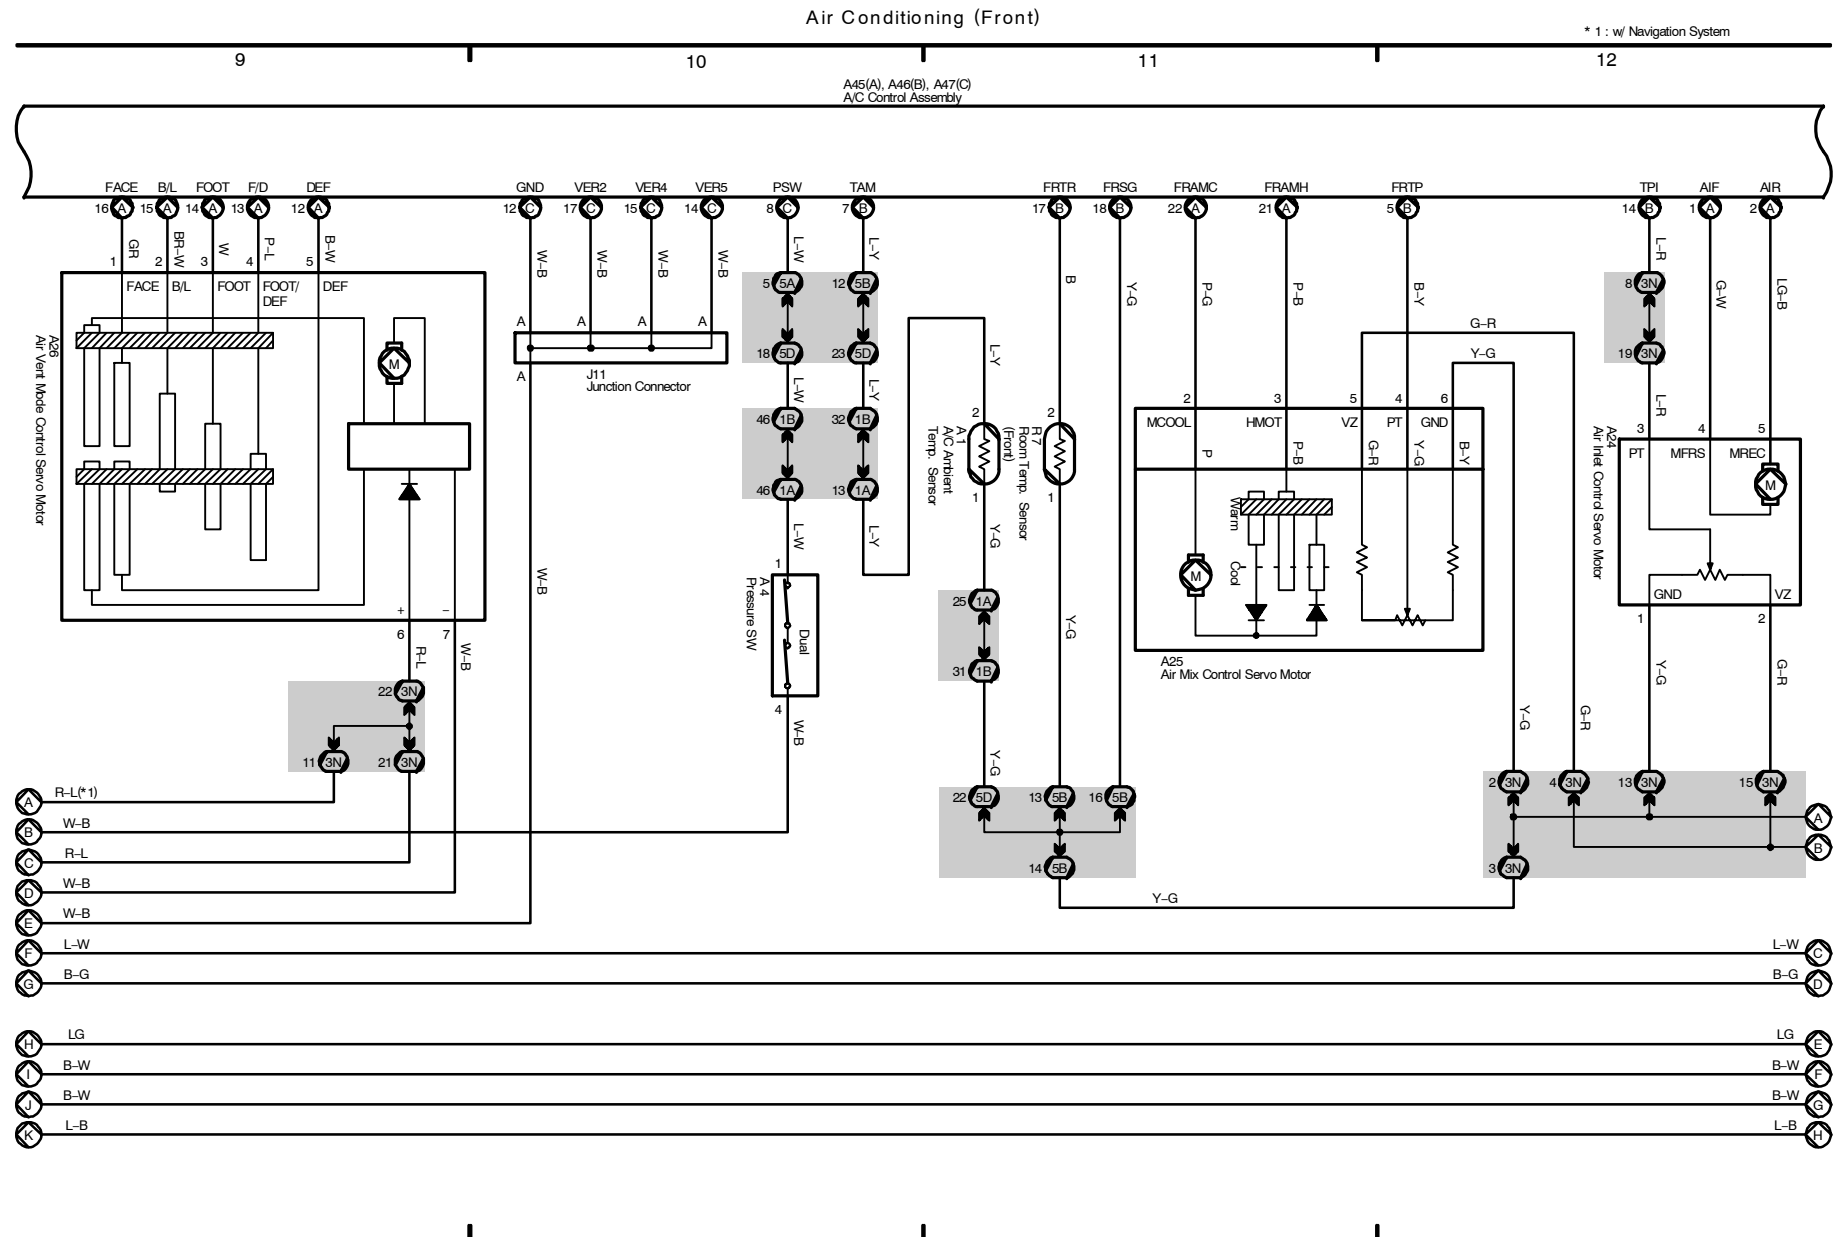

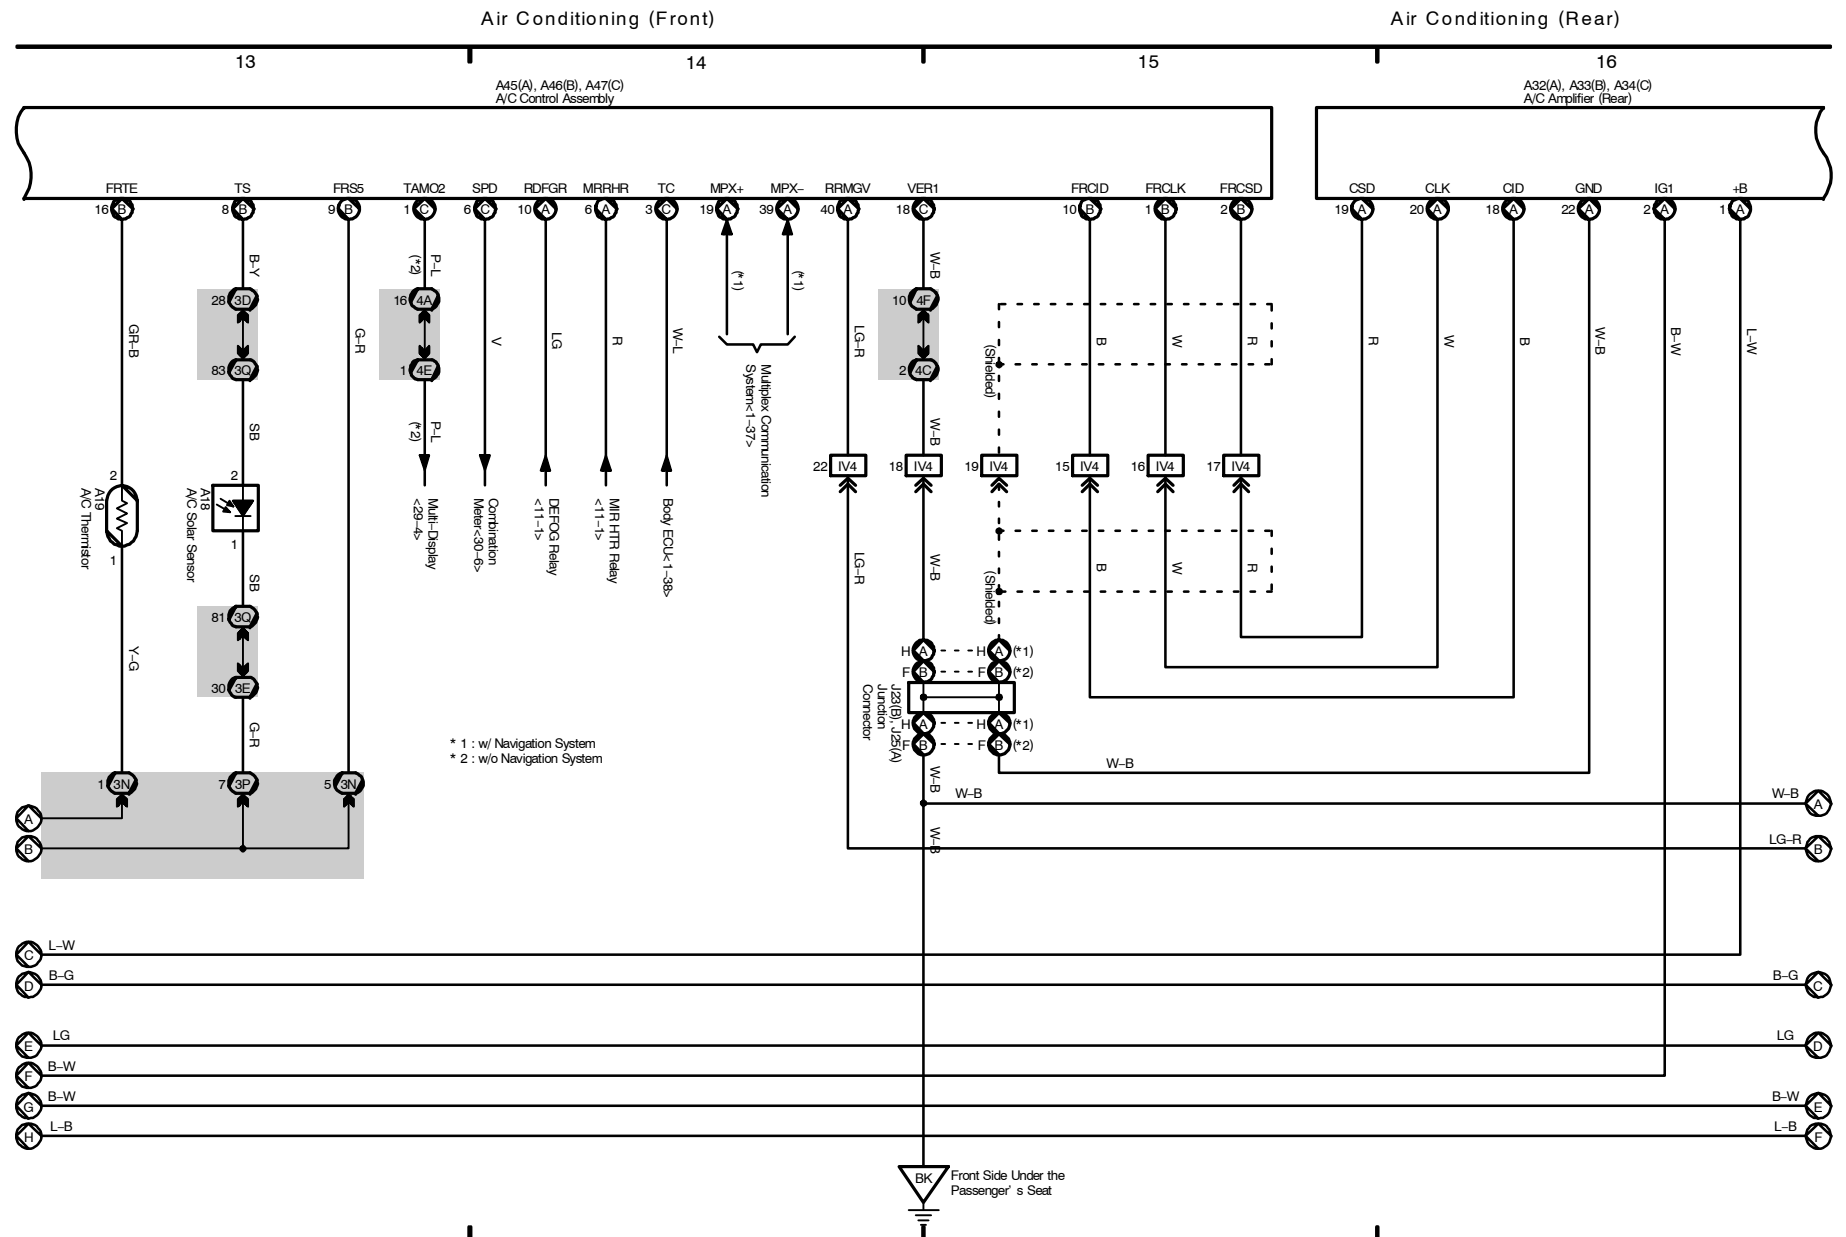

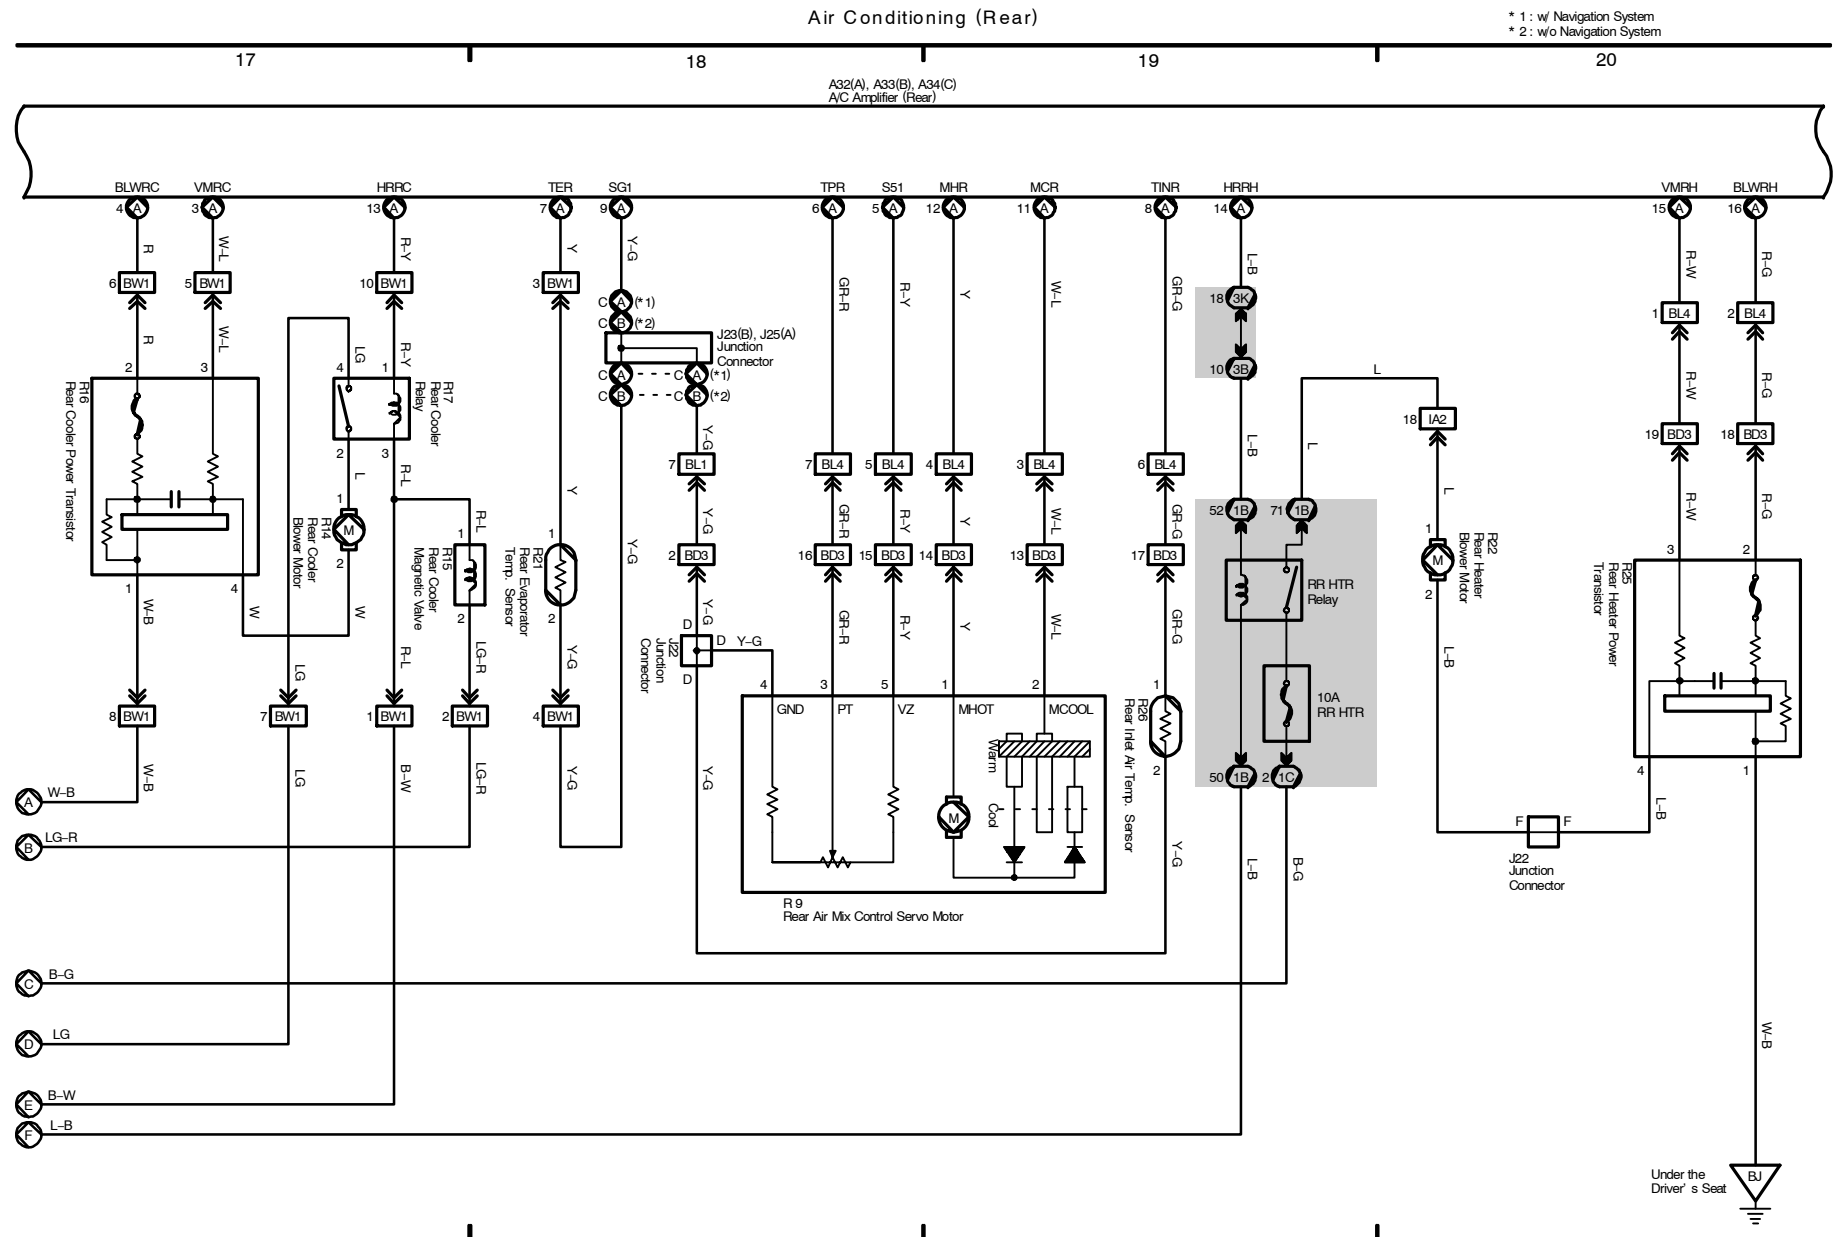

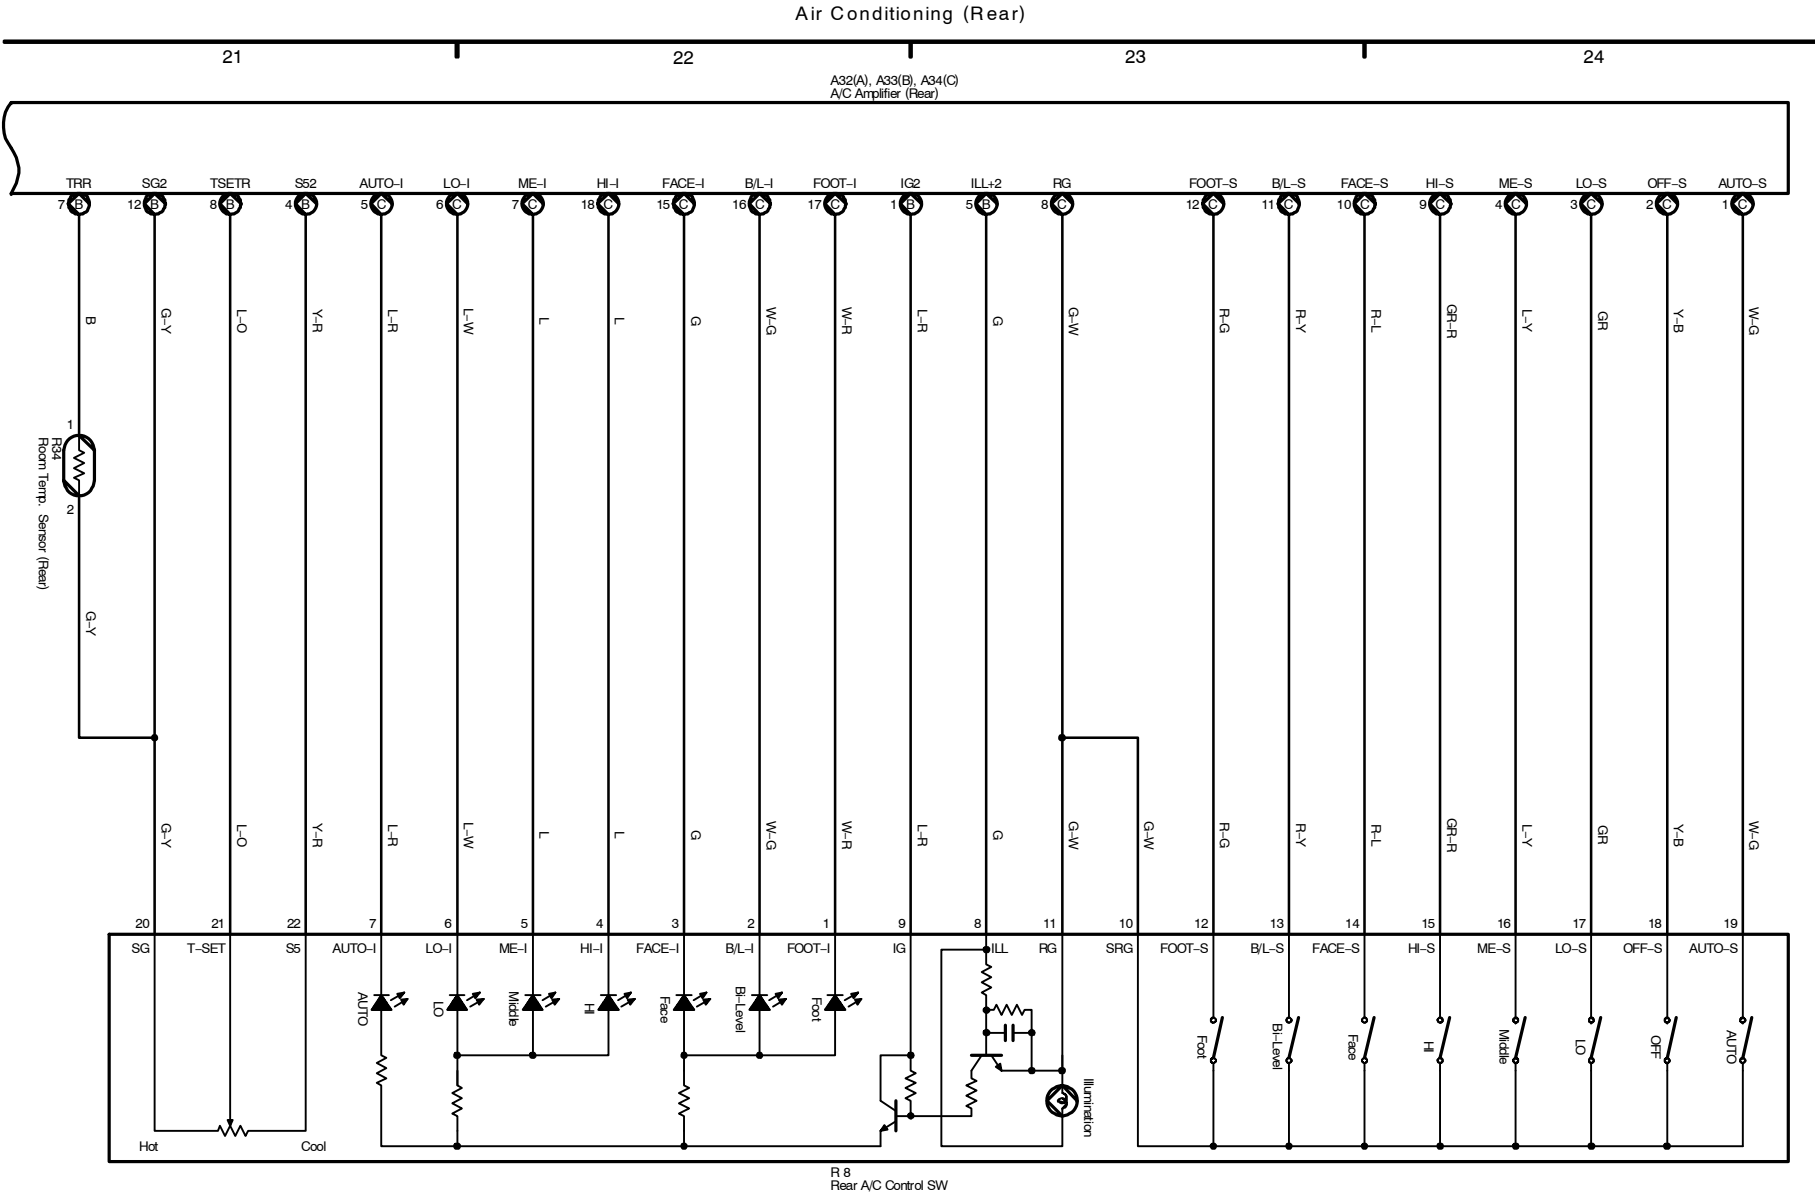

2004 LAND CRUISER (EWD548U)