




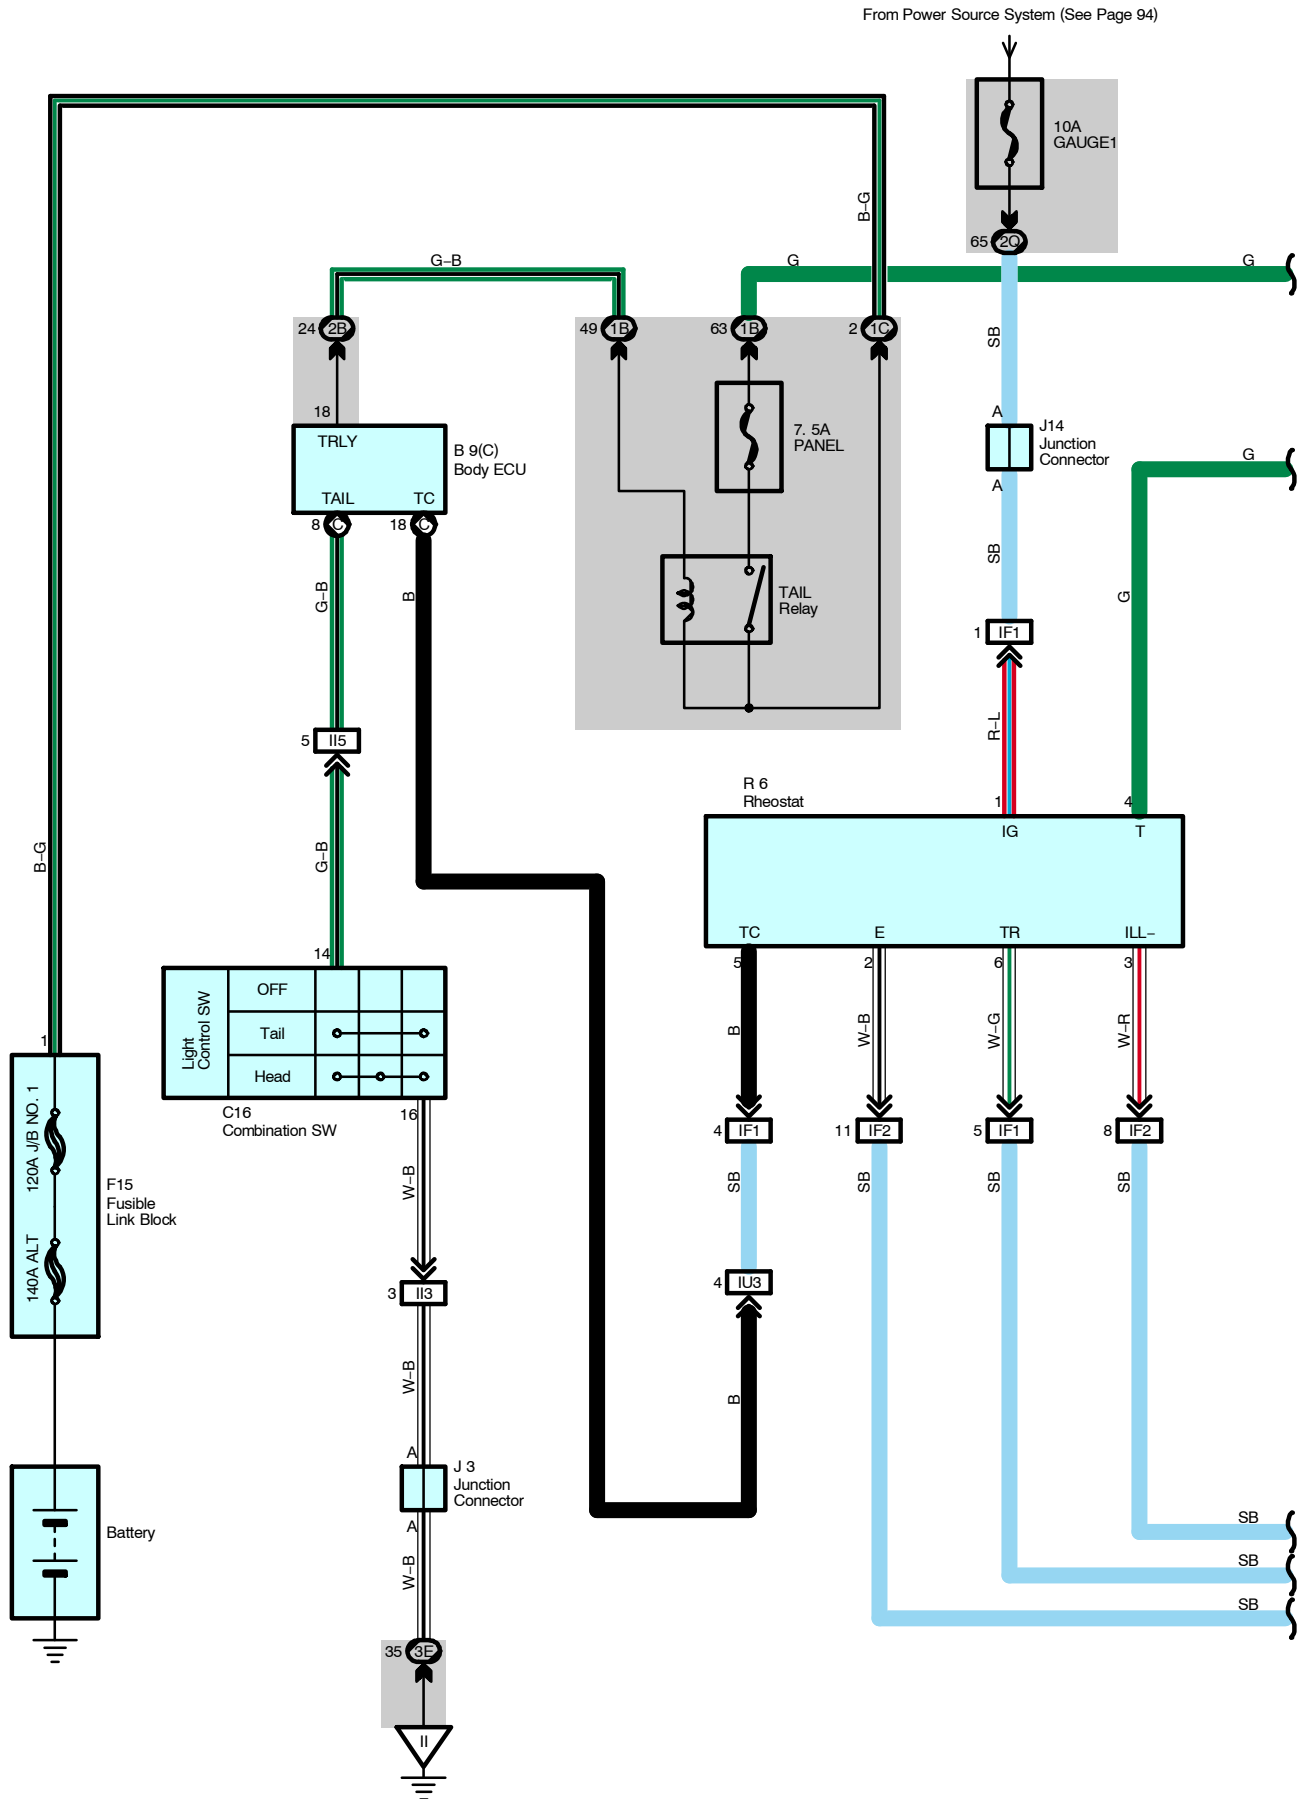

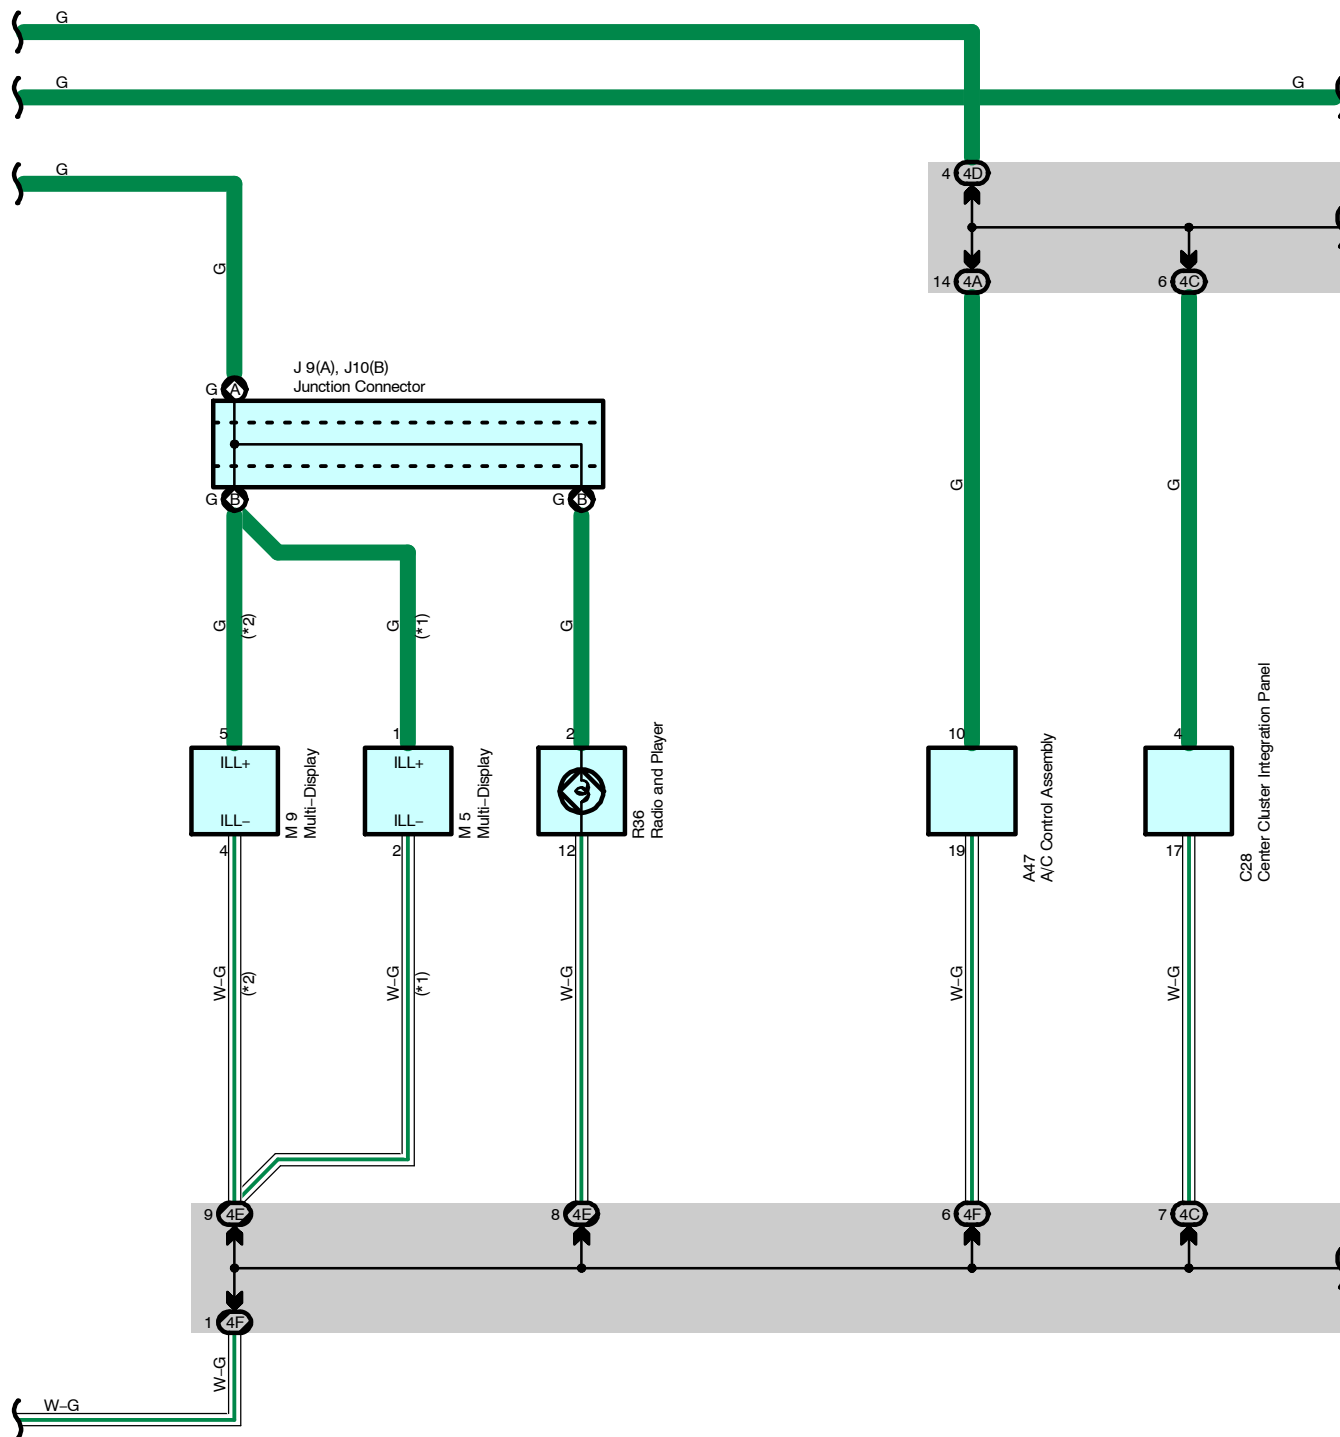

* 1 : w/ Navigation System
 * 2 : w/o Navigation System

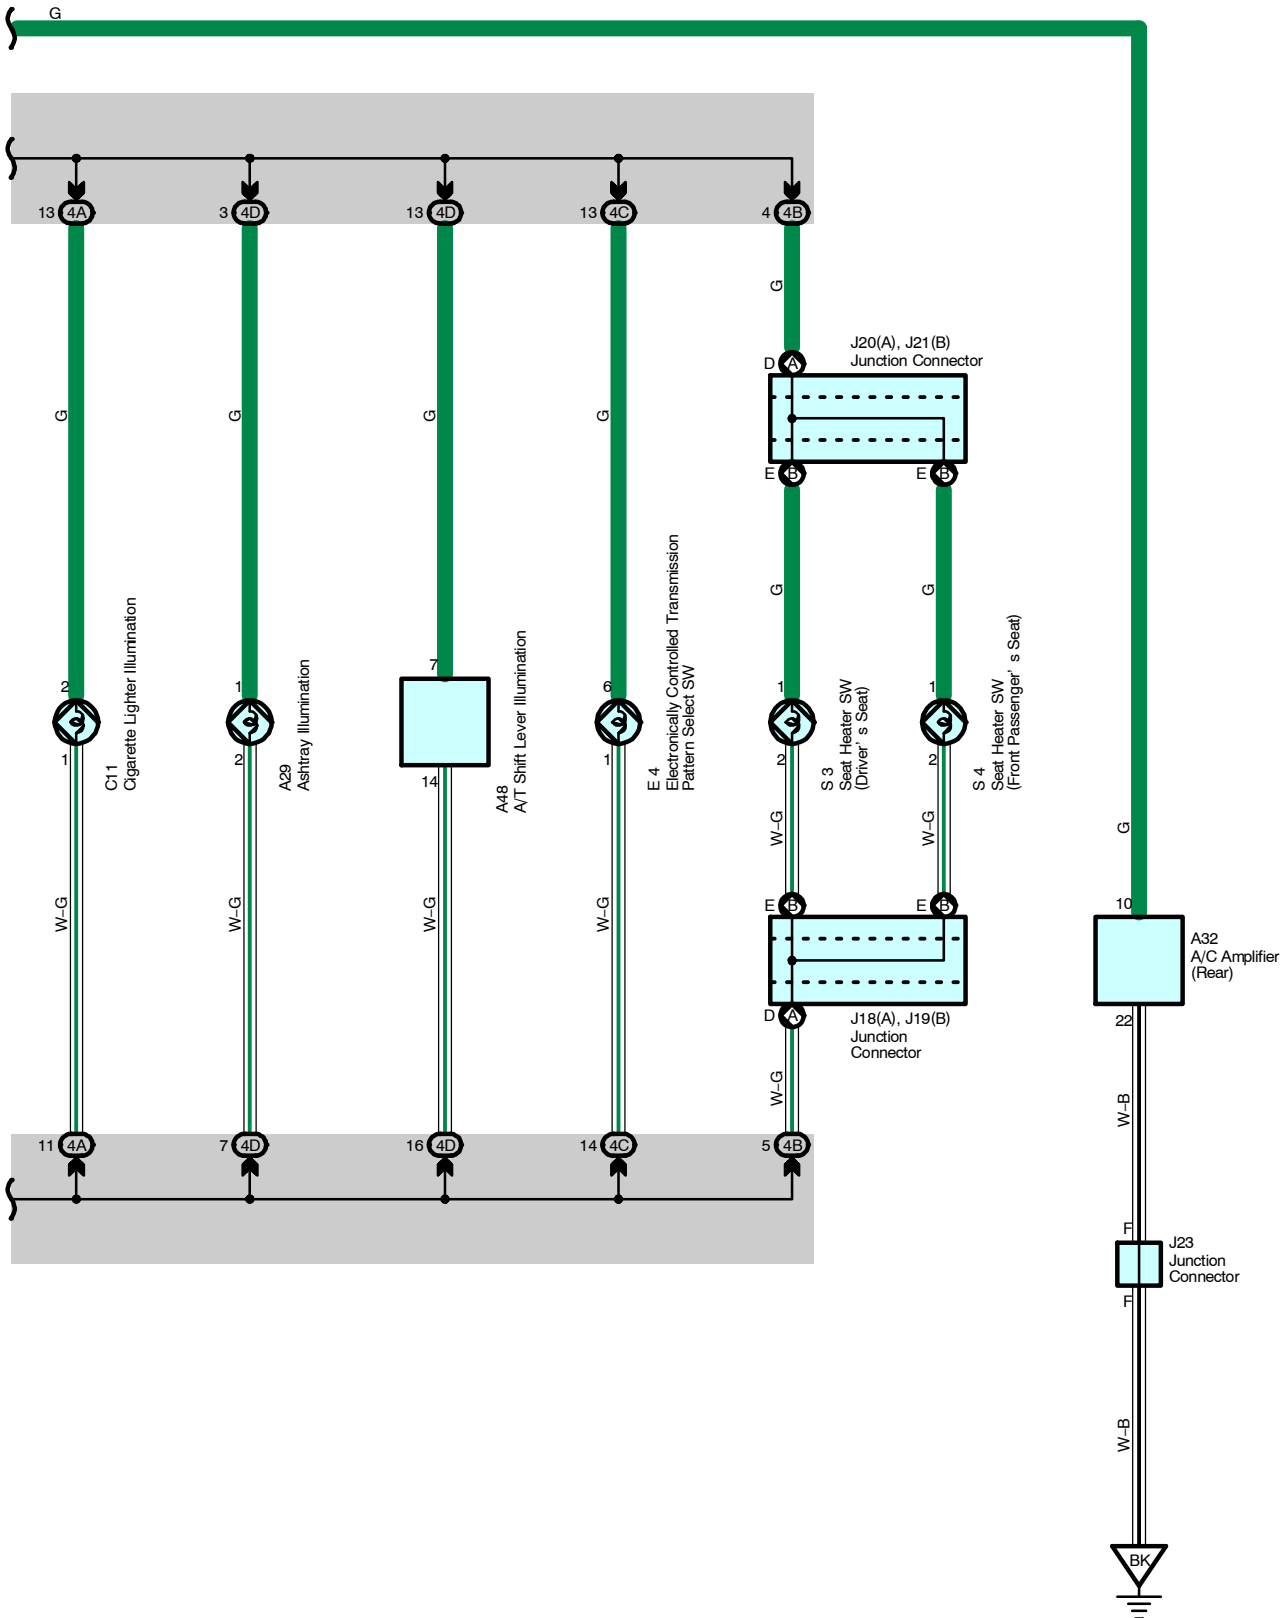

Illumination

Service Hints

C16 Combination SW

14-16 : Closed with light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A29	70	G3	70	M5	71
A32	72	J3	71	M9	71
A47	70	J6	71	O5	72
A48	70	J7	71	P6	71
B9	C	J9	A	P7	71
C11	70	J10	B	R5	71
C13	B	J12	71	R6	71
C15	D	J14	71	R36	71
C16	70	J18	A	R40	71
C18	70	J19	B	S3	71
C28	70	J20	A	S4	71
E4	70	J21	B		
F15	68	J23	72		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4B		
4C		
4D		
4E		
4F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	78	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IH2	80	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II3	80	Dash Wire and Column Wire (Near the Ignition SW)
II5		
IQ1	80	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1	82	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IX2	82	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)

**: Ground Points**

Code	See Page	Ground Points Location
EC	76	Rear Bank of Right Cylinder Head
IF	78	Set Bolt of Cowl Side J/B LH
II	78	Set Bolt of Cowl Side J/B RH
BK	86	Front Side Under the Front Passenger's Seat

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I18	80	Instrument Panel Wire	I19	80	Instrument Panel Wire