








# Interior Light

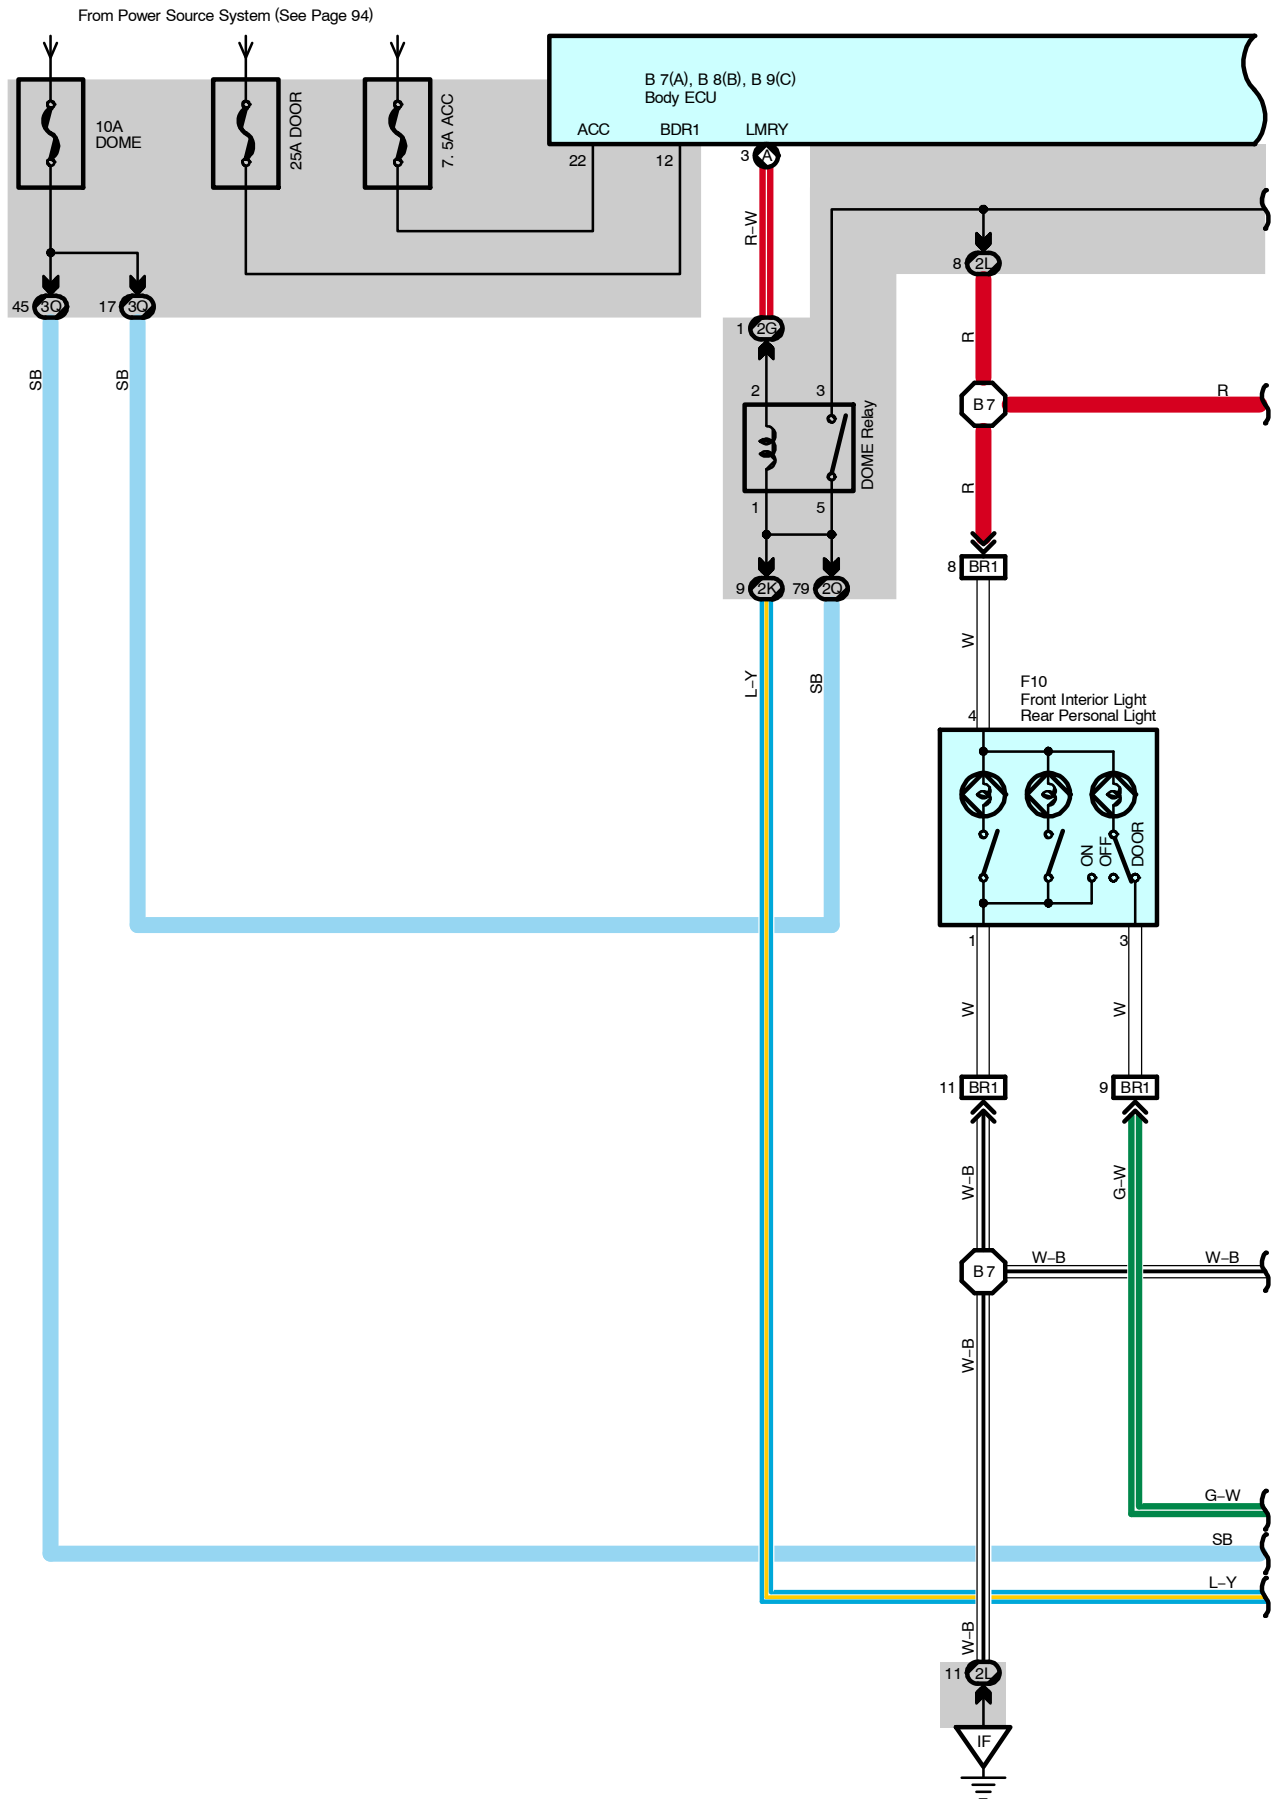

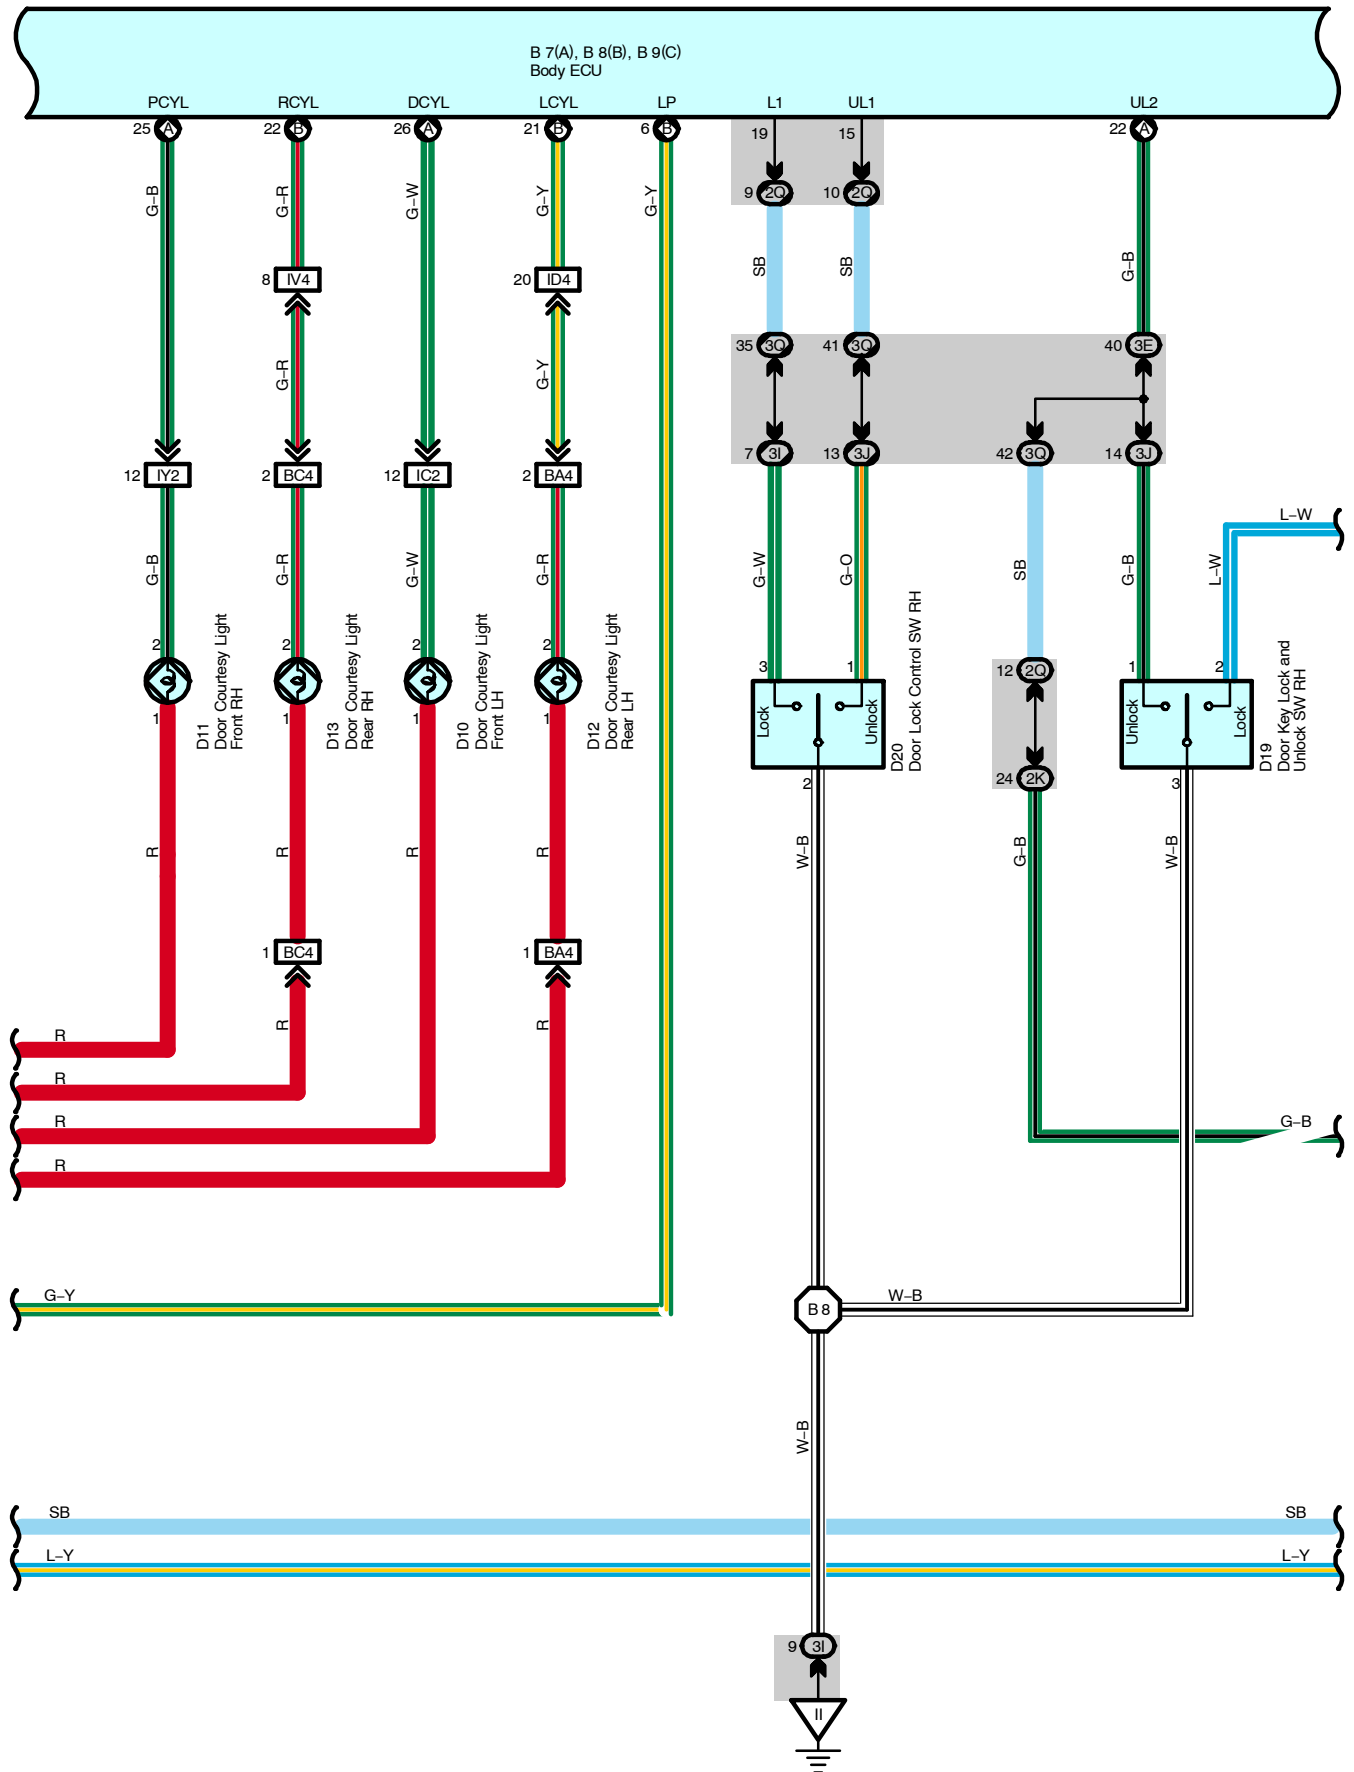

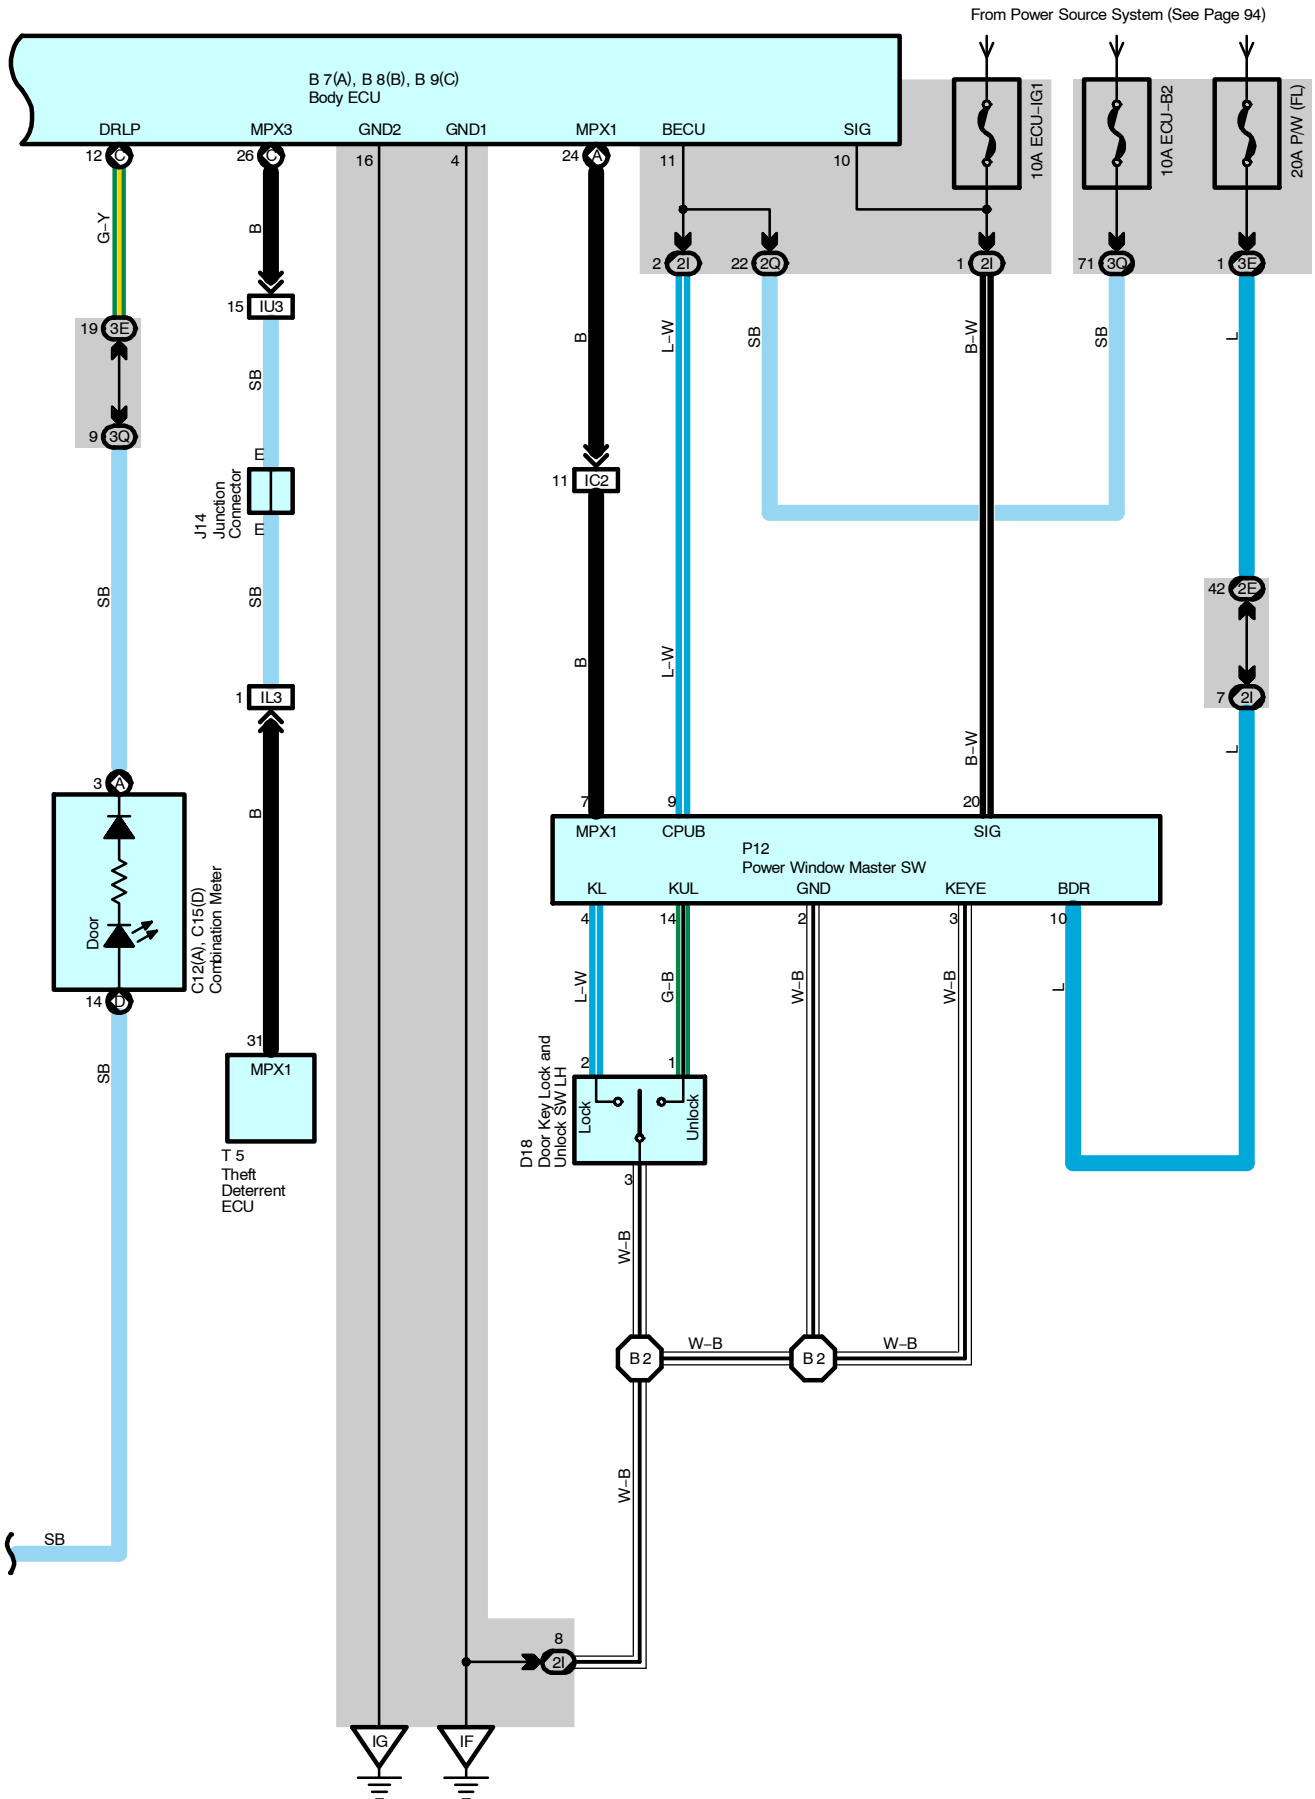

## System Outline

### Normal Operation

- \* When the front Door LH or RH is opened, the door courtesy light front LH, RH and open door warning light is turned on. When the front door LH and RH are closed, the door courtesy light front LH, RH is turned off.
- \* When the rear door LH, RH or the back door is opened, door courtesy light rear LH, RH, rear interior light and the open door warning light is turned on. When the rear door LH, RH and back door are closed, the door courtesy light rear LH, RH is turned off.
- \* When all the doors are closed, the open door warning light is turned off.

### Turn Off Function

When the ignition SW turned off and there is no change in the door courtesy SW for approx. 30 minute, the DOME relay is turned off. The DOME relay is turned on again when any of the following conditions are met.

- \* Ignition SW is turned from OFF position to ACC or ON position
- \* Change to any door courtesy SW
- \* Driver or front passenger door is unlocked by the key or transmitter

### Immediate Turn Off Function at Door Lock

When all the doors are closed, and the driver or front passenger door is locked by the key or transmitter, the DOME relay is turned off, after approx. 80 seconds. However, when the illuminated entry system is operating, the DOME relay is turned off after the operation is completed. the DOME relay is turned on again when any of the following conditions are met.

- \* Ignition SW is turned from OFF position to ACC or ON position
- \* Change to any door courtesy SW
- \* Driver or front passenger door is unlocked by the key or transmitter

### Illuminated Entry System

- \* When any door is opened, each light is turned on.
- \* The light remains on for approx. 15 seconds after all doors are closed, and fades out.
- \* With the ignition SW is at ACC or ON position, and any door open, when all the doors are closed, each light fades out immediately.
- \* When the ignition SW is turned to ACC or ON position during timer lighting, each light fades out immediately.
- \* When the doors are locked during timer lighting, each light fades out immediately.
- \* The lights include, the front interior light, ignition key cylinder light, and front door courtesy light LH, RH.

## ○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| B2   | 72       | D13  | 72       | F11  | 72       |
| B3   | 72       | D14  | 72       | J14  | 71       |
| B7   | A        | D15  | 72       | J22  | 72       |
| B8   | B        | D16  | 72       | P12  | 73       |
| B9   | C        | D17  | 72       | R27  | 73       |
| C12  | A        | D18  | 72       | T5   | 71       |
| C15  | D        | D19  | 72       | T10  | 71       |
| D10  | 72       | D20  | 72       | V6   | 73       |
| D11  | 72       | D27  | 72       | V7   | 73       |
| D12  | 72       | F10  | 72       |      |          |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                      |
|------|----------|---------------------------------------------------------------------------|
| 2E   | 28       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                          |
| 2G   |          |                                                                           |
| 2I   | 28       | Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)                 |
| 2K   | 28       | Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)                    |
| 2L   | 28       | Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)                     |
| 2Q   | 30       | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3E   | 40       | Dash Wire and Cowl Side J/B RH (Right Kick Panel)                         |
| 3I   | 40       | Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)                |
| 3J   |          |                                                                           |
| 3K   | 40       | Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)                   |
| 3Q   | 42       | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |

# Interior Light

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                    |
|------|----------|-------------------------------------------------------------------------------|
| IC2  | 78       | Front Door LH Wire and Dash Wire (Left Kick Panel)                            |
| ID4  | 78       | Dash Wire and Floor No.1 Wire (Left Kick Panel)                               |
| IL3  | 80       | Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center) |
| IU3  | 82       | Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)        |
| IV3  | 82       | Dash Wire and Floor No.2 Wire (Right Kick Panel)                              |
| IV4  |          |                                                                               |
| IY2  | 82       | Front Door RH Wire and Dash Wire (Right Kick Panel)                           |
| BA4  | 86       | Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)            |
| BC4  | 86       | Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)           |
| BH1  | 86       | Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)            |
| BH2  |          |                                                                               |
| BP3  | 88       | Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)           |
| BP4  |          |                                                                               |
| BQ2  | 88       | Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)       |
| BR1  | 88       | Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)                        |

## : Ground Points

| Code | See Page | Ground Points Location       |
|------|----------|------------------------------|
| IF   | 78       | Set Bolt of Cowl Side J/B LH |
| IG   |          |                              |
| II   | 78       | Set Bolt of Cowl Side J/B RH |
| BJ   | 86       | Under the Driver's Seat      |

## : Splice Points

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| B2   | 88       | Front Door LH Wire              | B8   | 88       | Front Door RH Wire              |
| B7   | 88       | Roof No.1 Wire                  | B11  | 88       | Floor No.1 Wire                 |

