


Power Outlet

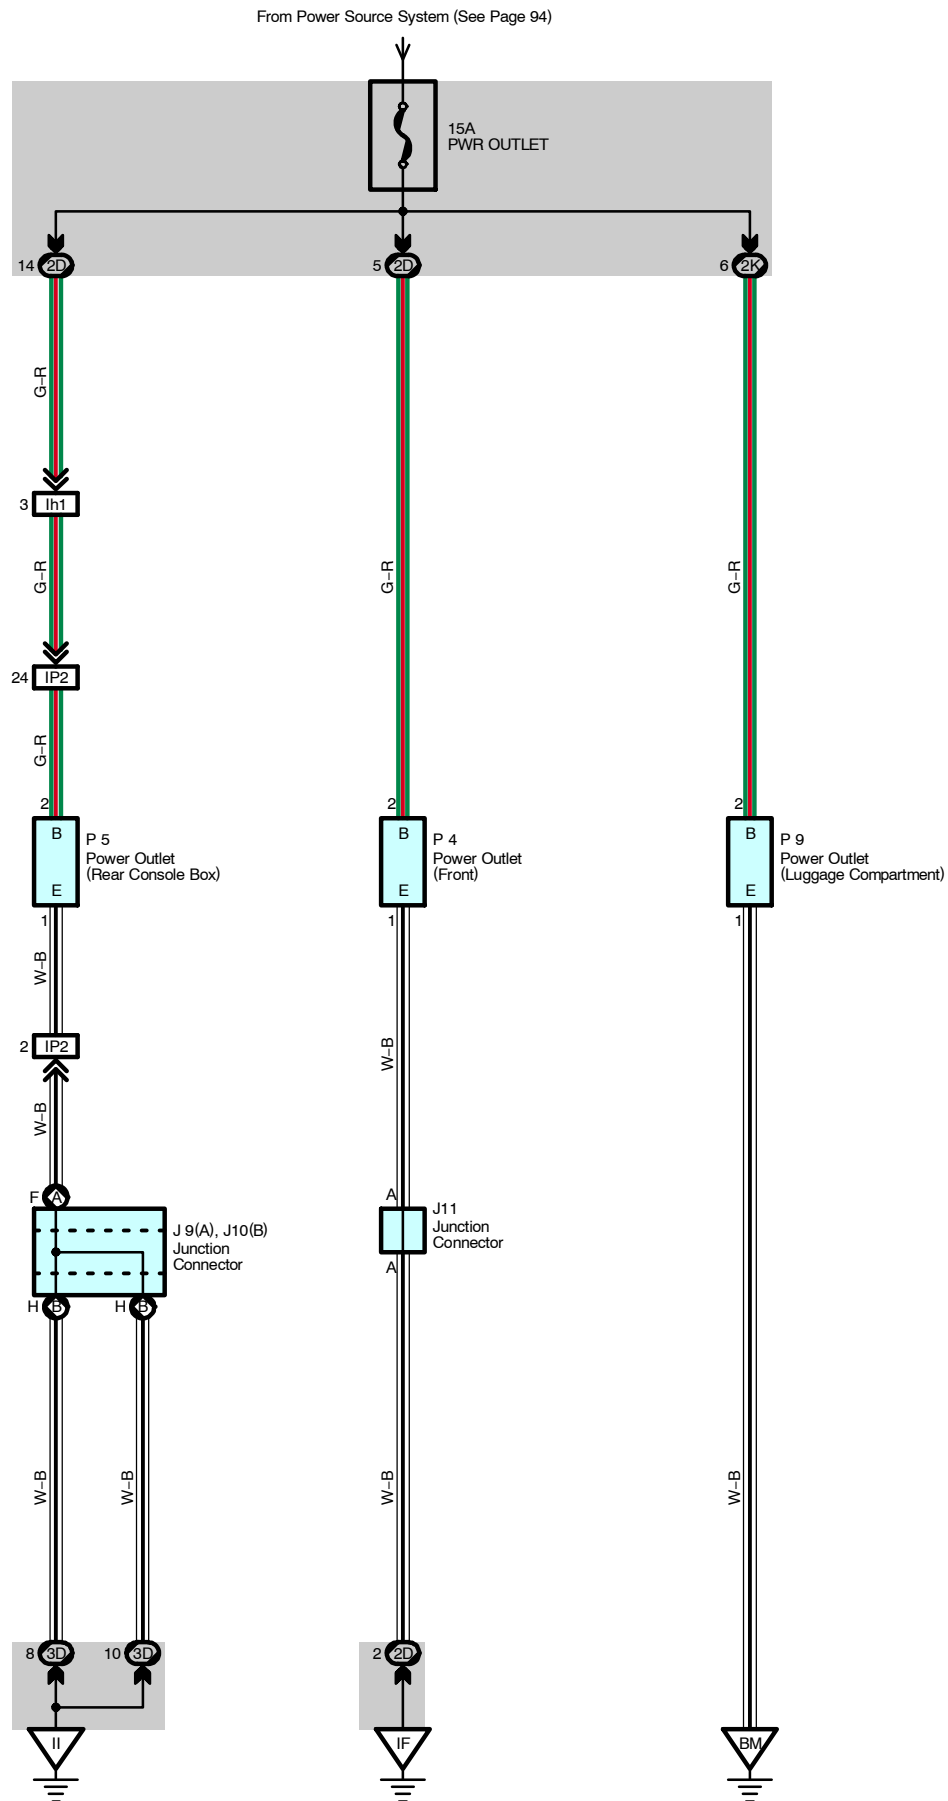

Service Hints

P4 Power Outlet (Front)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

P5 Power Outlet (Rear Console Box)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

P9 Power Outlet (Luggage Compartment)

- 2-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1-Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
J9	A	71	J11	71	P5	71
J10	B	71	P4	71	P9	73

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IP2	80	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
Ih1	84	Dash Wire and Dash Wire (Center Side of Front Console)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH
II	78	Set Bolt of Cowl Side J/B RH
BM	86	Left Rear Side Quarter Panel