


From Power Source System (See Page 94)

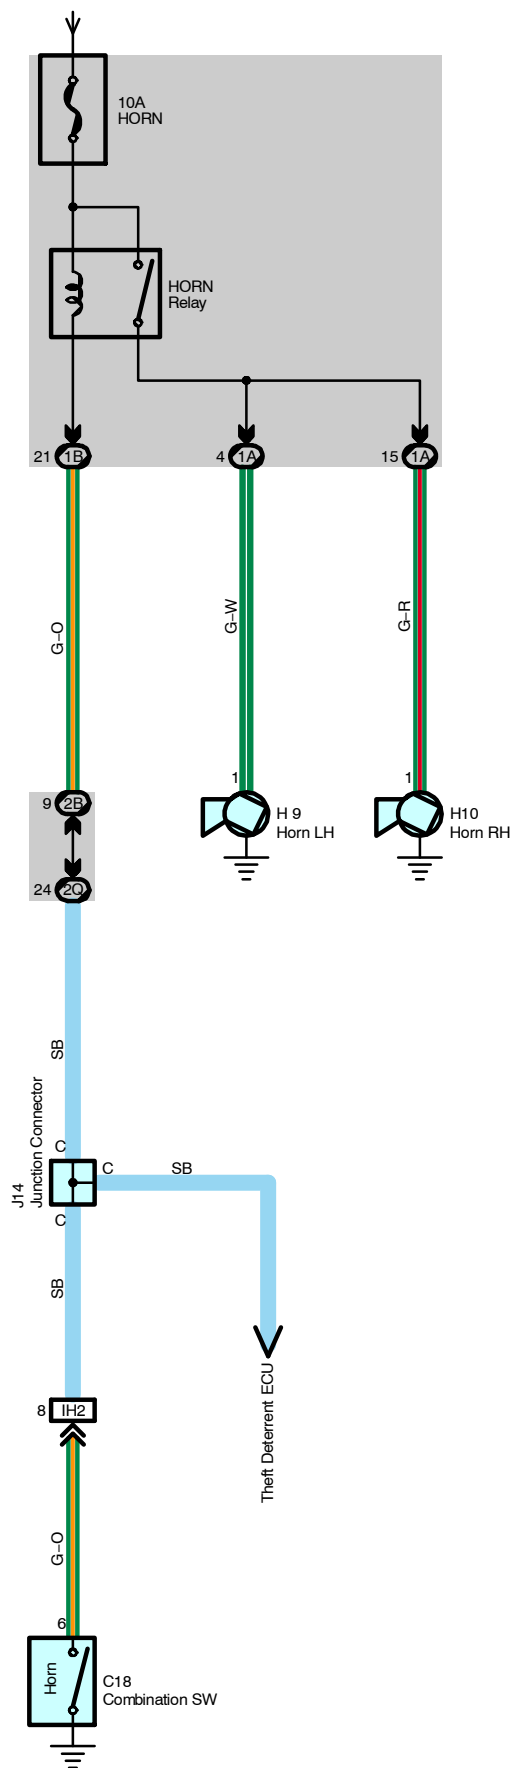

Service Hints

C18 Combination SW

6-Ground :Continuity with horn SW on

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C18	70	H10	69		
H9	69	J14	71		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH2	80	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)