


Remote Control Mirror

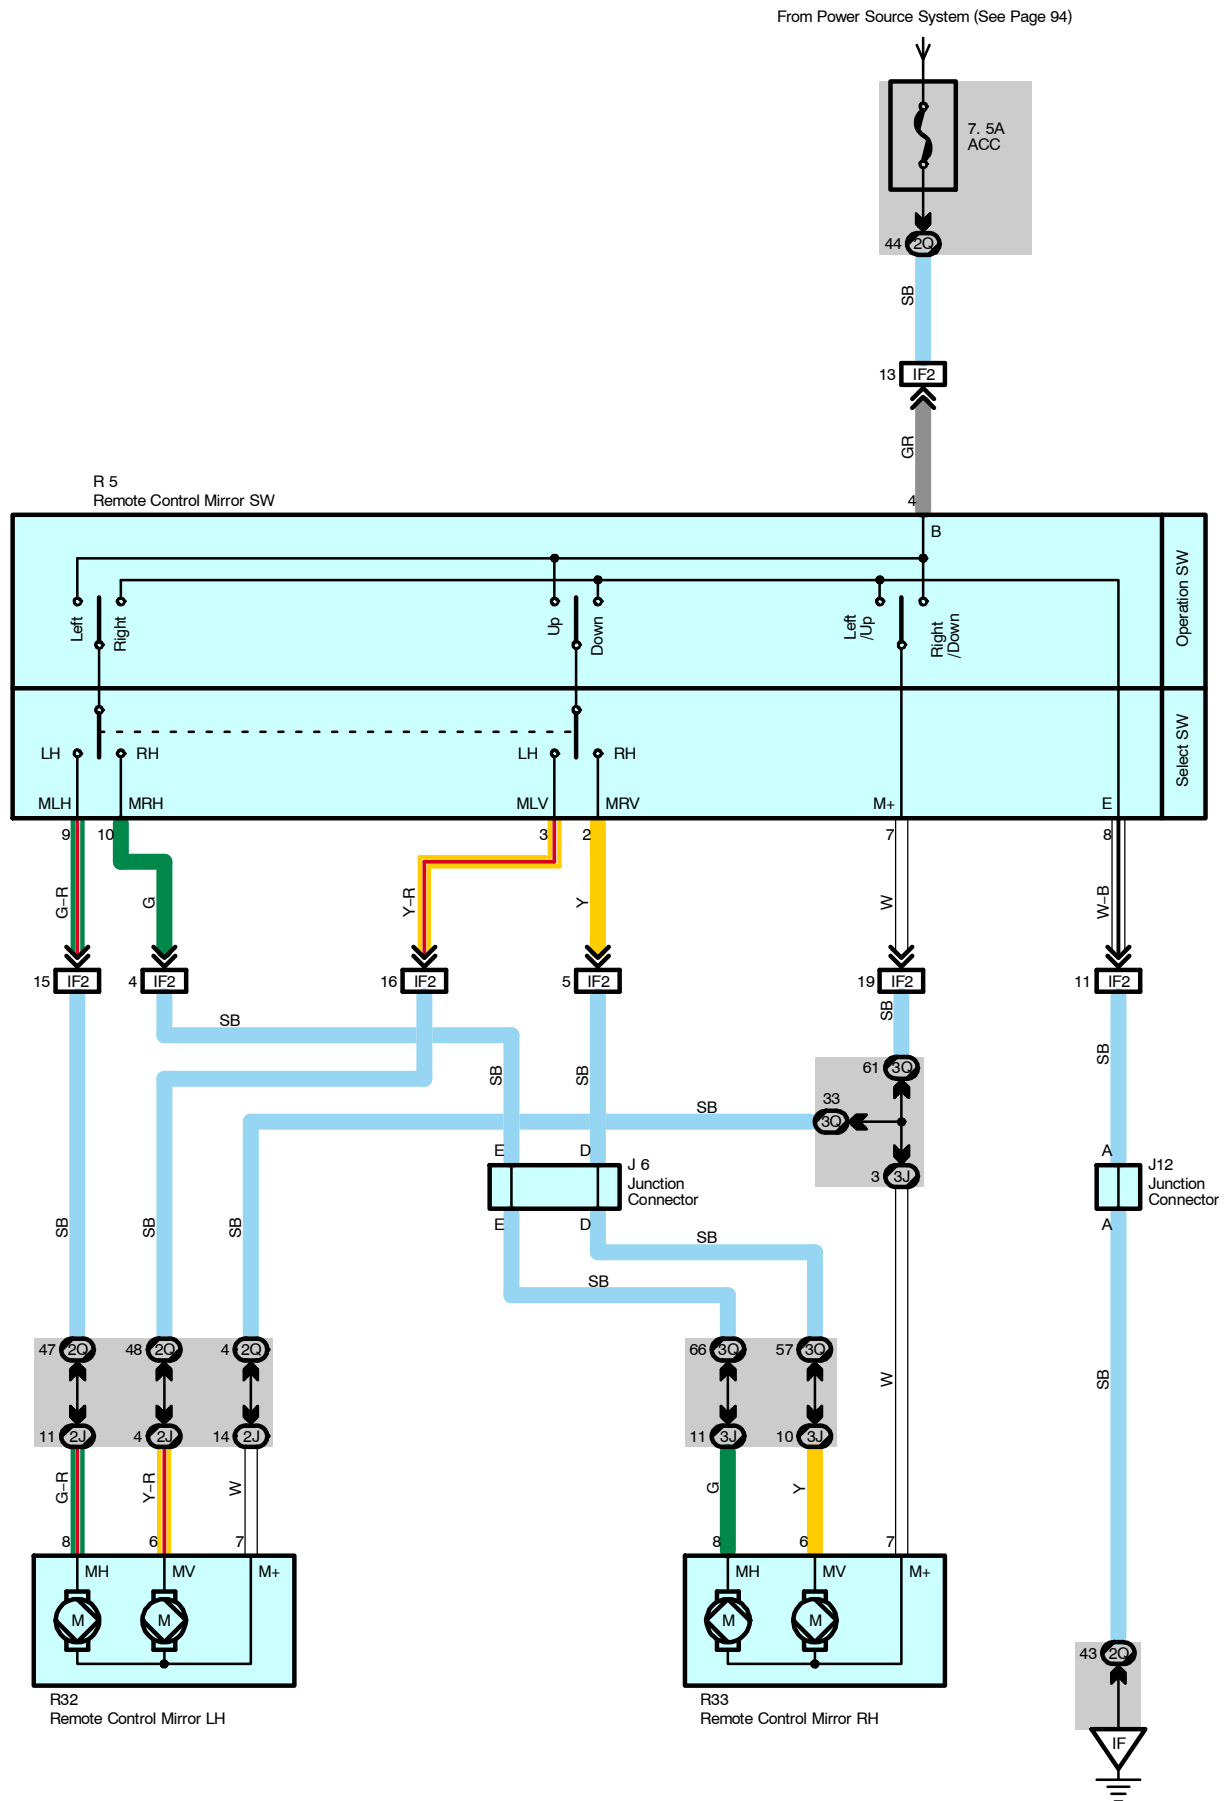

Service Hints

R5 Remote Control Mirror SW

- 7-8 : Continuity with operation SW at LEFT or UP position
- 4-7 : Continuity with operation SW at RIGHT or DOWN position
- 4-9 : Continuity with operation SW at LEFT position and the select SW at LH position
- 4-3 : Continuity with operation SW at UP position and the select SW at LH position
- 8-10 : Continuity with operation SW at RIGHT position and the select SW at RH position
- 2-8 : Continuity with operation SW at DOWN position and the select SW at RH position
- 4-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 8-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J6	71	R5	71	R33	73
J12	71	R32	73		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2J	28	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3J	40	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF2	78	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH