



Seat Heater

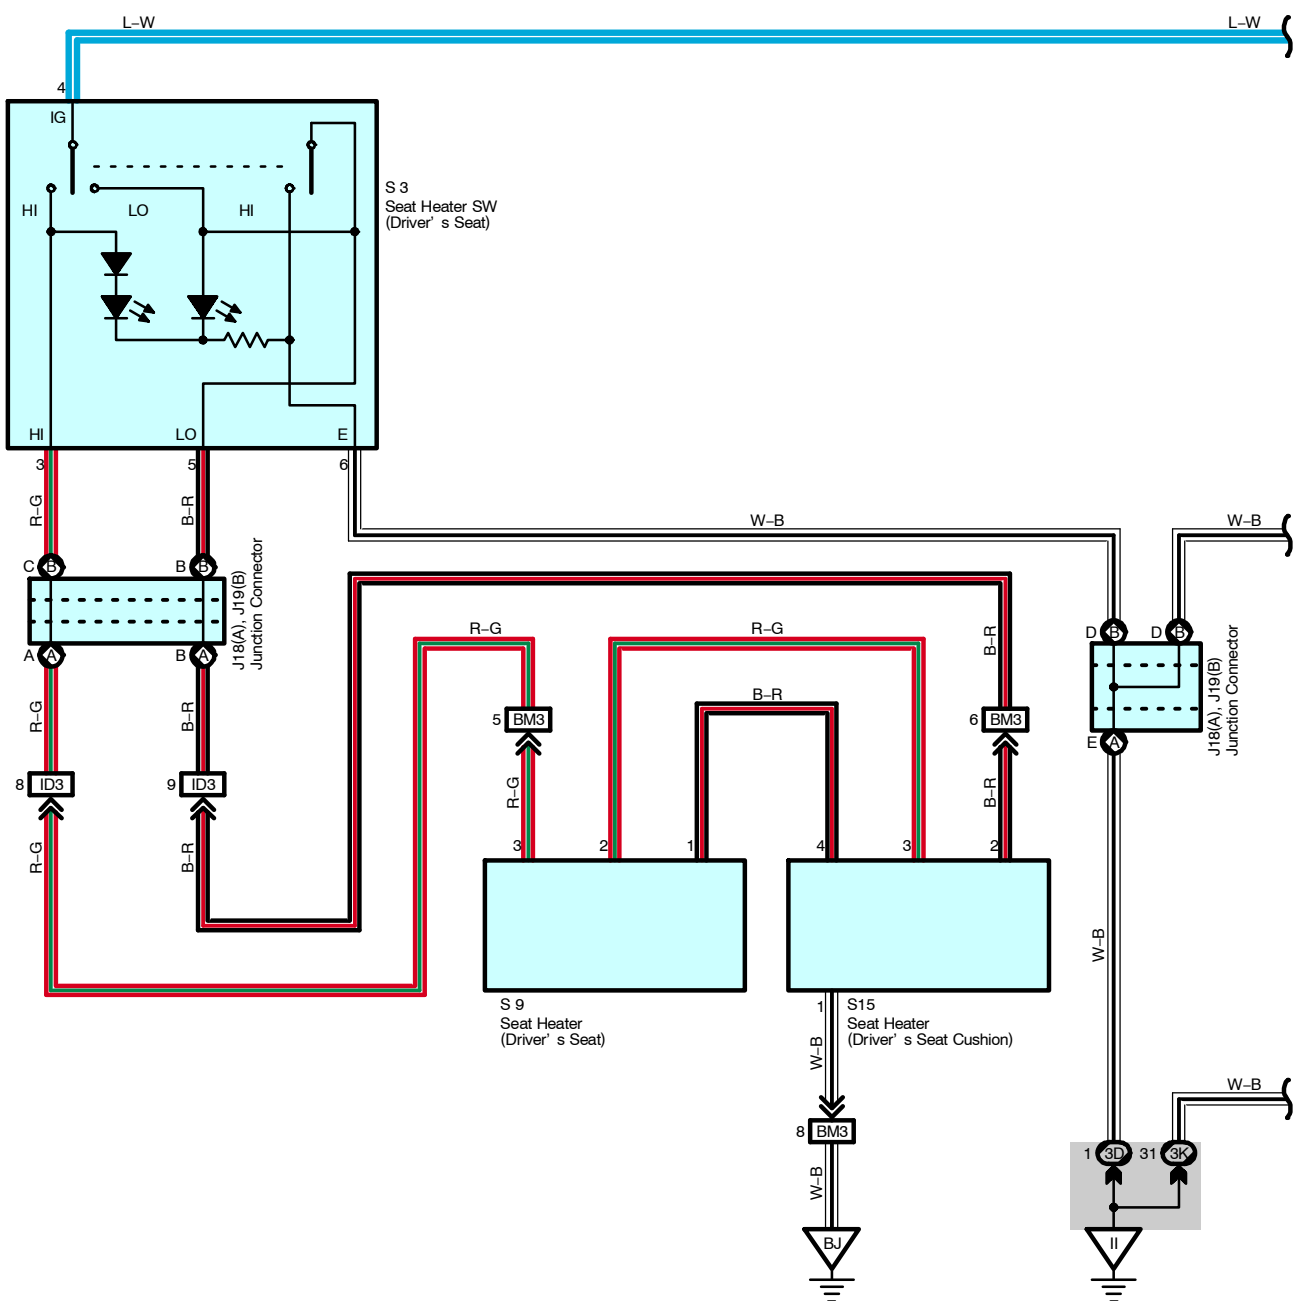

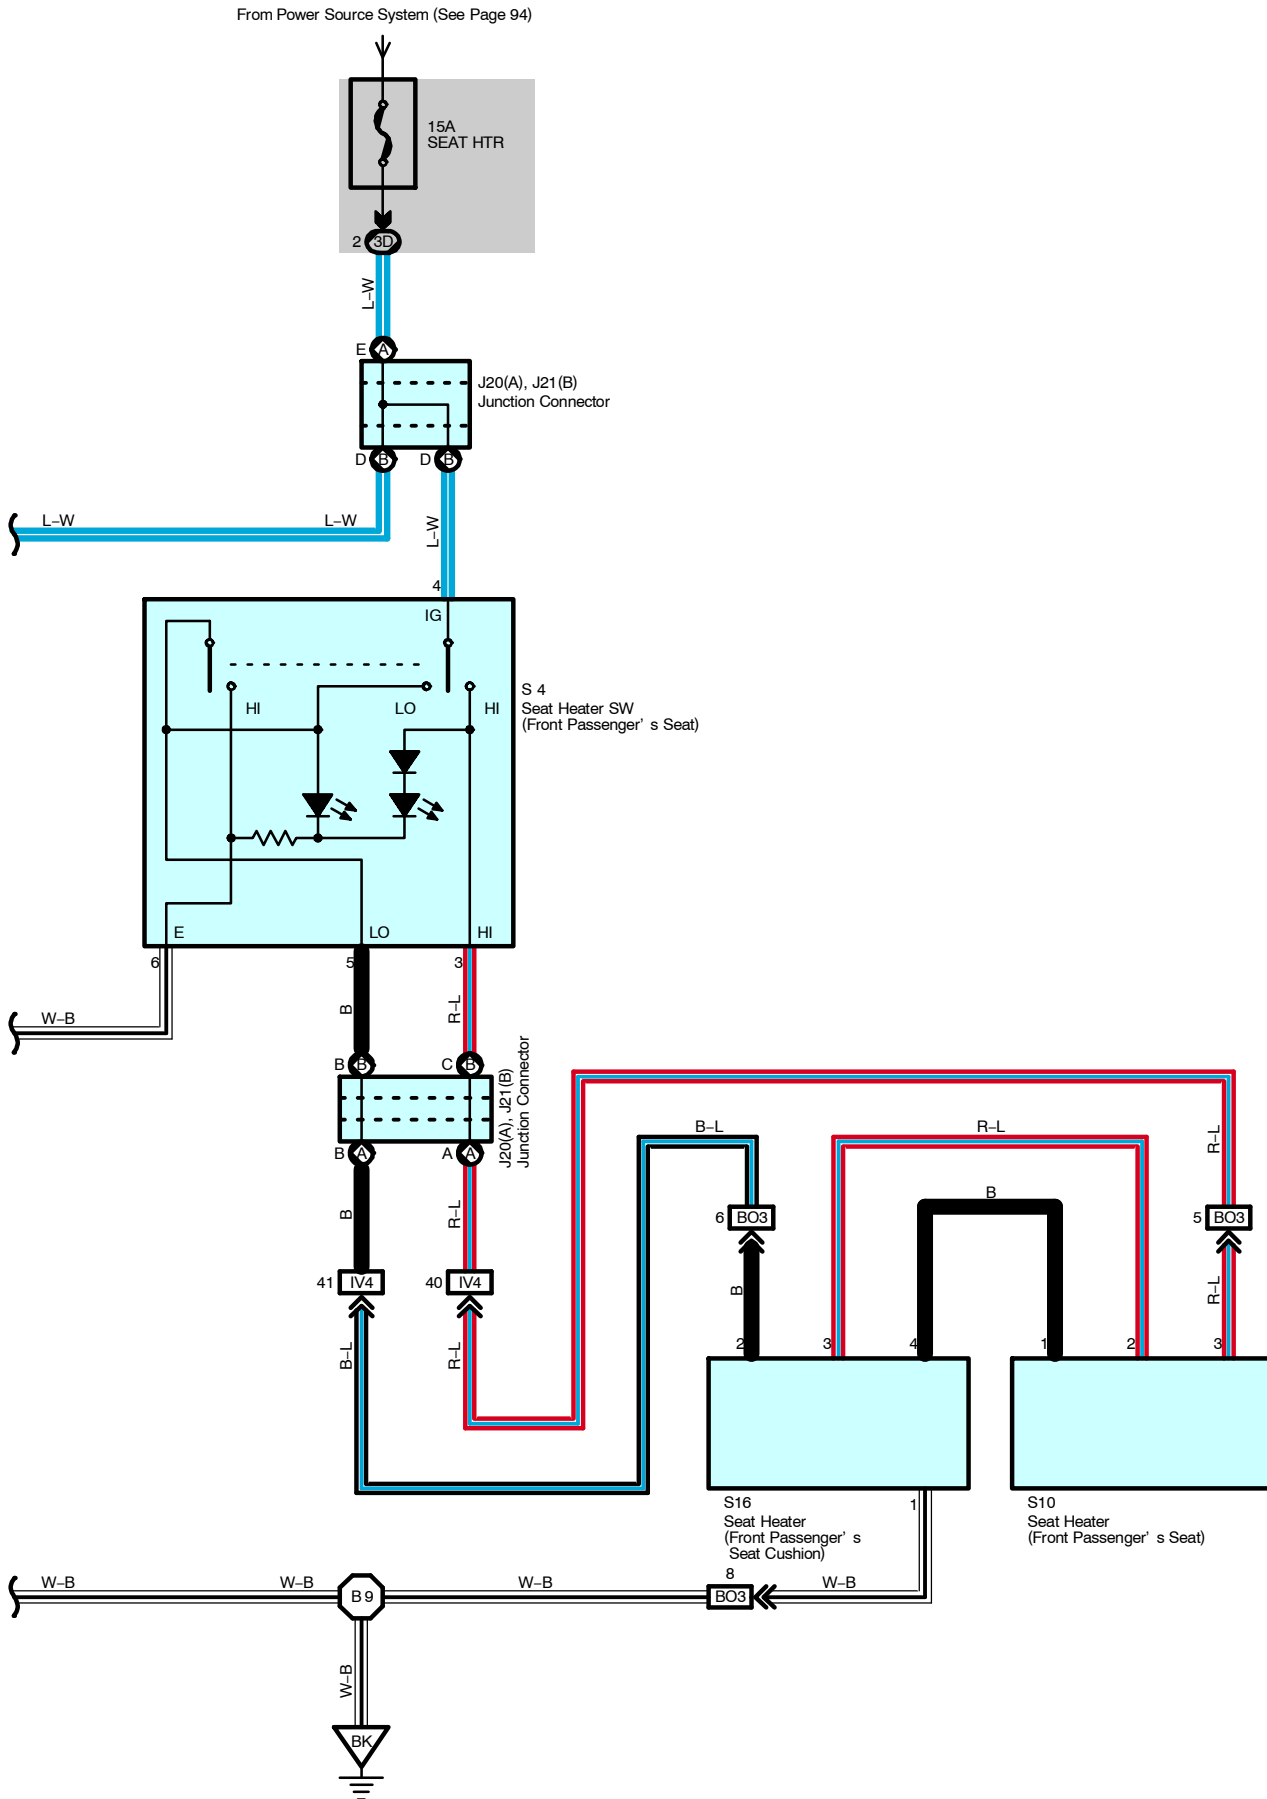

Seat Heater

Service Hints

S3 Seat Heater SW (Driver's Seat)

4-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

S4 Seat Heater SW (Front Passenger's Seat)

4-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J18 A	71	S3	71	S15	74
J19 B	71	S4	71	S16	74
J20 A	71	S9	74		
J21 B	71	S10	74		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID3	78	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IV4	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
BM3	90	Floor No.1 Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BO3	90	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
II	78	Set Bolt of Cowl Side J/B RH
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B9	88	Floor No.2 Wire			

