





# Radio and Player (w/o Navigation System)

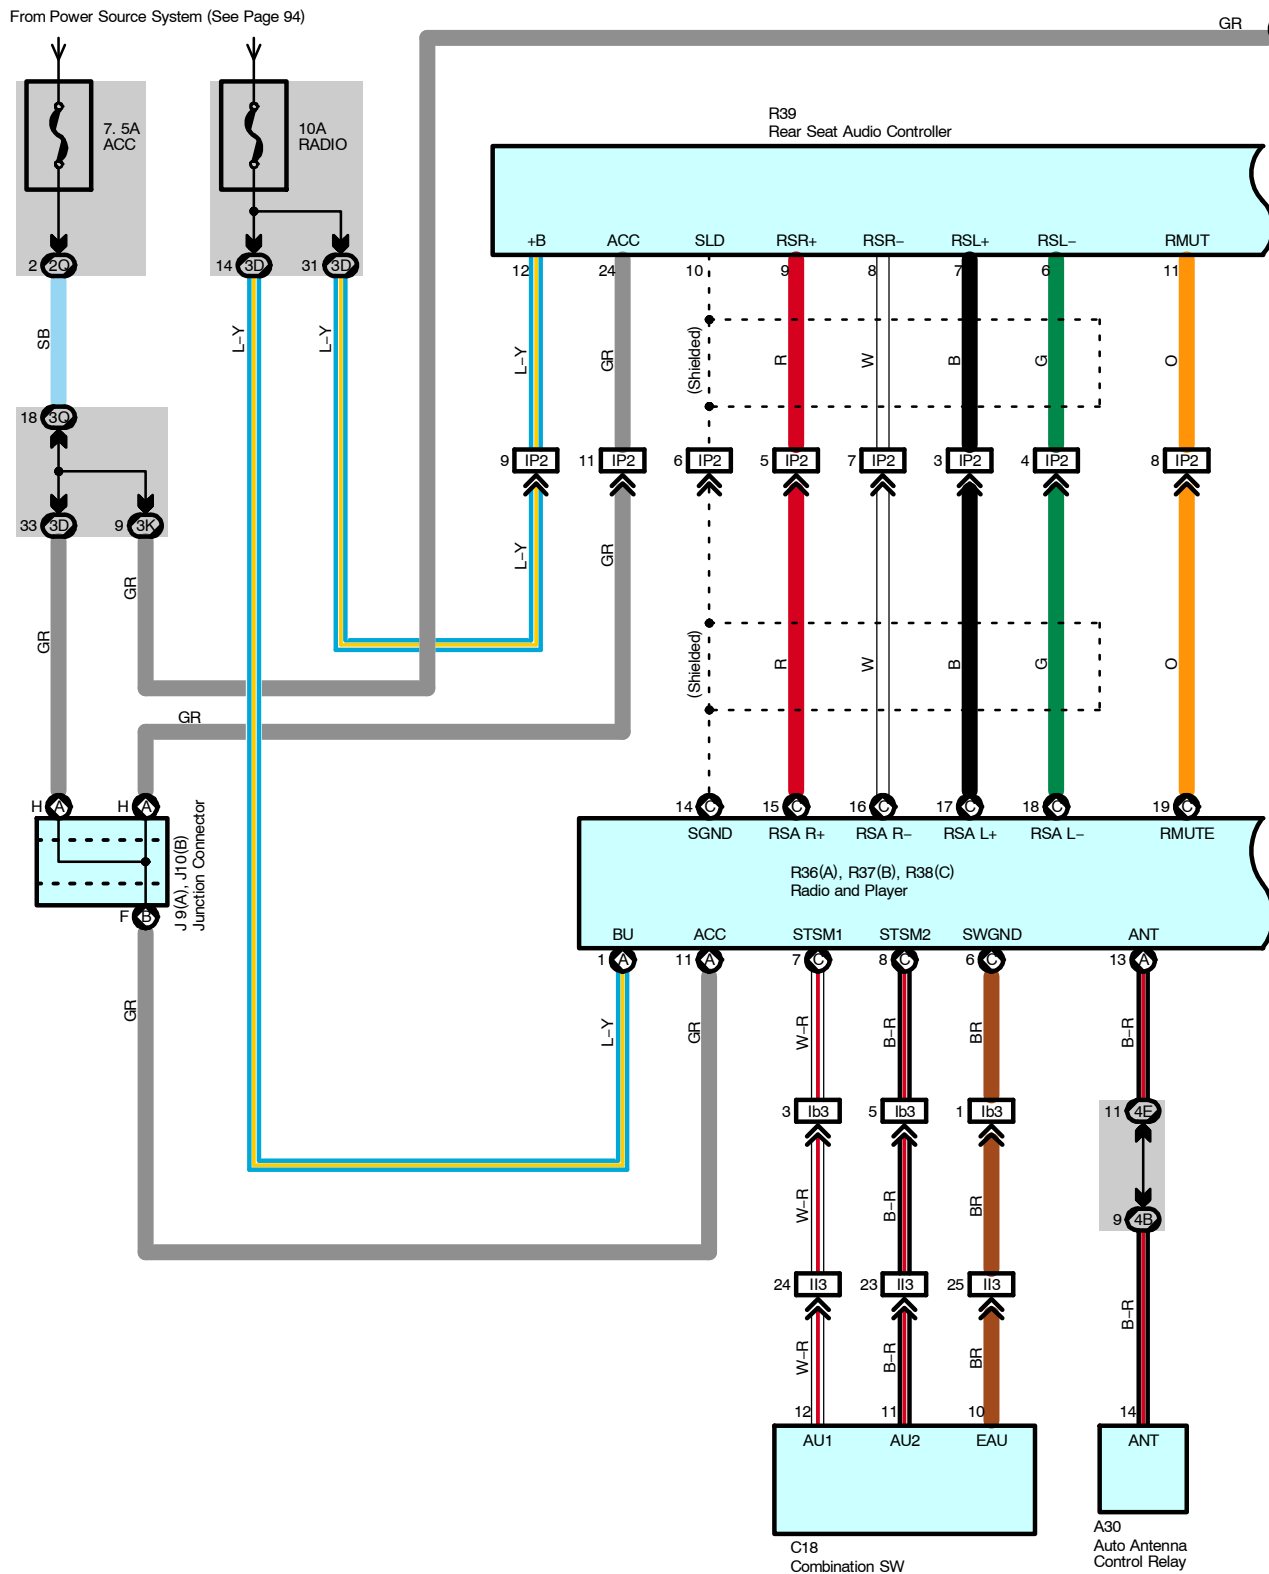

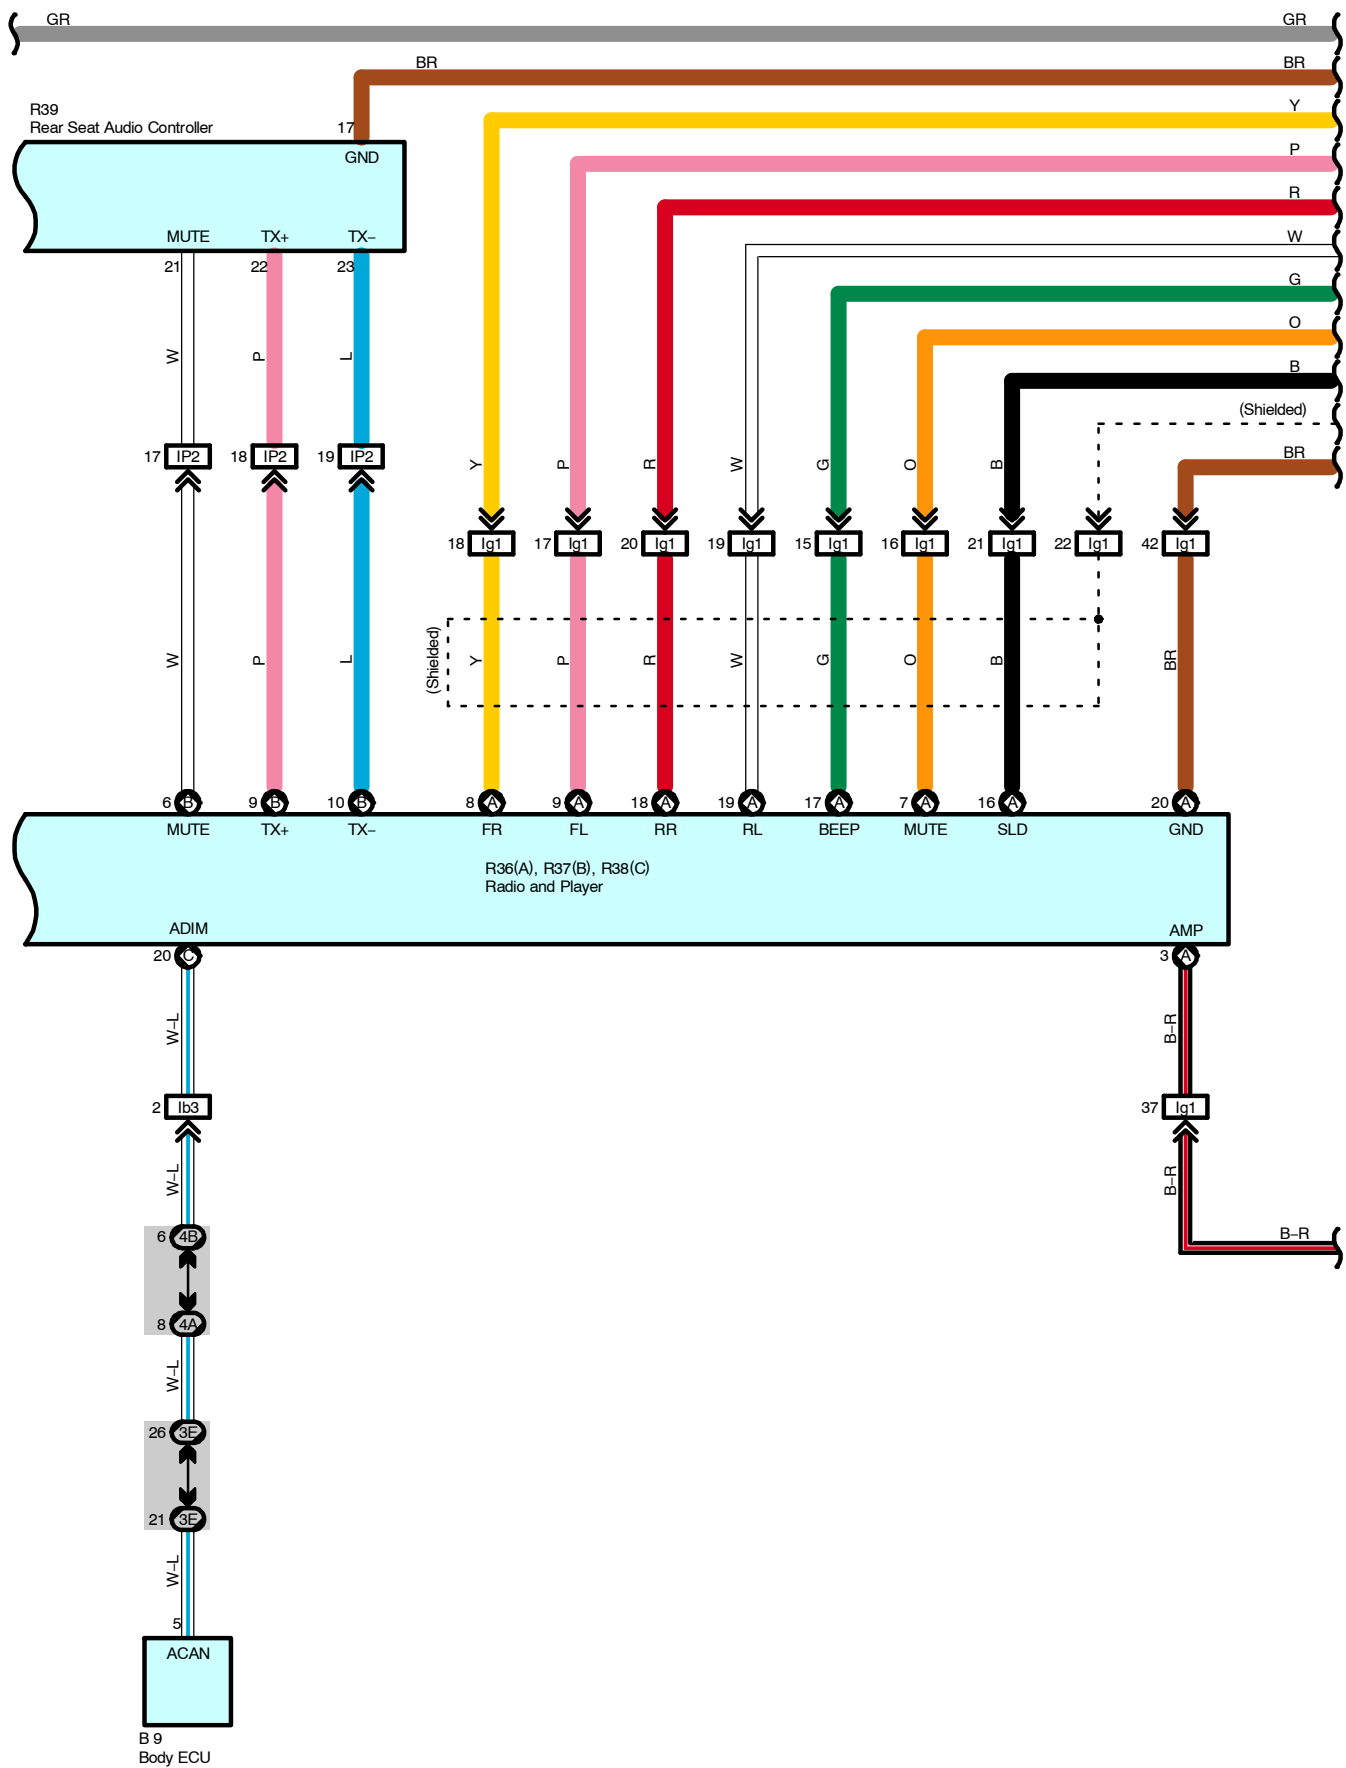

# Radio and Player (w/o Navigation System)

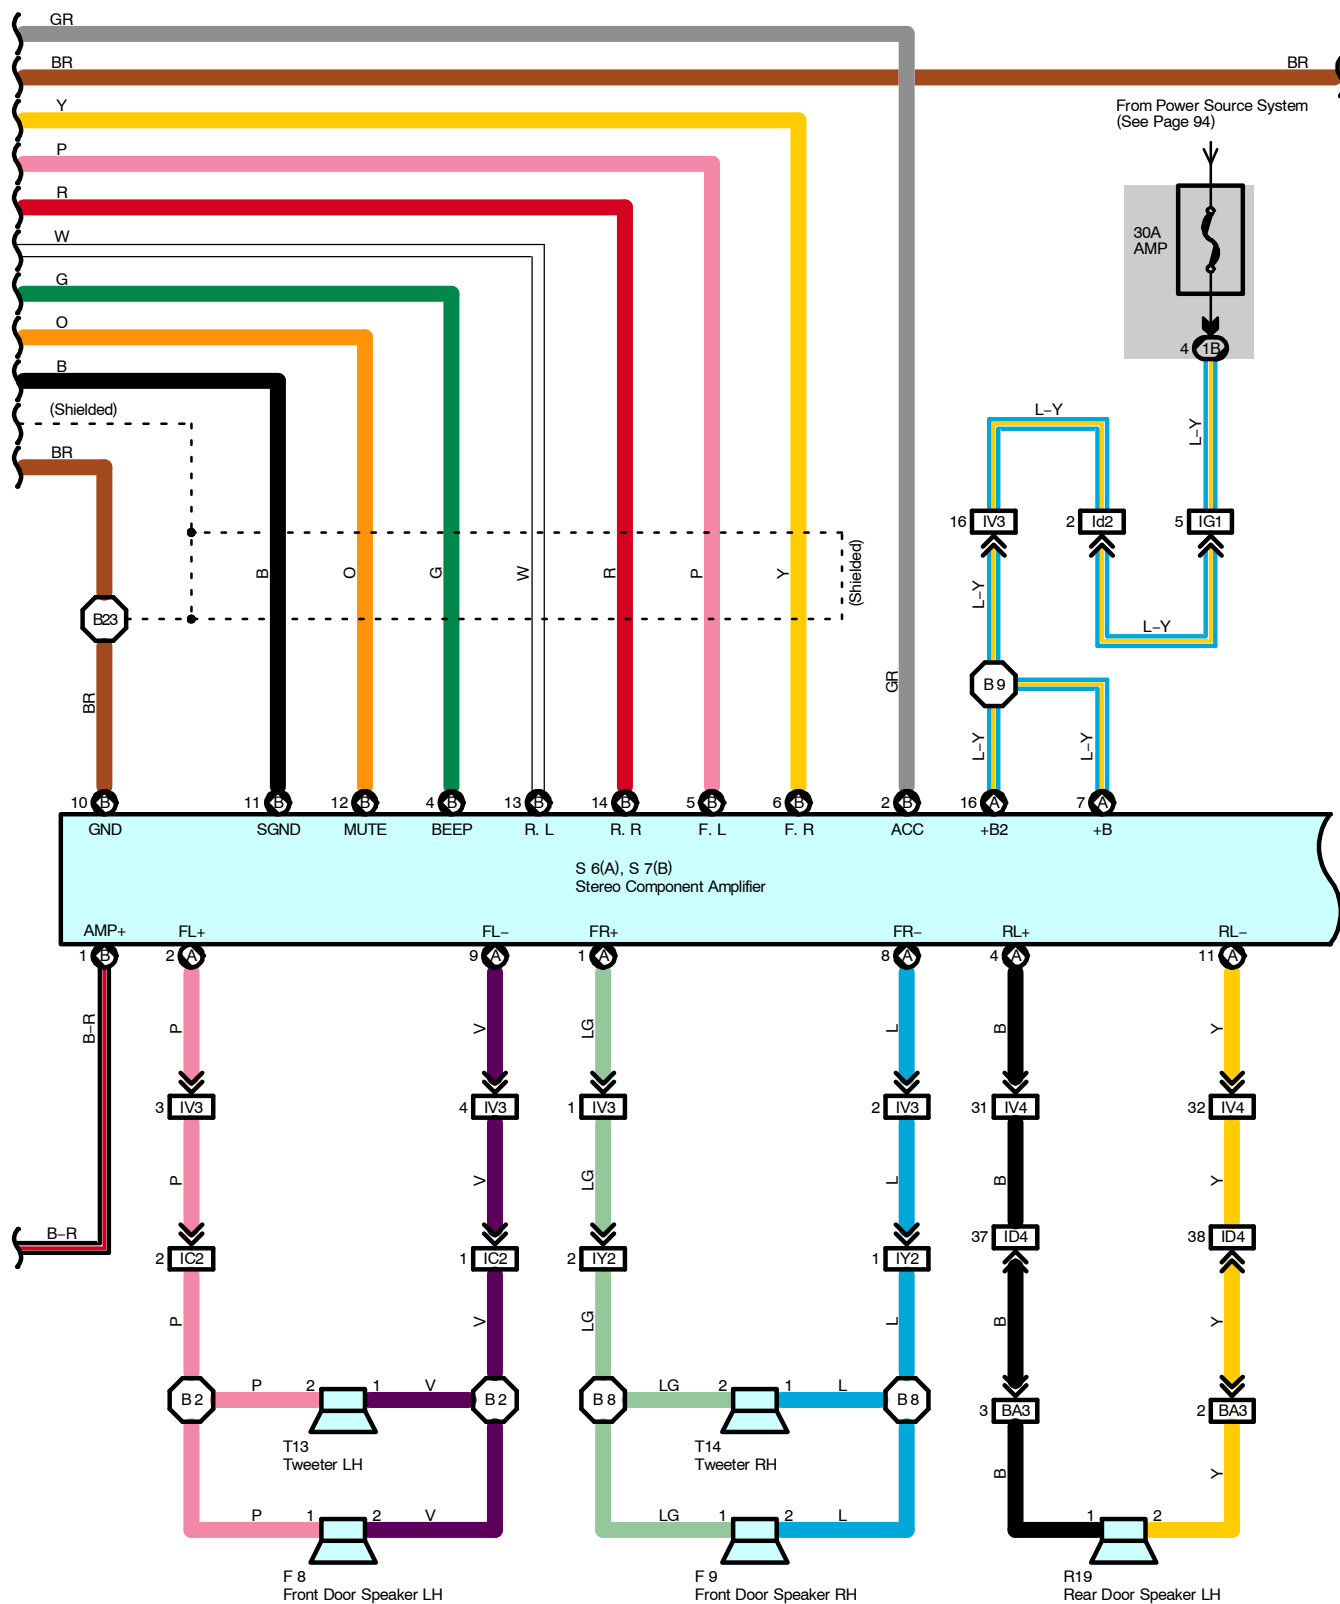

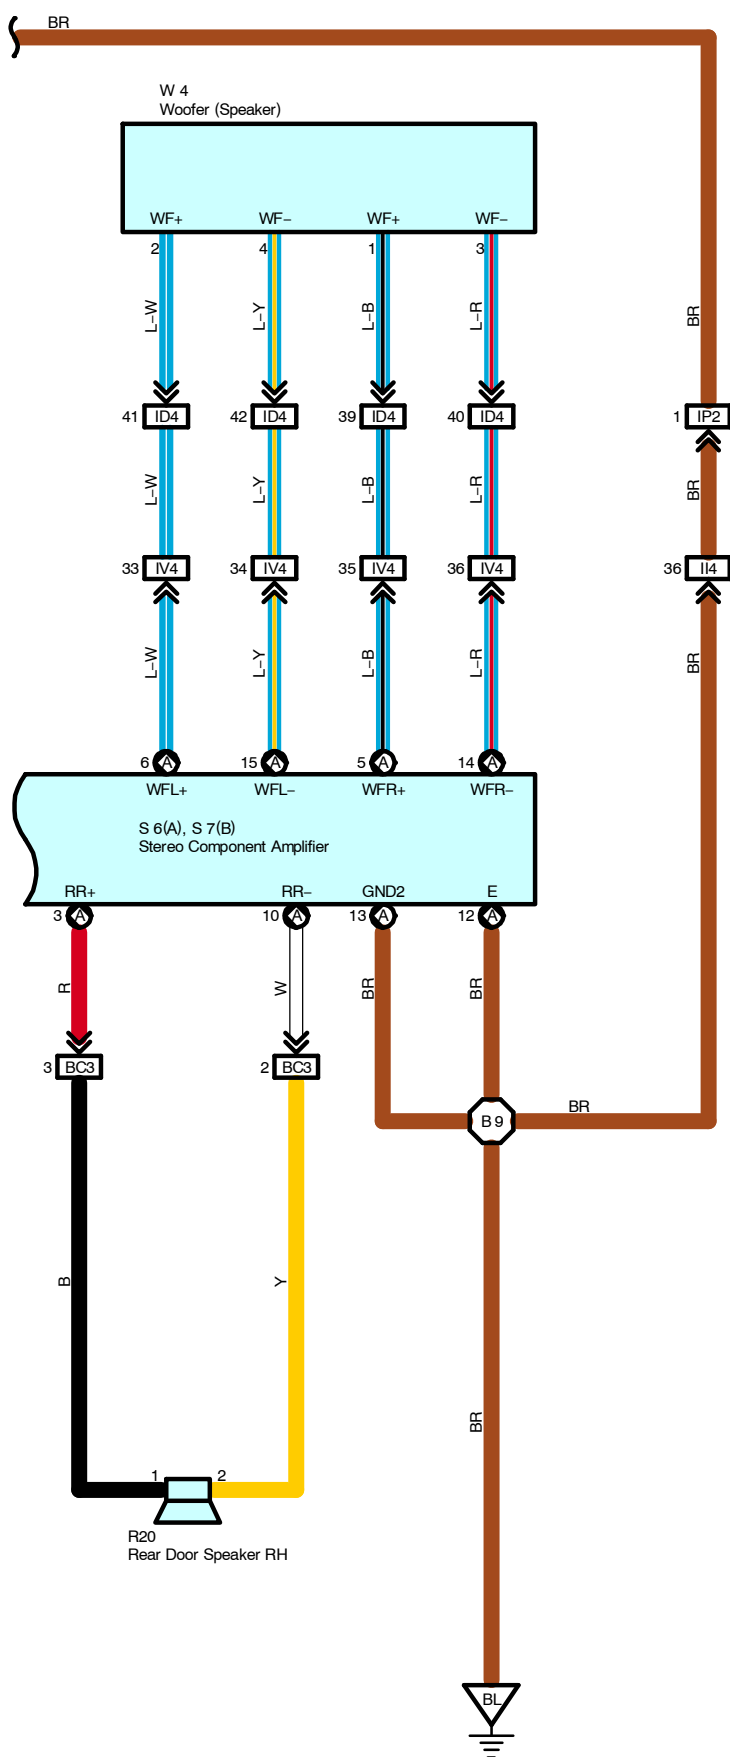

# Radio and Player (w/o Navigation System)

## Service Hints

### R36 Radio and Player

- 1–Ground : Always approx. 12 volts
- 11–Ground : Approx. 12 volts with ignition SW at ACC or ON position

### S6 (A), S7 (B) Stereo Component Amplifier

- (A) 7, (A) 16–Ground : Always approx. 12 volts
- (B) 2–Ground : Approx. 12 volts with ignition SW at ACC or ON position
- (A) 12, (A) 13–Ground : Always continuity

## ○ : Parts Location

| Code | See Page           | Code  | See Page           | Code | See Page           |
|------|--------------------|-------|--------------------|------|--------------------|
| A30  | <a href="#">70</a> | J10 B | <a href="#">71</a> | R39  | <a href="#">71</a> |
| B9   | <a href="#">70</a> | R19   | <a href="#">73</a> | S6 A | <a href="#">73</a> |
| C18  | <a href="#">70</a> | R20   | <a href="#">73</a> | S7 B | <a href="#">73</a> |
| F8   | <a href="#">72</a> | R36 A | <a href="#">71</a> | T13  | <a href="#">73</a> |
| F9   | <a href="#">72</a> | R37 B | <a href="#">71</a> | T14  | <a href="#">73</a> |
| J9 A | <a href="#">71</a> | R38 C | <a href="#">71</a> | W4   | <a href="#">73</a> |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                      |
|------|--------------------|---------------------------------------------------------------------------|
| 1B   | <a href="#">24</a> | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)       |
| 2Q   | <a href="#">30</a> | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3D   | <a href="#">40</a> | Dash Wire and Cowl Side J/B RH (Right Kick Panel)                         |
| 3E   |                    |                                                                           |
| 3K   | <a href="#">40</a> | Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)                   |
| 3Q   | <a href="#">42</a> | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |
| 4A   | <a href="#">52</a> | Dash Wire and J/B No.4 (Instrument Panel Center)                          |
| 4B   |                    |                                                                           |
| 4E   |                    |                                                                           |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)          |
|------|--------------------|---------------------------------------------------------------------|
| IC2  | <a href="#">78</a> | Front Door LH Wire and Dash Wire (Left Kick Panel)                  |
| ID4  | <a href="#">78</a> | Dash Wire and Floor No.1 Wire (Left Kick Panel)                     |
| IG1  | <a href="#">78</a> | Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)  |
| II3  | <a href="#">80</a> | Dash Wire and Column Wire (Near the Ignition SW)                    |
| II4  |                    |                                                                     |
| IP2  | <a href="#">80</a> | Rear Console Box Wire and Dash Wire (Right Side of Rear Console)    |
| IV3  | <a href="#">82</a> | Dash Wire and Floor No.2 Wire (Right Kick Panel)                    |
| IV4  |                    |                                                                     |
| IY2  | <a href="#">82</a> | Front Door RH Wire and Dash Wire (Right Kick Panel)                 |
| Ib3  | <a href="#">84</a> | Dash Wire and Dash Wire (Behind the Combination Meter)              |
| Id2  | <a href="#">84</a> | Dash Wire and Dash Wire (Instrument Panel Center)                   |
| Ig1  | <a href="#">84</a> | Dash Wire and Floor No.2 Wire (Right Side of Front Console)         |
| BA3  | <a href="#">86</a> | Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)  |
| BC3  | <a href="#">86</a> | Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar) |

## ▽ : Ground Points

| Code | See Page           | Ground Points Location                     |
|------|--------------------|--------------------------------------------|
| BL   | <a href="#">86</a> | Rear Side Under the Front Passenger's Seat |



: Splice Points

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| B2   | 88       | Front Door LH Wire              | B9   | 88       | Floor No.2 Wire                 |
| B8   | 88       | Front Door RH Wire              | B23  |          |                                 |