




Air Conditioning (Rear)

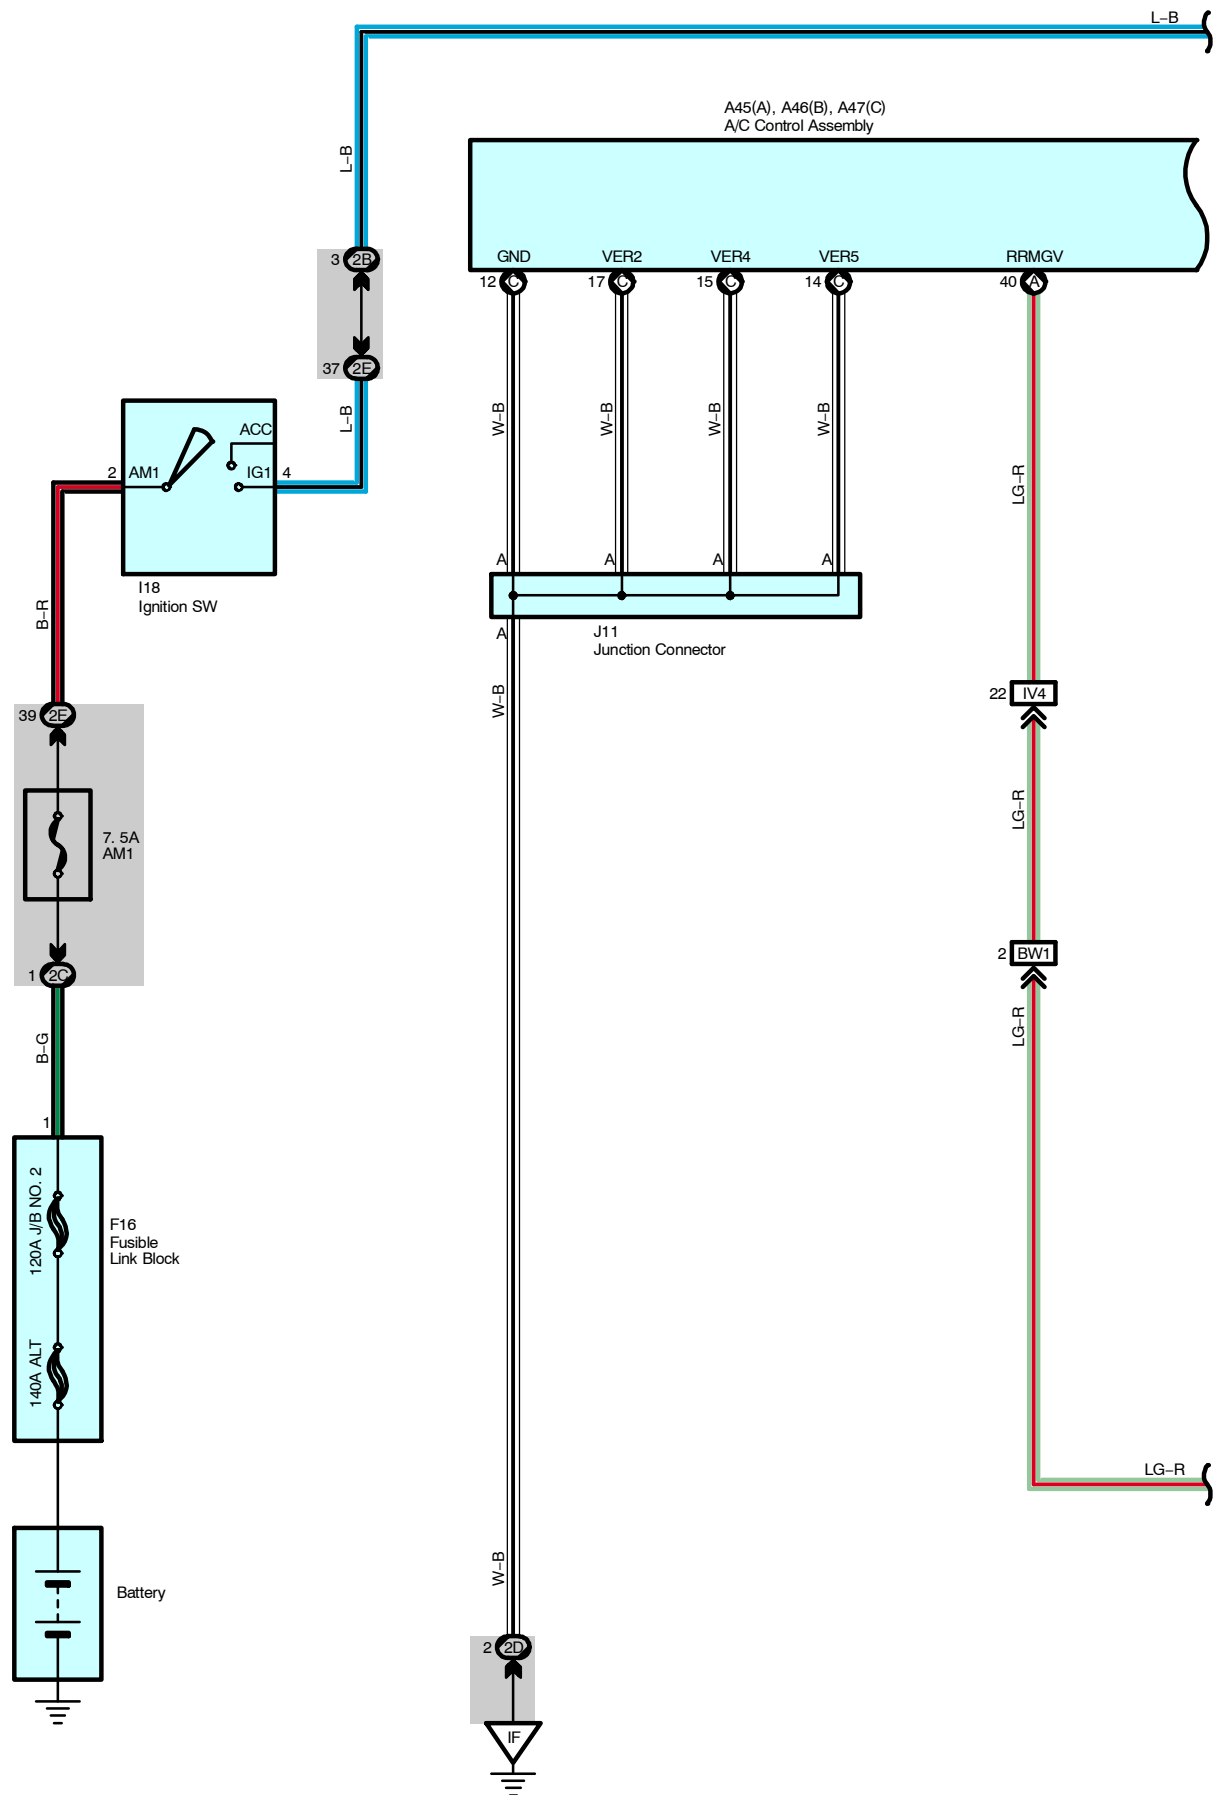


Air Conditioning (Rear)

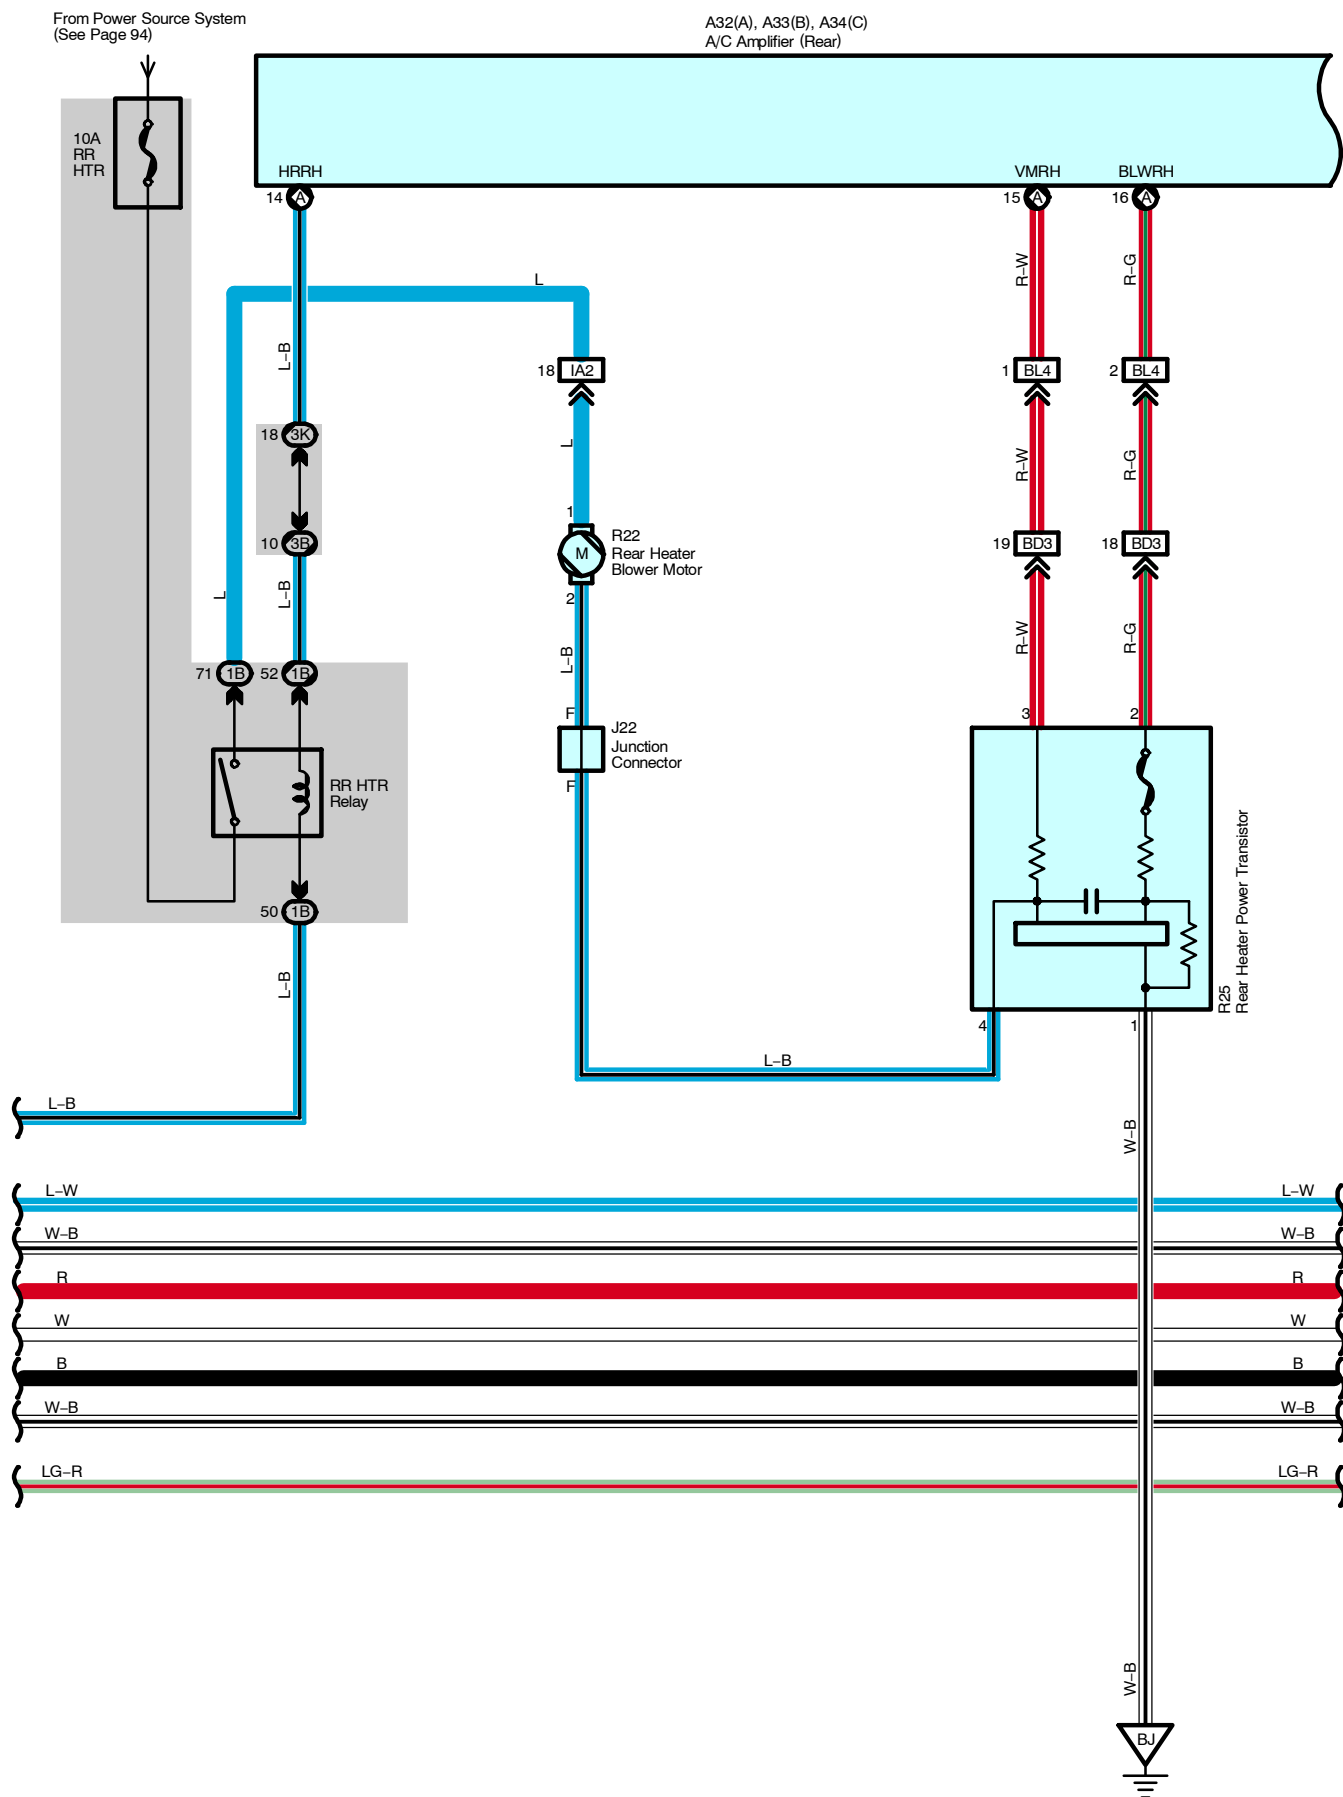


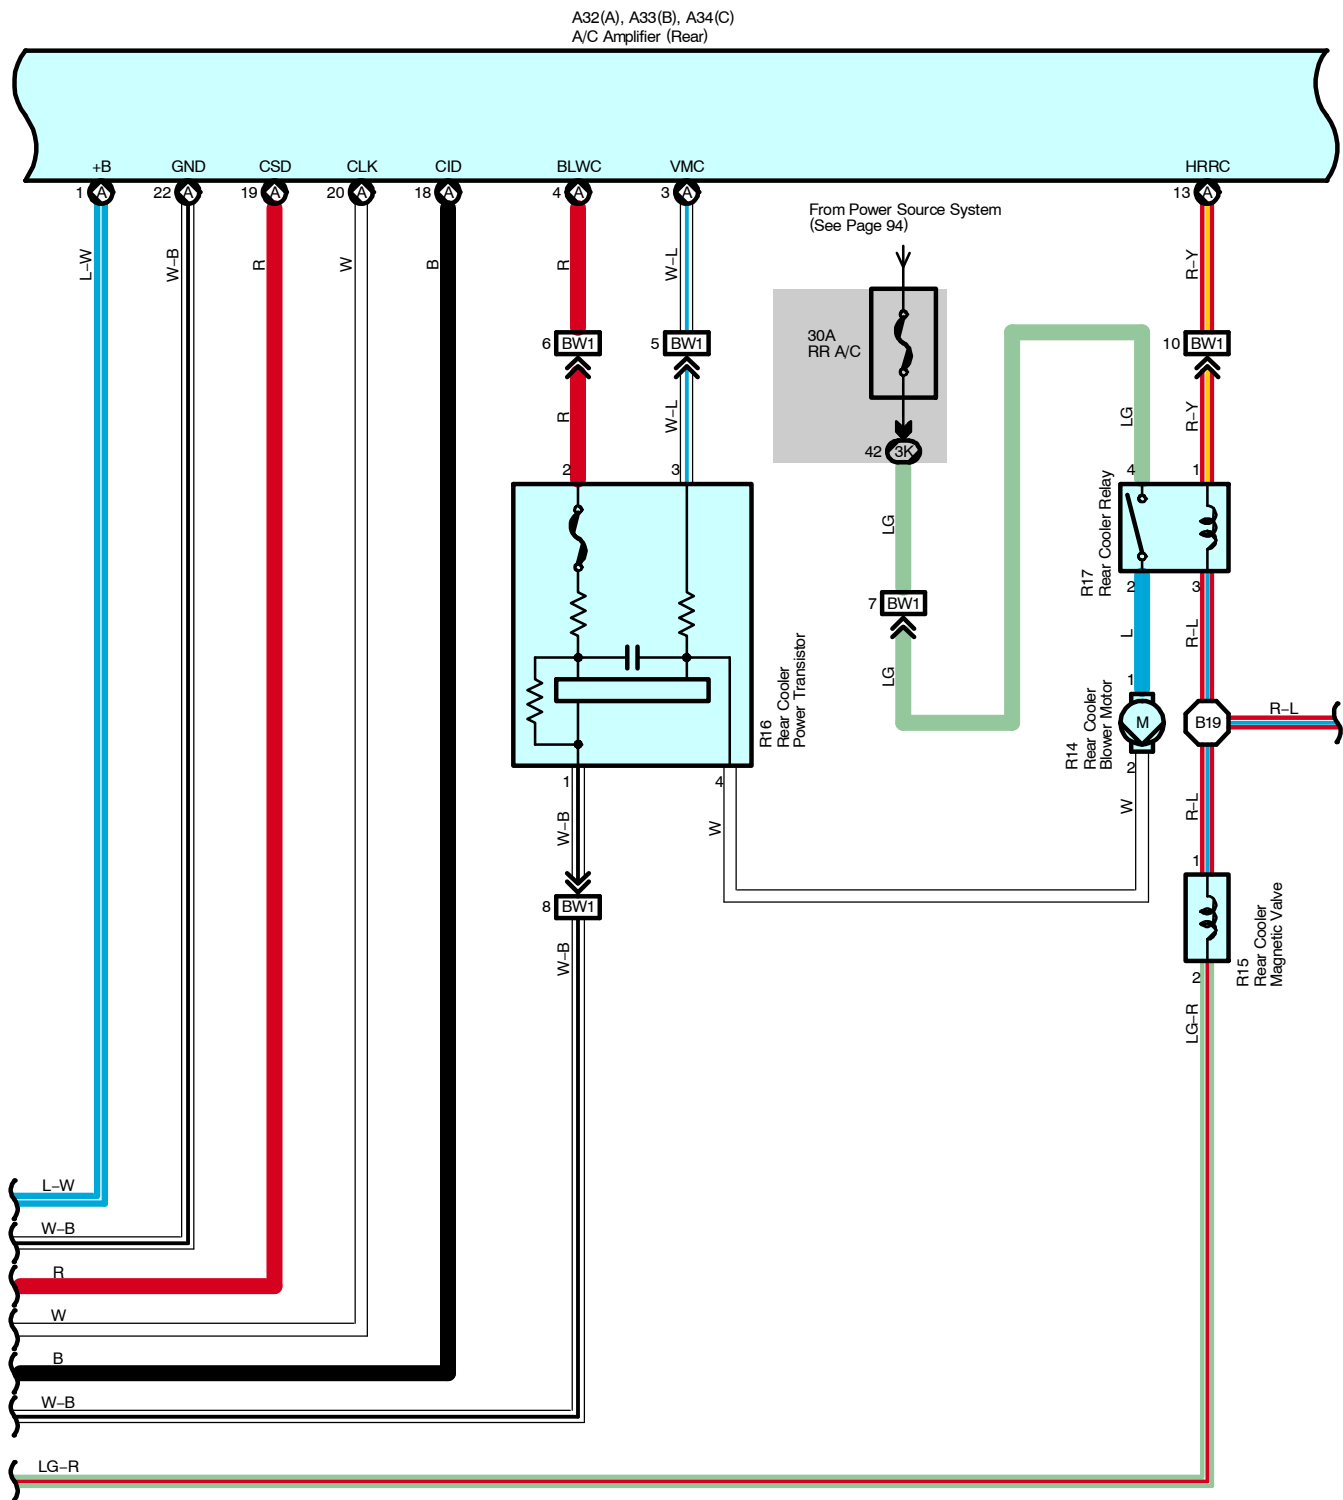


Air Conditioning (Rear)

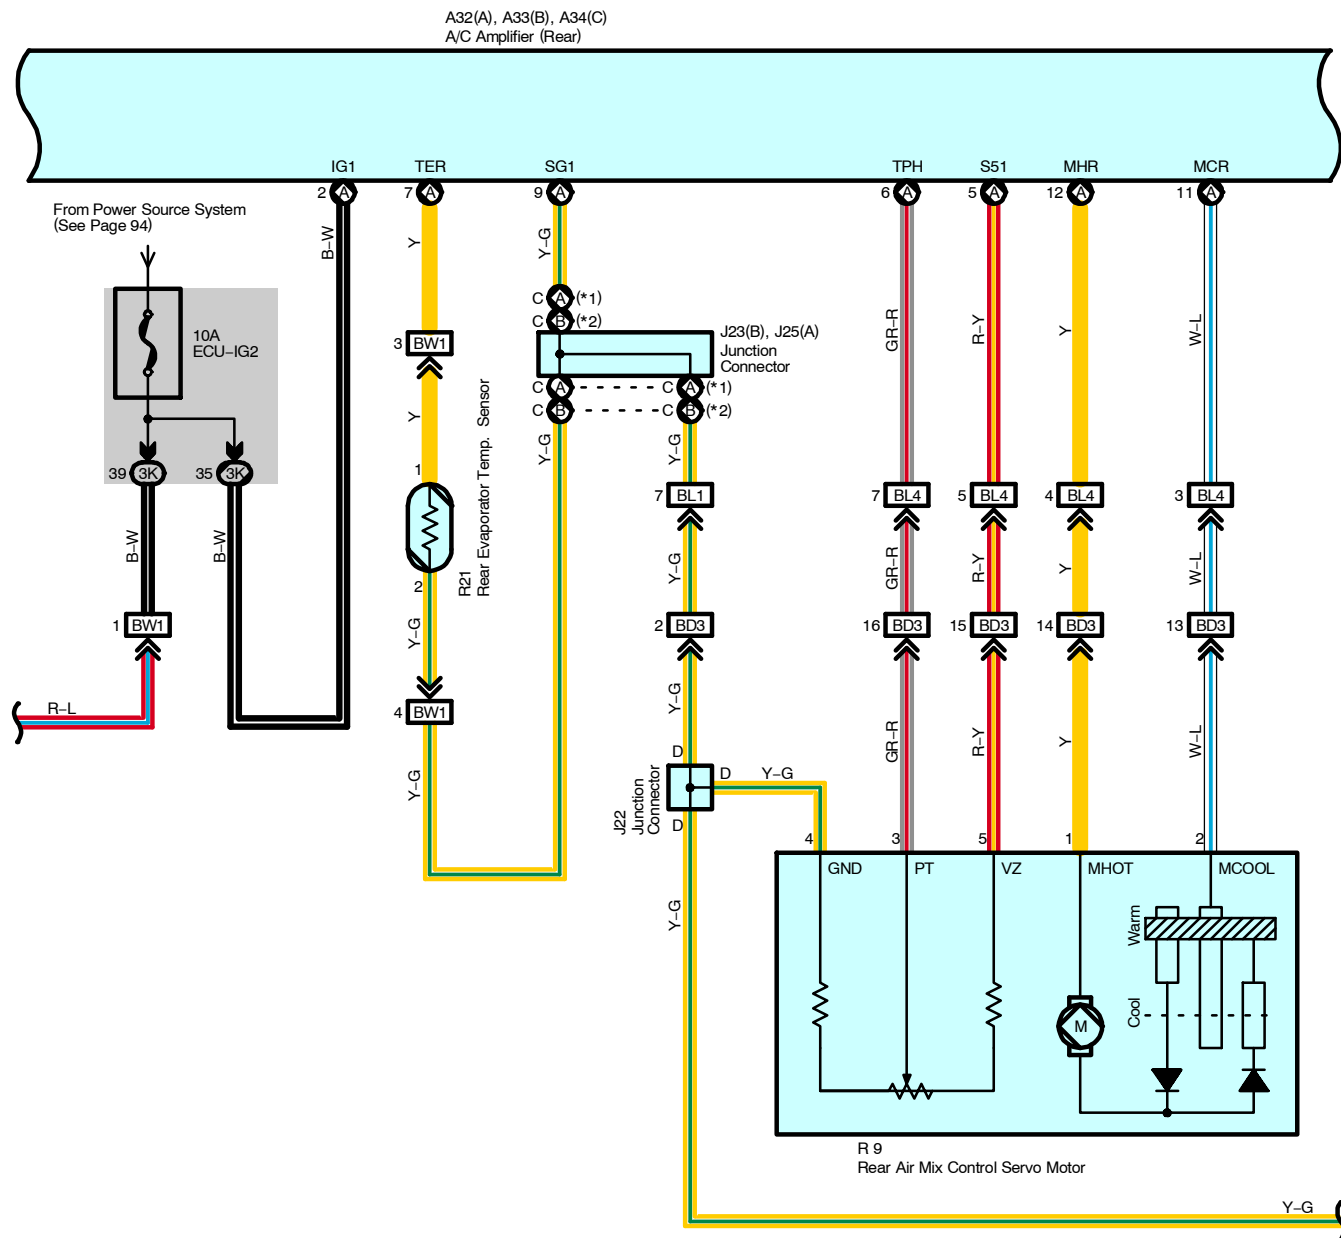

- * 1 : w/ Navigation System
- * 2 : w/o Navigation System

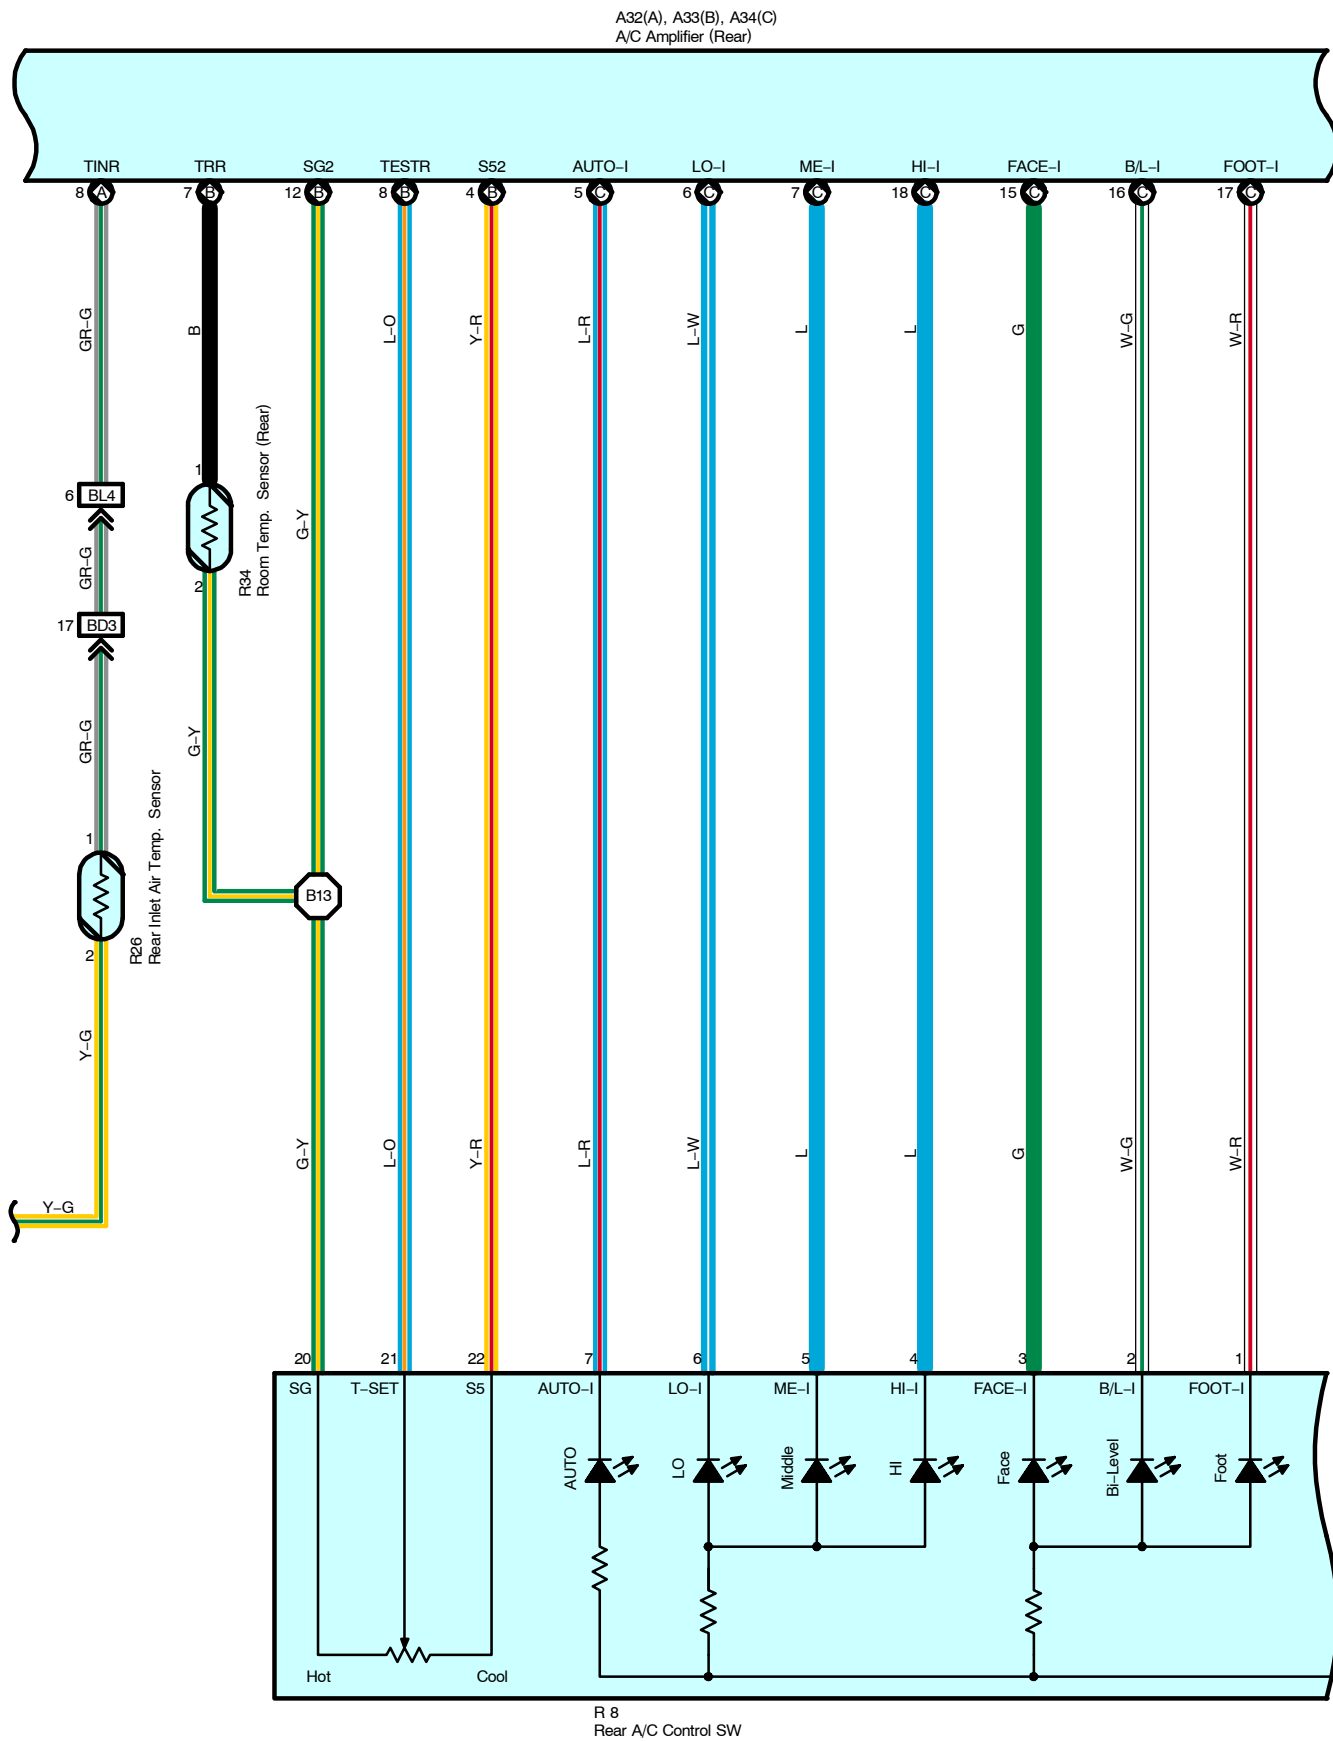

Air Conditioning (Rear)

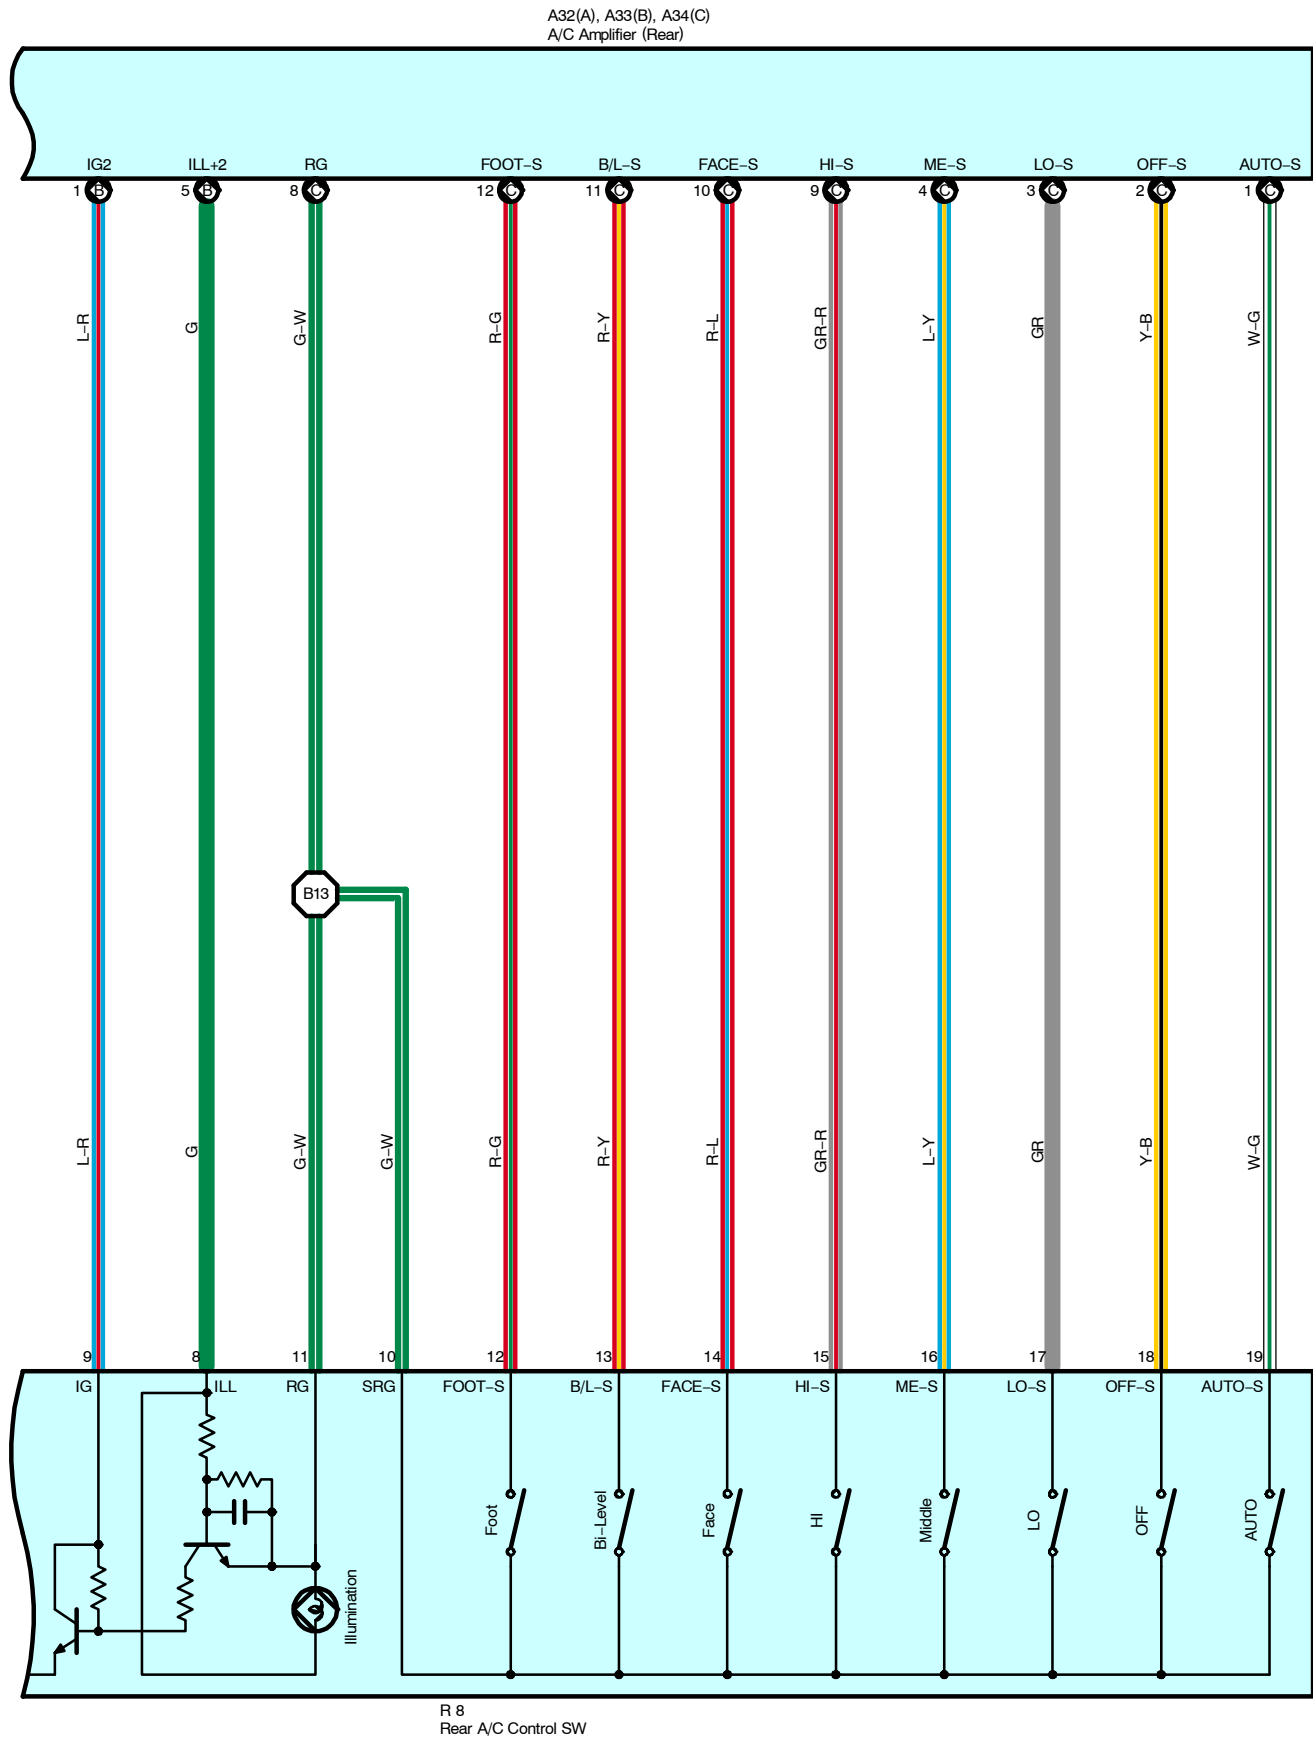

System Outline

1. Cooler and Heater Blower Operation

* Manual operation

When the blower control SW in the rear A/C control SW is set to any blower speed, a signal is sent to the A/C amplifier. The A/C amplifier controls the power transistor and operates the rear cooler blower motor and rear heater blower motor at the set speed.

* Auto operation

When the auto SW in the rear A/C control SW is operated, a signal is sent to the A/C amplifier. The A/C amplifier controls the power transistor according to the signals from respective sensors, and operates the rear cooler blower motor and rear heater blower motor.

2. Air Mix Control Servo Motor Control

When the temperature control lever in the rear A/C control SW is operated, a signal is sent to the A/C amplifier. The A/C amplifier controls the rear air mix control servo motor to operate the damper until it reaches the temperature set by the temperature control lever.

3. Air Conditioning Operation

The cooler and heater operation can be switched by the mode select SW in the rear A/C control SW.

Service Hints

A32 A/C Amplifier (Rear)

- 1-Ground : Always approx. 12 volts
- 2-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 22-Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A32	A	72	J11		71	R16	73
A33	B	72	J22		72	R17	73
A34	C	72	J23	B	72	R21	73
A45	A	70	J25	A	72	R22	73
A46	B	70	R8		73	R25	73
A47	C	70	R9		73	R26	73
F16		68	R14		73	R34	73
I18		70	R15		73		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2C		
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4F		

Air Conditioning (Rear)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	78	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
IV4	82	Dash Wire and Floor No.2 Wire (Right Kick Panel)
BD3	86	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BL1	88	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BL4		
BW1	88	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	78	Set Bolt of Cowl Side J/B LH
BJ	86	Under the Driver's Seat
BK	86	Front Side Under the Front Passenger's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B13	88	Roof No.2 Wire	B19	88	A/C Sub Wire
B14	88	Floor No.2 Wire			

