

2004 LAND CRUISER ELECTRICAL WIRING DIAGRAM SYSTEM CIRCUITS

	Page
Air Conditioning (Front)	356
Air Conditioning (Rear)	366
Auto Antenna	322
Automatic Glare-Resistant EC Mirror with Compass	304
Automatic Light Control	164
Back-Up Light	162
Center Differential Lock	246
Charging	104
Cigarette Lighter	204
Combination Meter	350
Cruise Control	222
Door Lock Control	260
Electronically Controlled Transmission and A/T Indicator	212
Engine Control	108
Engine Immobiliser System	124
Front Fog Light	132
Front Wiper and Washer	196
Garage Door Opener	210
Headlight	128
Horn	208
Ignition	100
Illumination	142
Interior Light	148
Key Reminder	316
Light Auto Turn Off	166
Mirror Heater	314
Moon Roof	256
Multi-Display (w/o Navigation System)	348
Multiplex Communication System	172
Multiplex Communication System (Communication Bus)	168
Navigation System	336
Power Outlet	206
Power Rear Quarter Window	306
Power Seat	294
Power Source	94
Power Tilt and Power Telescopic	298
Power Window	250
Radio and Player (w/ Navigation System)	324
Radio and Player (w/o Navigation System)	330
Rear Window Defogger	312
Rear Wiper and Washer	200
Remote Control Mirror	302
Seat Belt Warning	320
Seat Heater	308
Shift Lock	244
SRS	237
Starting	98
Stop Light	156
Taillight	138
Theft Deterrent	282
TOYOTA Parking Assist (Rear View Monitor)	336
Trailer Towing	158
Turn Signal and Hazard Warning Light	134
VSC	228
Wireless Door Lock Control	270