


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1HD-FTE]

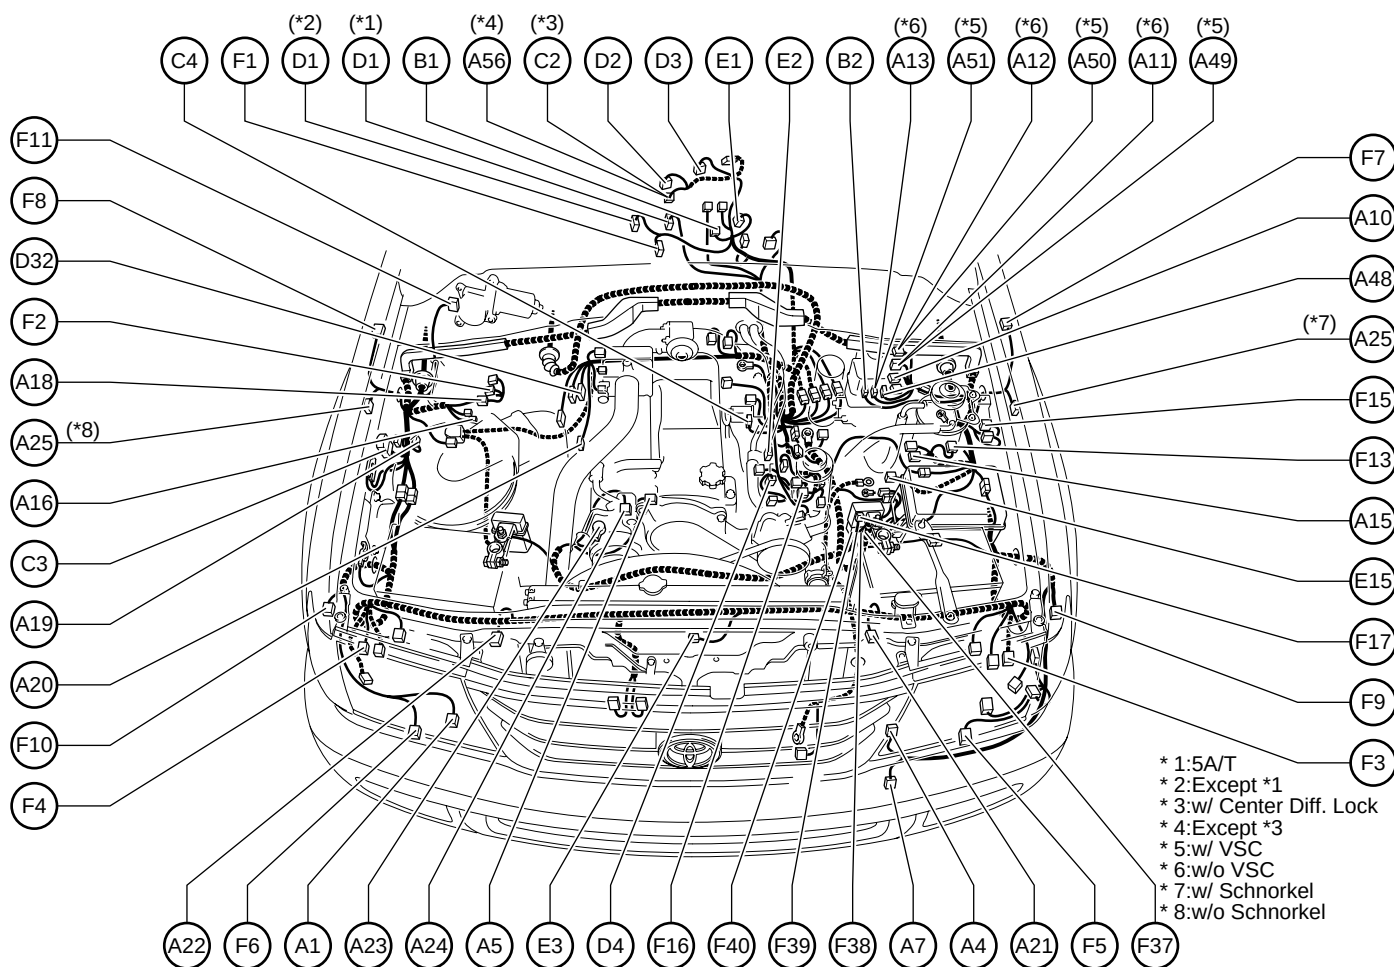

* 1:5A/T
 * 2:Except *1
 * 3:w/ Center Diff. Lock
 * 4:Except *3
 * 5:w/ VSC
 * 6:w/o VSC
 * 7:w/ Schnorkel
 * 8:w/o Schnorkel

A 1 A/C Ambient Temp. Sensor
 A 4 Pressure SW
 A 5 A/C Magnetic Clutch
 A 7 A/C Magnetic Valve
 A10 ABS Actuator
 A11 ABS Actuator
 A12 ABS Actuator
 A13 ABS Actuator
 A15 ABS Speed Sensor Front LH
 A16 ABS Speed Sensor Front RH
 A18 AHC Pump Motor
 A19 Air Cleaner Warning Sensor
 A20 Air Flow Meter
 A21 Airbag Sensor Front LH
 A22 Airbag Sensor Front RH
 A23 Alternator
 A24 Alternator
 A25 Auto Antenna Motor
 A48 ABS & BA & TRC & VSC Actuator
 A49 ABS & BA & TRC & VSC Actuator
 A50 ABS & BA & TRC & VSC Actuator
 A51 ABS & BA & TRC & VSC Actuator
 A56 ADD Control Motor
 B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW
 C 2 Center Diff. Lock Control Motor
 C 3 Check Connector
 C 4 Crankshaft Position Sensor

D 1 Detection SW (Center Diff. Lock)
 D 2 Detection SW (Transfer L Position)
 D 3 Detection SW (Transfer Neutral Position)
 D 4 Diesel Engine Revolution Sensor
 D32 Diesel Throttle Position SW

E 1 ECT Solenoid
 E 2 EFI Water Temp. Sensor
 E 3 Engine Hood Courtesy SW
 E15 EDU

F 1 First Position SW
 F 2 Fluid Pressure Sensor
 F 3 Front Clearance Light LH
 F 4 Front Clearance Light RH
 F 5 Front Fog Light LH
 F 6 Front Fog Light RH
 F 7 Front Side Turn Signal Light LH
 F 8 Front Side Turn Signal Light RH
 F 9 Front Turn Signal Light LH
 F10 Front Turn Signal Light RH
 F11 Front Wiper Motor
 F13 Fuel Heater SW
 F15 Fuel Sediment SW
 F16 Fuel Temp. Sensor
 F17 Fusible Link Block
 F37 Fusible Link Block
 F38 Fusible Link Block
 F39 Fusible Link Block
 F40 Fusible Link Block