


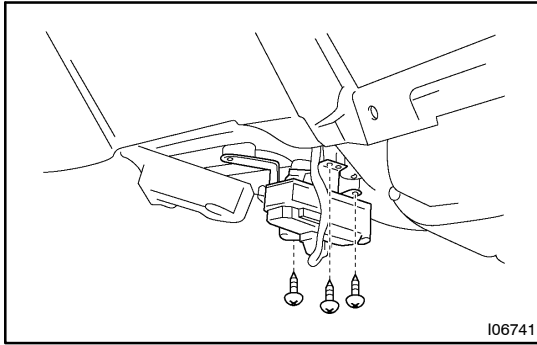

AIR MIX SERVOMOTOR (for Front A/C)

AC1LK-06

INSPECTION

- 1. REMOVE AIR MIX SERVOMOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and the air mix servomotor.
- 2. INSPECT AIR MIX SERVOMOTOR OPERATION**
(See page [DI-1362](#))
- 3. INSPECT AIR MIX DAMPER POSITION SENSOR**
(See page [DI-1353](#))
- 4. INSTALL SERVOMOTOR**
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.