

INSPECTION

1. INSPECT AIR INLET SERVOMOTOR OPERATION (See page [DI-1365](#))
2. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT (See page [DI-1356](#))