


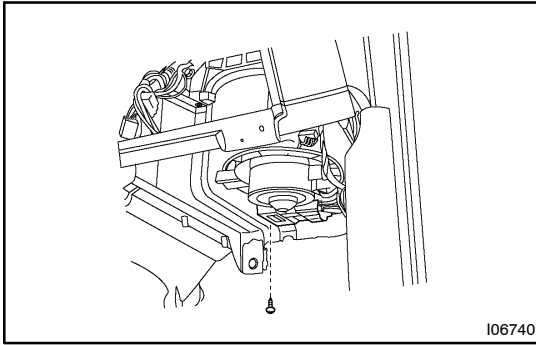


## BLOWER MOTOR CONTROL RELAY INSPECTION

AC1LH-08

### 1. REMOVE BLOWER MOTOR CONTROL RELAY

- (a) Disconnect the connectors.
- (b) Remove the screw and the blower motor control relay.

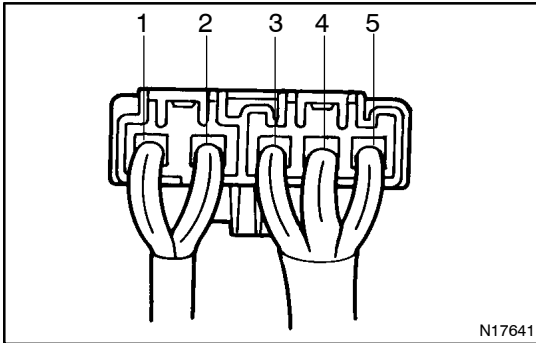

### 2. INSPECT BLOWER MOTOR CONTROL RELAY

Connect the connector to the blower motor control relay and inspect the wire harness side connector from the back side as shown in the illustration.

Test condition:

- Turn ignition switch to ON

| Tester connection | Condition                                     | Specified condition      |
|-------------------|-----------------------------------------------|--------------------------|
| 1 – Ground        | Constant                                      | Continuity               |
| 2 – Ground        | Blower speed control switch at "LO" position  | Approx. 3.5 V            |
|                   | Blower speed control switch at "M1" position  | Approx. 2.2 V            |
| 3 – Ground        | Operate blower motor                          | Battery positive voltage |
|                   | Blower speed control switch at "OFF" position | No voltage               |
| 4 – 5             | Blower speed control switch at "LO" position  | Approx. 3.6 V            |
|                   | Blower speed control switch at "M2" position  | Approx. 8.3 V            |
|                   | Blower speed control switch at "HI" position  | Approx. 13.0 V           |

If circuit is not as specified, replace the relay.