

REMOVAL


1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, first evacuate air from refrigeration system.

Then, charge the system with the refrigerant and inspect for leaks of the refrigerant.

Specified amount: 1,050 ± 50 g (37.03 ± 1.76 oz.)

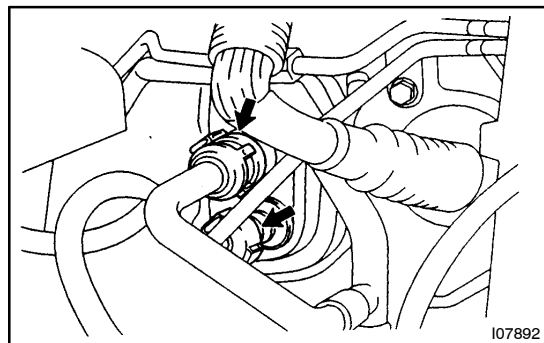

2. DISCONNECT LIQUID AND SUCTION TUBES

- (a) Using SST, remove the 2 piping clamps.


SST 09870-00025 (Liquid tube)

09870-00015 (Suction tube)

- (1) Insert SST to piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST referring to the illustration on the caution label.

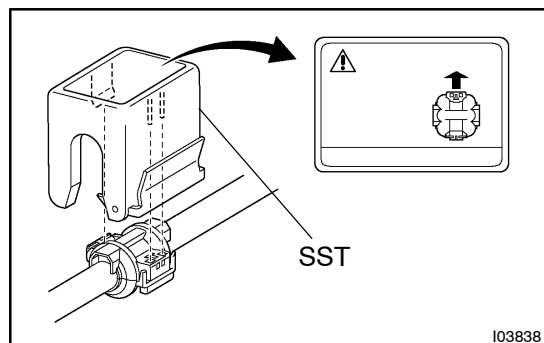

- (2) Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

- (3) Pull SST slightly and push the release lever, then remove the piping clamp with SST.

- (4) Remove the piping clamp from SST.

- (b) Disconnect the both tubes.

NOTICE:



Cap the open fittings immediately to keep moisture or dirt out of the system.


HINT:

At the time of installation:


- Lubricate 4 new O-rings with compressor oil and install them to the tubes.
- After connection, check the fitting for claw of the piping clamp.

3. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-84](#))

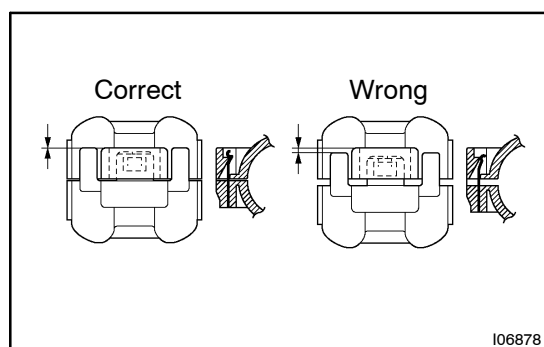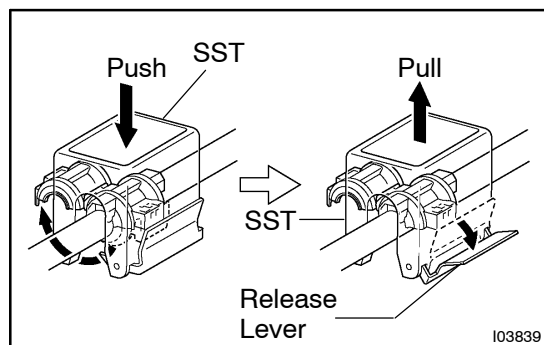

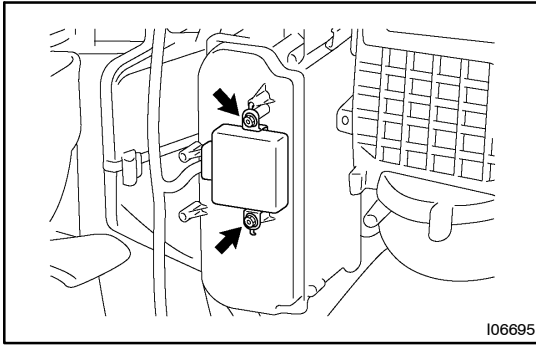**4. REMOVE ANTENNA RELAY**

- (a) Disconnect the connector.
- (b) Remove the 2 screws and antenna relay.

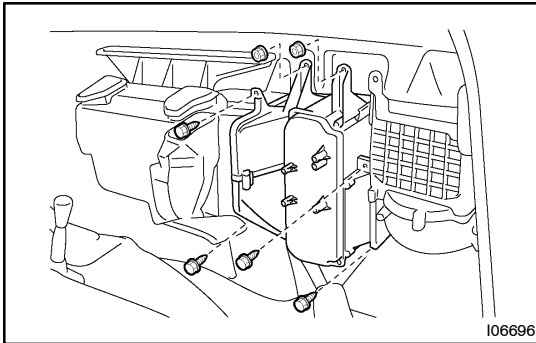**5. REMOVE COOLING UNIT**

- (a) Disconnect the connector.
- (b) Remove the 4 screws, 2 nuts and cooling unit.