


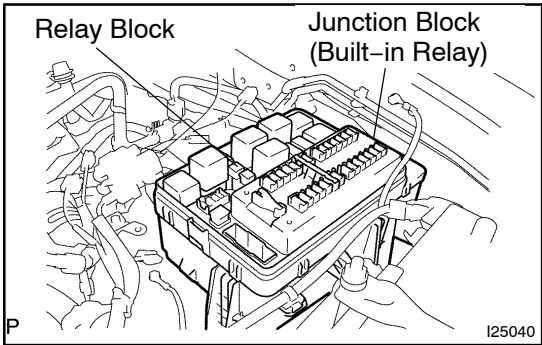

REAR HEATER RELAY INSPECTION

AC30Y-01

HINT:

The rear heater relay is built in the engine room junction block. Since the relay is constructed with a relay block that is in the junction block as a unit, it is impossible to disconnect the wire harness connecting with the relay block.

If the relay has a malfunction, replace it with the junction block assembly wire harness together.

1. REMOVE ENGINE ROOM J/B
2. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	29 - 31	Continuity
Apply B+ between terminals 29 and 31.	2 - 3	Continuity

If continuity is not as specified, replace the engine room J/B.

3. INSTALL ENGINE ROOM J/B

