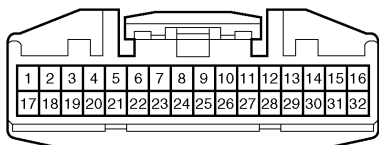


Wire Harness Side:

N


I20746

INSPECTION**1. INSPECT OVERHEAD JUNCTION BLOCK ASSEMBLY**

Disconnect the connector from the overhead J/B and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
8 – Ground	Constant	Battery positive voltage
11 – Ground	Ignition switch OFF or ACC	No voltage
	Ignition switch ON	Battery positive voltage

If continuity is not as specified, repair or replace the wire harness.

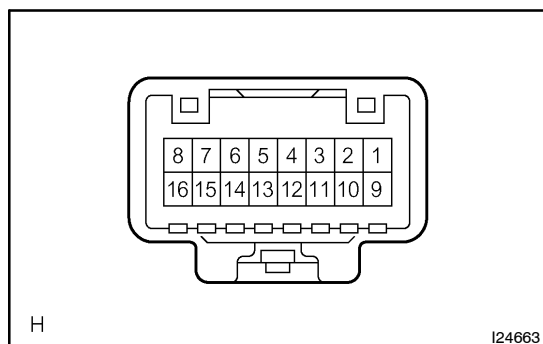

H

I24663

2. Overhead J/B side:**INSPECT OVERHEAD JUNCTION BLOCK ASSEMBLY**

Circuit name	Tester connection	Specified condition
Power source circuit	A8 – B6 – E6	Continuity
Ground circuit	A1 – B2 – E8 – D3	Continuity
Microphone circuit	B10 – G4	Continuity
Microphone circuit	B9 – G2	Continuity

If continuity is not as specified, replace the overhead J/B assembly.