


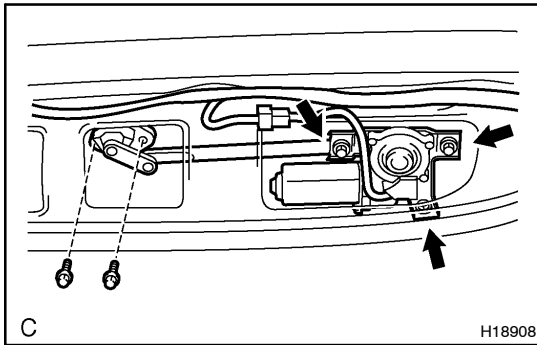

## INSTALLATION

### 1. INSTALL REAR WIPER MOTOR AND LINK ASSEMBLY

- (a) Install the wiper motor and link assembly with 5 bolts.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

- (b) Connect the connector.

### 2. INSTALL BACK DOOR GARNISH

### 3. INSTALL CENTER BACK DOOR GARNISH


### 4. INSTALL INSIDE HANDLE BEZEL

### 5. INSTALL ASSIST GRIP

Install the assist grip with the 2 screws, then install the 2 assist grip plugs.

### 6. INSTALL REAR WIPER ARM

- (a) Install the grommet.  
(b) Operate the wiper once and turn the wiper switch OFF.  
(c) Install the wiper arm and tighten the nut by hand.

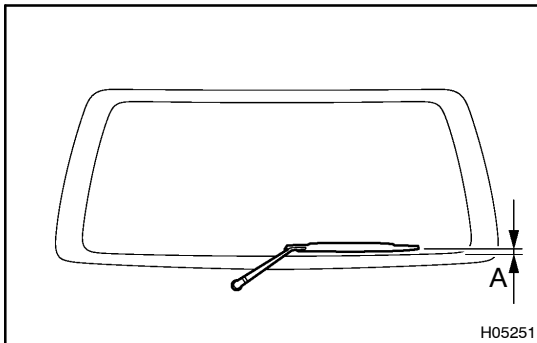

- (d) Adjust the installation position of the wiper arm to the position as shown in the illustration.

**A: Approx. 38 ± 10 mm (1.50 ± 0.39 in.)**

- (e) Torque the nut.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

- (f) Close the cover.