

Ignition switch power source circuit (Boody ECU)

CIRCUIT DESCRIPTION

When the ignition switch is turned to the ACC position, battery voltage is applied to the terminal ACC of ECU and when the ignition switch is turned to the ON position, battery positive voltage is applied to the terminal SIG of the ECU.

[illegible]

INSPECTION PROCEDURE

 
1	Check ACC, ECU-IG1 fuse.
----------	---------------------------------

CHECK:

Check continuity of ACC, ECU-IG1 fuse.

OK:

Continuity

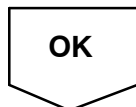

2	Check voltage between terminals ACC, SIG and GND1, 2 of Body ECU connector.
----------	--

PREPARATION:


Turn the ignition switch ON.

CHECK:


Measure the voltage between terminals ACC, SIG and GND1, 2.

OK:

Voltage: 10 – 14V

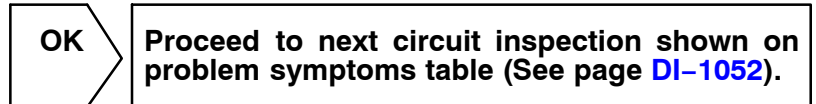

3	Check wire harness and connector between Body ECU and body ground (See page IN-36).
----------	--

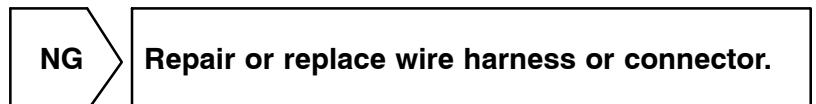 

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1052).