


Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU, the Body ECU makes the switch illuminations come on.

WIRING DIAGRAM

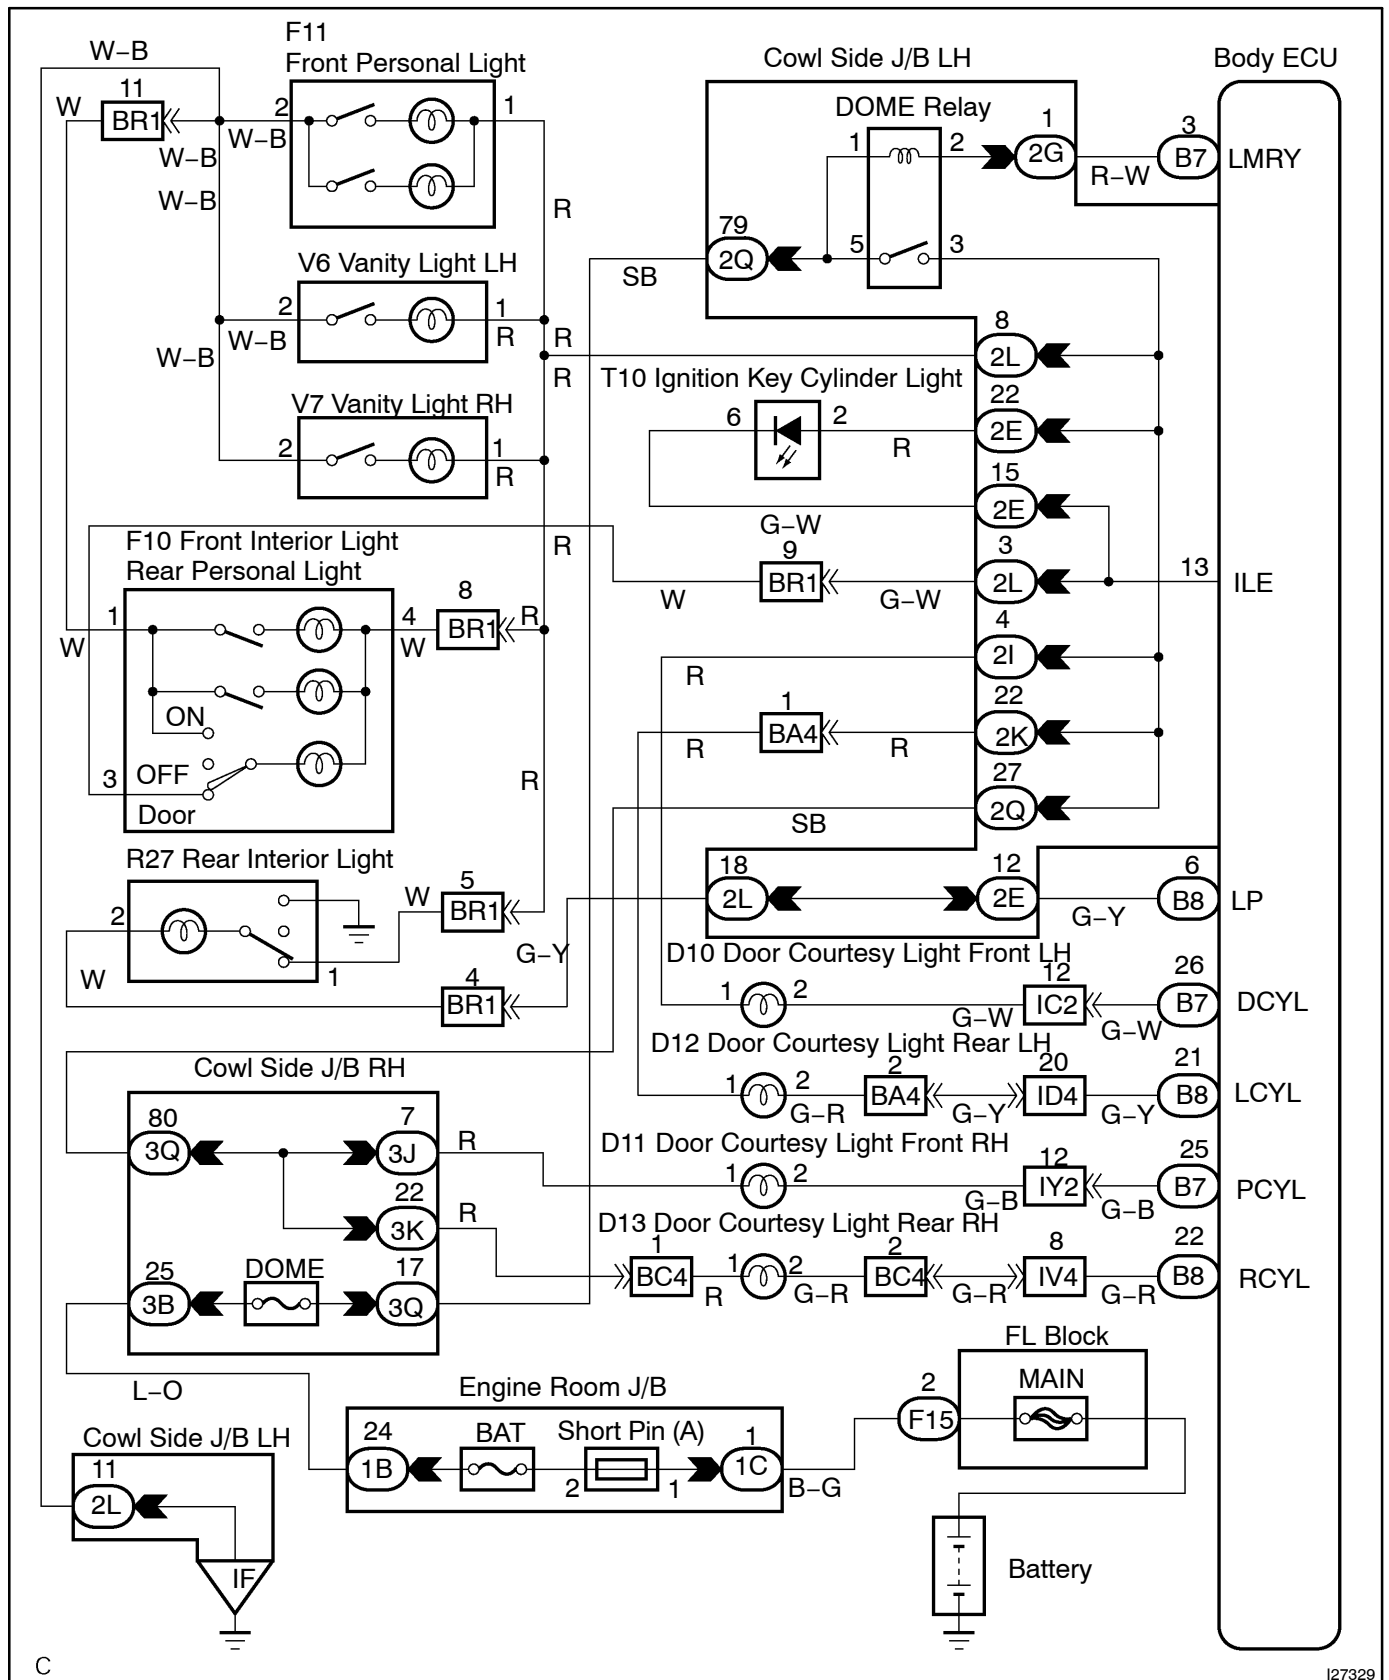

I27329

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check illumination using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the illumination operate in ACTIVE TEST (See page [DI-1047](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1052](#)).

NG

2	Check illumination light (See page BE-44).
---	---

NG

Replace illumination light.

OK

3	Check wire harness and connector between illumination light and Body ECU (See page IN-36).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1052](#)).