


Taillight relay circuit

CIRCUIT DESCRIPTION

The Headlight dimmer switch sends a signal to the Body ECU.

WIRING DIAGRAM

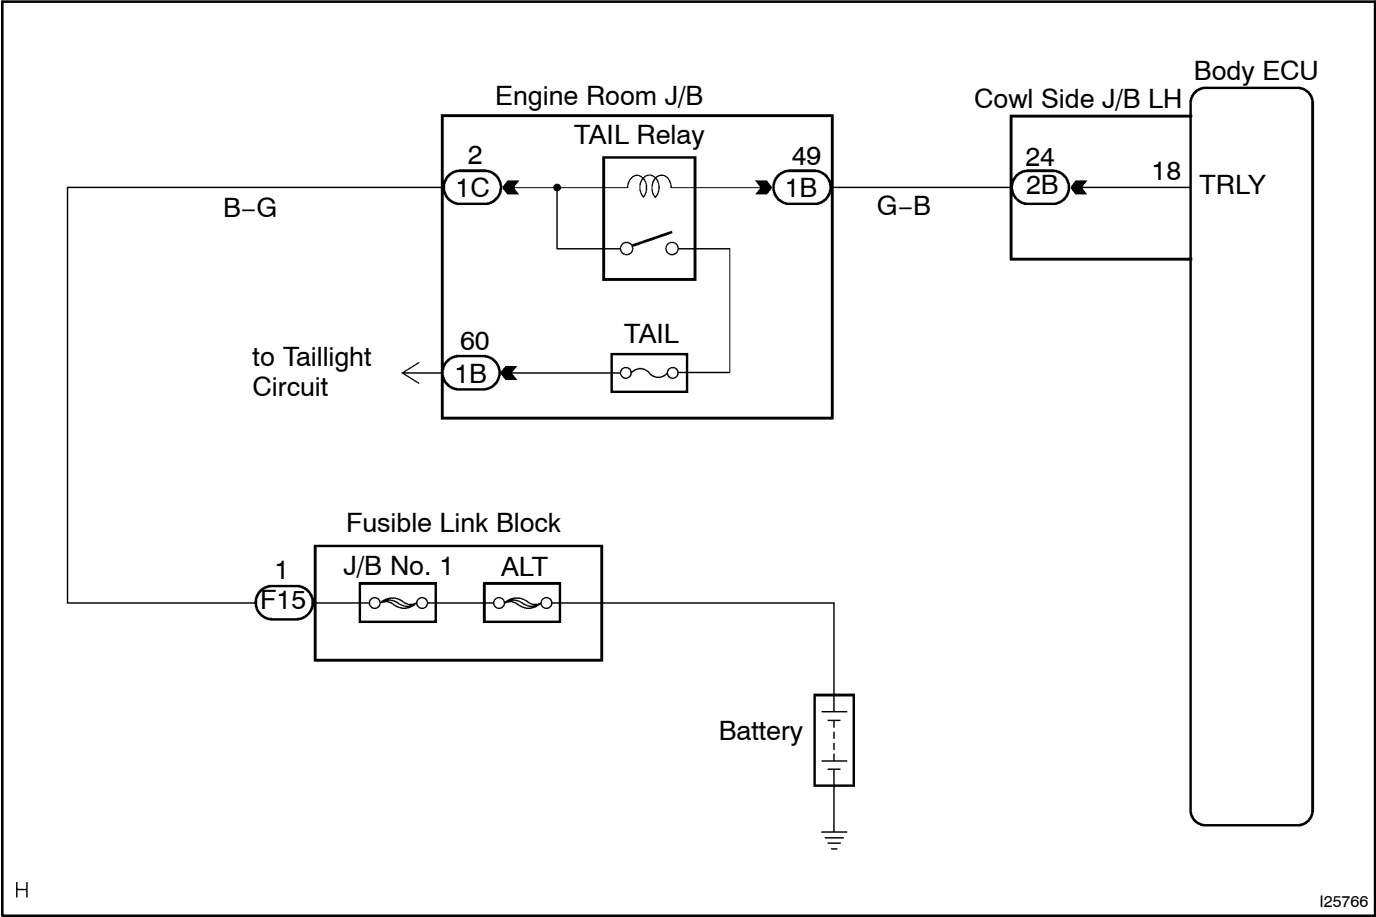

H

I25766

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check taillight relay using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the taillight relay can operate in ACTIVE TEST (See page [DI-1047](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1052](#)).

NG

2	Check Taillight relay (See page BE-32).
---	--

NG

Replace engine room J/B assy with wire harness.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1052](#)).