

PROBLEM SYMPTOMS TABLE

LIGHTING SYSTEM:

Symptom	Suspect Area	See page
Headlight does not light up. (Low beam)	1. Light control switch circuit 2. Headlight relay circuit 3. Combination switch 4. Body ECU	DI-1071 DI-1079 BE-32 –
Headlight system does not operate. (HI beam or Flash)	1. Headlight dimmer switch circuit 2. Light control switch circuit 3. Combination switch 4. Body ECU	DI-1073 DI-1071 BE-32 –
Automatic light control system does not operate.	1. Light control sensor circuit 2. Light control sensor 3. Body ECU	DI-1059 BE-32 –
Taillight system does not light up.	1. Taillight relay circuit 2. Light control switch circuit 3. Combination switch 4. Body ECU	DI-1083 DI-1071 BE-32 –

ILLUMINATION LIGHT SYSTEM:

Symptom	Suspect Area	See page
All switch illumination light does not light up.	1. Power source circuit 2. Light control rheostat 3. Body ECU	DI-1061 BE-63 –
Each switch illumination light does not light up.	1. Illumination light circuit 2. Body ECU	DI-1089 –
Brightness does not change even when rheostat turned. (All)	1. Light control rheostat 2. Body ECU	BE-63 –
Door courtesy light does not light up.	1. Door courtesy switch circuit 2. Body ECU	DI-1069 –

DRIVER SEAT BELT SYSTEM:

Symptom	Suspect Area	See page
Driver seat belt warning does not light up.	1. Driver buckle switch circuit 2. Body ECU	DI-1077 –

WIRELESS DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Wireless door lock does not operate.	1. Wireless door lock control circuit 2. Body ECU	DI-1085 –

OTHERS:

Symptom	Suspect Area	See page
Key unlock warning system does not operate.	1. Key unlock warning switch circuit 2. Body ECU	DI-1067 –
Parking brake indicator does not light up.	1. Parking brake switch circuit 2. Combination meter 3. Body ECU	DI-1075 BE-58 –
Open door warning light does not light up.	1. Open door warning light circuit 2. Door courtesy switch 3. Body ECU	DI-1087 DI-1069 –