

CUSTOMIZE FUNCTION

DIDMY-01

CUSTOMIZE PARAMETERS

The followings are the possible items to be customized.

NOTICE:

- Among the following contents, the make-indicated(#) items should not be know to users.
- After confirming whether the items of the customer's request is applicable or not for the customized items, perform the customize operation.
- Be sure to record the current value before customizing. (You can use the attached customize check sheet.)
- In case of performing the troubleshooting, pay attention as there is a possibility that the function is OFF by customizing. (Example: In case of the symptom in which "The wireless operation does not function", check that the wireless operation is not OFF by customizing, then perform the troubleshooting.)

WIRELESS DOOR LOCK

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
WIRELESS OPER (Wireless Door Lock Control Function)	ON	ON/OFF of the wireless door lock function.	ON / OFF
UNLOCK / 2OPER (2 times operation wireless unlock)	ON	Function to unlock the driver's door by pressing the unlock button of the transmitter once and to unlock all the doors by pressing it twice. In the OFF setting, pressing one time makes all the doors unlocked.	ON / OFF
AUTO LOCK DELAY (Auto Lock Time)	30 s	To change the time until re-locking after unlocking with the wireless door lock function.	30 s / 60 s
HAZARD ANS BACK (Hazard answer back of the wireless)	ON	Function to light up the all turn signal light once when pressing the transmitter lock button and twice when pressing the unlock button under the condition that the Engine Hood, Trunk and all the doors are closed.	ON / OFF

DOOR LOCK

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
UNLOCK / PARK (#) (Unlock w/ IG ON, shift P, speed 0)	OFF	Function to unlock the doors by shifting the lever to P range from other than P range when the ignition is ON.	ON / OFF
ALL UNLK / OPN-CL (#) (All unlock w/ D door open-close)	OFF	Function to unlock all the other doors when opening the driver's door within 10 seconds after turning the ignition OFF from ON.	ON / OFF
UNLK / KEY TWICE (Unlock w/ 2 times D key operation)	ON	Function to unlock only the driver's door by doing the key operation once and to unlock all the doors by doing it twice. In the OFF setting, operating the key "UNLOCK" once makes all the doors unlocked.	ON / OFF
AUTO LOCK (Auto Lock)	OFF	Function to lock the door when the vehicle reaches to a certain speed.	ON / OFF
AUTO LOCK/SHIFT (Auto Lock/shift not P)	ON	Function to lock the doors when shifting the lever from P range to the range other than P.	ON / OFF

SECURITY

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
PASSIVE MODE (#) (Passive Mode)	OFF	PASSIVE MODE is the function to set the theft deterrent system 30 seconds later after having the driver's door closed from opening condition by removing the key from the ignition key cylinder. In case of PASSIVE MODE, under the condition that the theft deterrent system is set and after opening either one of the doors, if you do not perform the following operations within 15 seconds, the theft deterrent system will operate by judging that condition as a theft. • Press the transmitter unlock button. • Insert the key to the door key cylinder on the driver's or the passenger's door and turn it to unlock side. • Insert the key to the ignition key cylinder and turn the ignition ON. • Open the trunk with the transmitter. • Open the trunk with the key.	ON / OFF
WARNING(HORN) (#) (warning (horn))	ON	Function to make the warning by the horn and theft deterrent horn available.	ON / OFF
ENTRY DELAY (#) (Entry delay time)	14 s	to change the entry delay time (period before starting the warning) by the passive mode.	0 s / 14 s / 30 s
WARN BY GLS SEN (#) (Warning by glass broken sensor)	ON	Function to turn ON/OFF of the glass brake sensor. This function is only effective for the vehicle with glass break sensor.	ON / OFF
INTRUSION SEN (Intrusion Radar Sensor)	ON	Function to turn ON/OFF of the intrusion sensor. This function is only effective for the vehicle with intrusion sensor.	ON / OFF

ILLUMINATED ENTRY

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
LIGHTING TIME (Lighting Time)	15 s	To change the lighting time after closing the door. (It will quickly fade out in case of turning the ignition ON.	7.5 s / 15 s / 30 s
I/L ON / UNLOCK (Interior light ON w/ door key unlock)	ON	Function to light up the interior light*, ignition light and step light when unlocking with the door key cylinder. *: Interior light comes on when the interior light switch is at the DOOR position.	ON / OFF
I/L ON/ACC OFF (Illumination system with ACC OFF)	ON	Function to light the interior light* and door courtesy light when the ignition switch is operated from "ACC" to "LOCK". *: interior light comes on when the interior light switch is at the DOOR position.	ON / OFF

LIGHT CONTROL**HINT:**

Sensitivity adjustment can hardly be confirmed. Please check by customer's actual driving.

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
SENSITIVITY (Turn ON luminous intensity)	NORMAL	To adjust the sensitivity of the lighting illumination. Refer to the *1 illustration.	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2

LIGHT OFF DELAY (Light Auto OFF Delay)	30 s	Function to keep on lighting the headlight for a certain period of time after closing all the doors with the ignition switch turned OFF from ON under the condition that the light control switch is at HEAD or AUTO with the headlight ON.	OFF / 30 s / 60 s / 90 s
DRL FUNCTION (#) (DRL function) (USA ONLY)	ON	ON / OFF of the DRL function.	ON / OFF

Illustration of *1

Lighting brightness	Dark ←————→ Bright
Setting	DARK2 ——— DARK1 ——— NORMAL ——— LIGHT1 ——— LIGHT2

TILT & TELESCO

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
AUTO TILT AWAY (#) (Auto Away / Return Function)	ON	ON / OFF of the Auto away / return function.	ON / OFF