


Power source circuit

CIRCUIT DESCRIPTION

This circuit supplies power to operate the power window master switch.

WIRING DIAGRAM

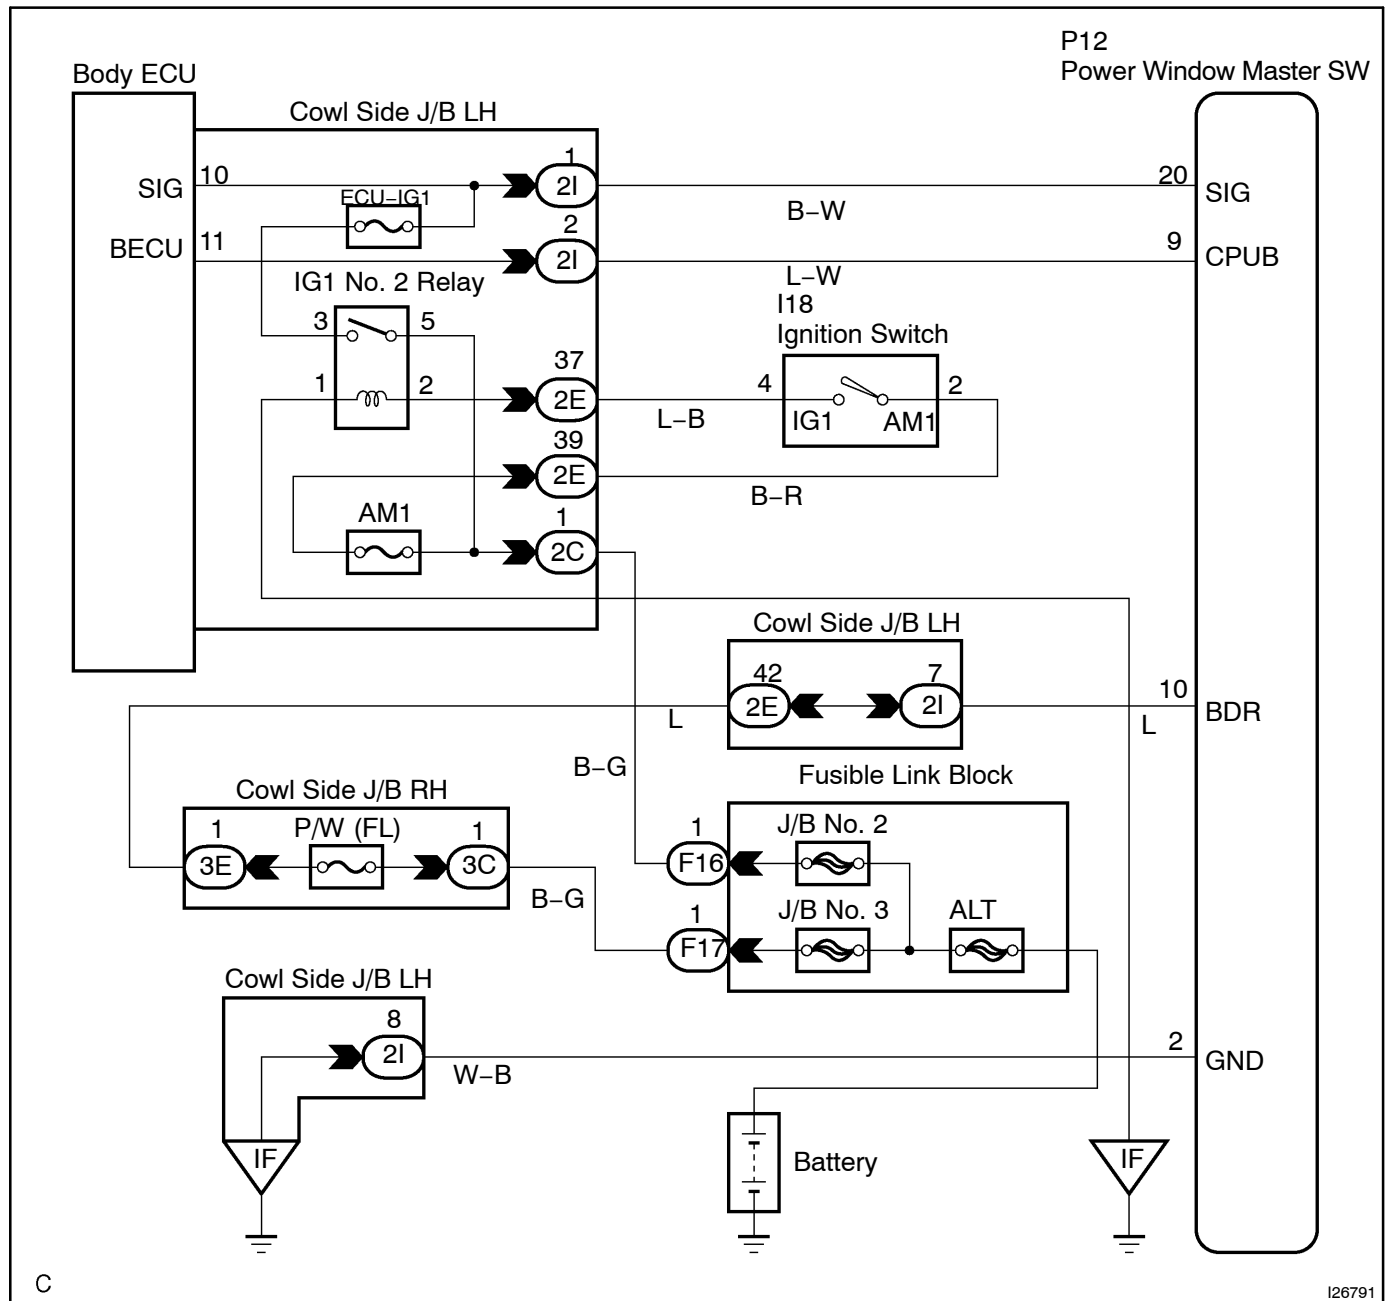

INSPECTION PROCEDURE


1	Check ECU–IG1 and AM1 fuse.
----------	------------------------------------

CHECK:

Check continuity of ECU–IG1 and AM1 fuse.

OK:

 Continuity



2	Check voltage between terminals CPUB, SIG, BDR and GND of power window master switch connector.
----------	--

PREPARATION:

 
Turn the ignition switch OFF.

CHECK:

Measure the voltage between terminals CPUB, SIG, BDR and GND.

OK:

Voltage: 10 – 14V



3	Check wire harness and connector between power window master switch and body ground (See page IN-36).
----------	--



Proceed to next circuit inspection shown on problem symptoms table (See page DI-1100).