

PROBLEM SYMPTOMS TABLE

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
All the doors can not be locked or unlocked.	1. Power source circuit 2. Theft deterrent ECU 3. Power window master switch (Driver door ECU)	DI-1111 DI-960 BE-79
Driver side door lock does not operate.	1. Door lock motor circuit 2. Power window master switch (Driver door ECU) 3. Theft deterrent ECU	DI-1120 BE-79 DI-960
Door key related function cannot be done.	1. Door key lock and unlock switch circuit 2. Door courtesy light and courtesy switch circuit 3. Theft deterrent ECU 4. Power window master switch (Driver door ECU)	DI-1113 DI-1069 DI-960 BE-79
Key confinement prevention function does not operate.	1. Door courtesy light and courtesy switch circuit 2. Door unlock detection switch circuit 3. Theft deterrent ECU 4. Power window master switch (Driver door ECU)	DI-1069 DI-1117 DI-960 BE-79

POWER WINDOW CONTROL SYSTEM:

Symptom	Suspect Area	See page
All the power window does not operate.	1. Power source circuit 2. Power window master switch (Driver door ECU)	DI-1111 BE-79
Driver side power window does not operate.	1. Power window motor circuit 2. Power window master switch (Driver door ECU)	DI-1120 BE-79
Jam protection function and auto up or down function does not operate.	1. Jam protection limit and pulse switch circuit (Master switch) 2. Jam protection limit and pulse switch circuit (Front RH) 3. Jam protection limit and pulse switch circuit (Rear RL / RR) 4. Power window master switch (Driver door ECU) 5. Theft deterrent ECU	DI-1107 DI-1109 DI-1124 DI-1132 DI-1128 BE-79 DI-960
Window lock function does not operate.	1. Power window master switch (Driver door ECU)	BE-79
Remote control of all windows (Except driver side) does not operate with master switch. (Window operates normally with each of master switch.)	1. Power window master switch circuit (Driver door ECU)	BE-79
The key related power window operations cannot be done with driver door key cylinder. (Master switch operation is normal.)	1. Door key lock and unlock switch circuit 2. Door courtesy light and courtesy switch circuit 3. Power window master switch (Driver door ECU)	DI-1113 DI-1069 BE-79
Power window does not operate with keyless entry transmitter. (Windows operate normally with master switch.)	1. Inspect wireless door lock control system 2. Replace Power window master switch (Driver door ECU) 3. Theft deterrent ECU	DI-943 – DI-960