


TERMINALS OF ECU


● Body ECU

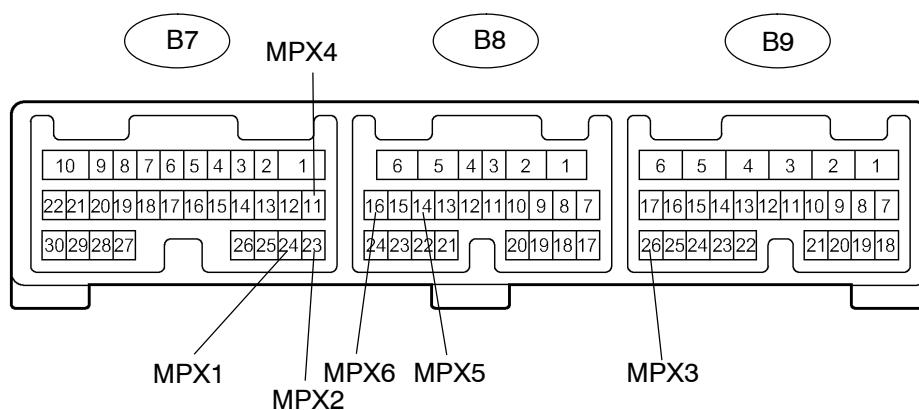

H


DI124951

● Theft Deterrent ECU

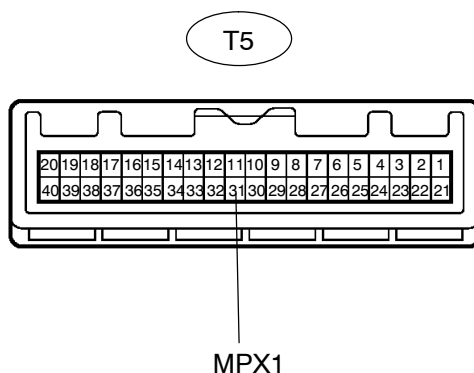

I24938


- Driver Door ECU
- Passenger Door ECU
- Rear Door LH ECU
- Rear Door RH ECU

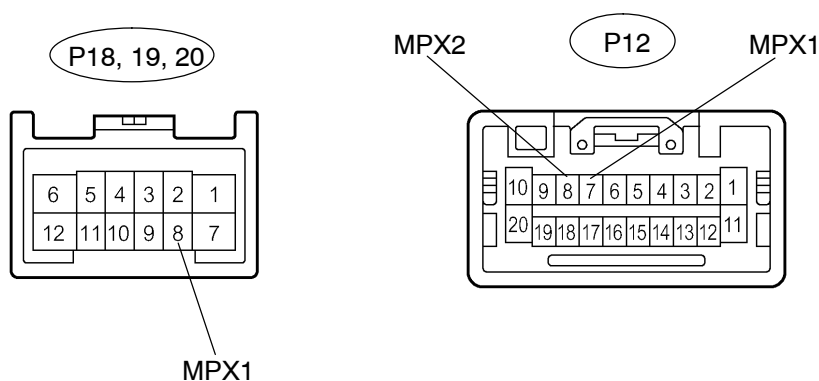

H

I24941

● Tilt and Telescopic ECU

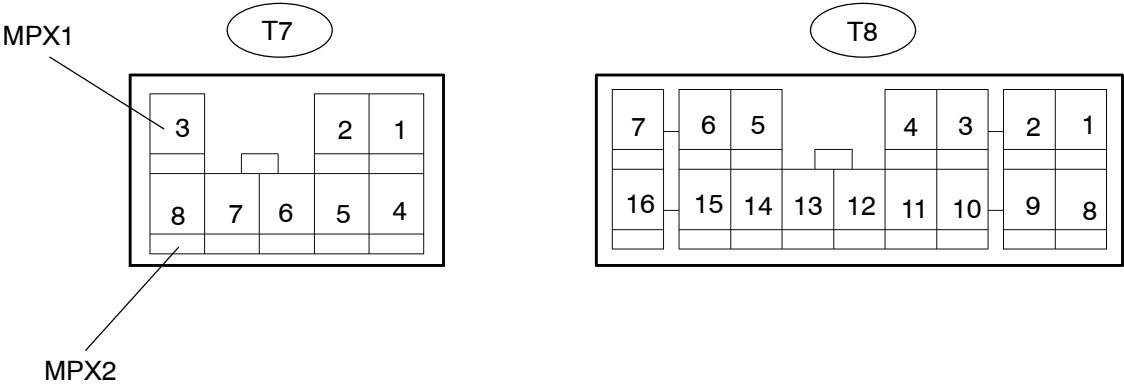

F05341