

 
14. Map is displayed in white or blue screen. (Switches and vehicle position mark are displayed)

INSPECTION PROCEDURE

1	Set the map scale to the max.
---	-------------------------------


OK	Normal
----	--------

HINT:
Correct the current position and check it again.



2	Wipe the disc with a soft cloth, insert it again, and turn the ignition switch ON from OFF.
---	---

NG	Replace the disc.
----	-------------------

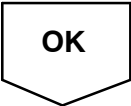

Normal

HINT:
If the trouble still occurs, replace the navigation ECU.