

22. No voice navigation.

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Set the volume to the max in the menu screen. |
|---|---|

OK

Normal (Voice navigation is not available. No destination is set, or the vehicle is running off the route.)

NG

- | | |
|---|---|
| 2 | Check for open or short in harness and connector between navigation ECU and driver side door speaker (see page DI-1261). |
|---|---|

NG

Replace or repair wire harness.

OK

- | | |
|---|---|
| 3 | Check the sound. (Check if the radio sound can be heard from the driver side door speaker.) |
|---|---|

OK

Replace the navigation ECU.

NG

Replace the speaker.