

24. Driving direction is opposite to moving direction of vehicle position mark.

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Navigation check mode (vehicle signal check mode REV) |
|---|---|

OK

Replace the navigation ECU.

NG

- | | |
|---|---|
| 2 | Check the reverse signal circuit of navigation ECU (see page DI-1269). |
|---|---|

OK

Replace the navigation ECU.

NG

Replace or repair wire harness.