

28. DVD magazine inserted, but no power.

INSPECTION PROCEDURE

1 Check the ACC fuse.

NG

Replace the fuse.

OK

2 Check the DVD auto changer.

PREPARATION:

Disconnect the DVD auto changer connector.

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness or connector.

OK

Check and replace DVD auto changer.