

33. The Cellular Phone cannot Send/Receive

INSPECTION PROCEDURE

1	Check bluetooth settings.
---	---------------------------

Check if the BLUETOOTH settings are correct.

OK:

BLUETOOTH settings are correct.

NG

Set settings correctly.

OK

2	Check cellular phone.
---	-----------------------

Check if the cellular phone is BLUETOOTH capable.

HINT:

Some versions of BLUETOOTH capable cellular phone may not be compatible.

OK:

The phone is BLUETOOTH capable.

NG

END (Only a bluetooth capable cellular phone can be used)

OK

3	Check settings
----------	-----------------------

Check if the cellular phone functions.

HINT:

- The cellular phone is unable to call under any of the following conditions.
- The cellular phone is locked.
- The directory is being transferred.
- The line is crossed.
- Transmission is requested.
- The power is off.
- The cellular phone is not connected to BLUETOOTH ("BT" is displayed while a connection is present).

OK:

No of the above conditions exist.

NG

Set setting correctly.

OK

4	Check cellular phone.
----------	------------------------------

Check if the cellular phone can call.

HINT:

When the battery charge is low, calls cannot be made or received.

OK:

The cellular phone can call.

NG

Replace cellular phone.

OK

5	Check reception
----------	------------------------

- (a) Put a cellular phone into a receiving state.
- (b) Place the cellular phone close to the multi-display.
- (c) Check if the cellular phone has reception according to the multi-display.

OK:

The cellular phone has reception.

NG**Replace multi-display.****OK**

Go to "Own voice cannot be heard, quiet or distorted" (See page [DI-1250](#))