

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1	Service check mode (Check the navigation ECU)
---	---

NG

Troubleshoot for each diagnosis.

OK

Replace multi-display.

Ncon

2	Check the navigation ECU power source circuit (see page DI-1252).
---	--

NG

Replace or repair wire harness or connector.

OK

3	Check multi-display power source circuit (see page DI-1255).
---	---

NG

Replace or repair wire harness or connector.

OK

4	Check the display signal circuit (see page DI-1266).
---	---

NG

Replace or repair wire harness or connector.

OK

Replace multi display.