

PROBLEM SYMPTOMS TABLE

Flow chart No. (See page)	Component	Symptom
1. (DI-1200)	Multi display	Black screen (Nothing displayed)
2. (DI-1201)		No sound with Power switch pressed. ("AUTO OFF" on audio screen)
3. (DI-1204)		No navigation screen displayed when "MAP", "MENU" or "DEST" switch pressed. (Screen cannot be switched.)
4. (DI-1206)		No corresponding screen displayed when "AUDIO" or "Information" switch pressed.
5. (DI-1207)		No navigation displayed, "Audio OFF" on audio screen and no audio sound.
6. (DI-1209)		Screen cannot be dimmed in night time.
7. (DI-1210)		Navigation screen not stabilized. (Synchronous error)
8. (DI-1211)		Color on navigation screen is unusual (RGB signal error)
9. (DI-1213)		Black screen appears when "MAP", "Menu" or "DEST" switch pressed.
10. (DI-1214)		Sound of radio, cassette tape or CD only cannot be heard from speaker.
11. (DI-1215)		No sound (radio, cassette tape, CD) can be heard from driver side door speaker only.
12. (DI-1217)		Map DISC cannot be inserted.
13. (DI-1218)		MAP screen display does not appear. (Disc Caution screen does not change.)
14. (DI-1219)		MAP is displayed in white or blue screen. (Switch and vehicle position mark is displayed.)
15. (DI-1220)		Touch switch does not function. (Navigation screen only)
16. (DI-1221)		Touch switch does not function. (A/C control screen only)
17. (DI-1222)		Panel switch does not function. (Navigation screen only)
18. (DI-1223)		Panel switch does not function. (A/C control screen only)
19. (DI-1224)		The screen cannot be change to night mode color.
20. (DI-1226)		Vehicle position is deviated from correct point badly.
21. (DI-1229)		GPS mark does not appear.

22. (DI-1231)		No voice navigation.
23. (DI-1232)		Vehicle position rotates without control. (Map rotates without control)
24. (DI-1234)		Driving direction is opposite to moving direction of vehicle position mark.
25. (DI-1235)		Navigation system cannot be operated with voice recognition.
26. (DI-1236)	DVD AUTO Changer	Any speaker does not work. (DVD sound only)
27. (DI-1237)		DVD magazine cannot be inserted.
28. (DI-1238)		DVD magazine inserted, but no power.
29. (DI-1239)		Power coming in, but DVD auto changer not operating..
30. (DI-1241)		Sound jumps. (DVD sound)
31. (DI-1242)		DVD magazine will not be ejected.
32. (DI-1243)	Bluetooth System	Cellular phone registration failure, phone directory transfer failure
33. (DI-1245)		The cellular phone cannot send/receive
34. (DI-1248)		Cannot call in a certain place
35. (DI-1249)		Voice on phone cannot be heard, too quiet, distorted
36. (DI-1250)		Own voice cannot be heard, too quiet or distorted