


|            |              |                                             |
|------------|--------------|---------------------------------------------|
| <b>DTC</b> | <b>B2620</b> | <b>ECU Power Source Circuit Malfunction</b> |
|------------|--------------|---------------------------------------------|

## CIRCUIT DESCRIPTION

ECU power source circuit supply the battery positive voltage to tilt and telescopic ECU.

| DTC No. | DTC Detecting Condition                                                                                               | Trouble Area                                                                                                                       |
|---------|-----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| B2620   | The condition that the voltage of the ECU Power Source circuit drop to be 8V or less continues for 10 seconds or more | <ul style="list-style-type: none"> <li>• Battery</li> <li>• ECU power source circuit</li> <li>• Tilt and telescopic ECU</li> </ul> |

## WIRING DIAGRAM

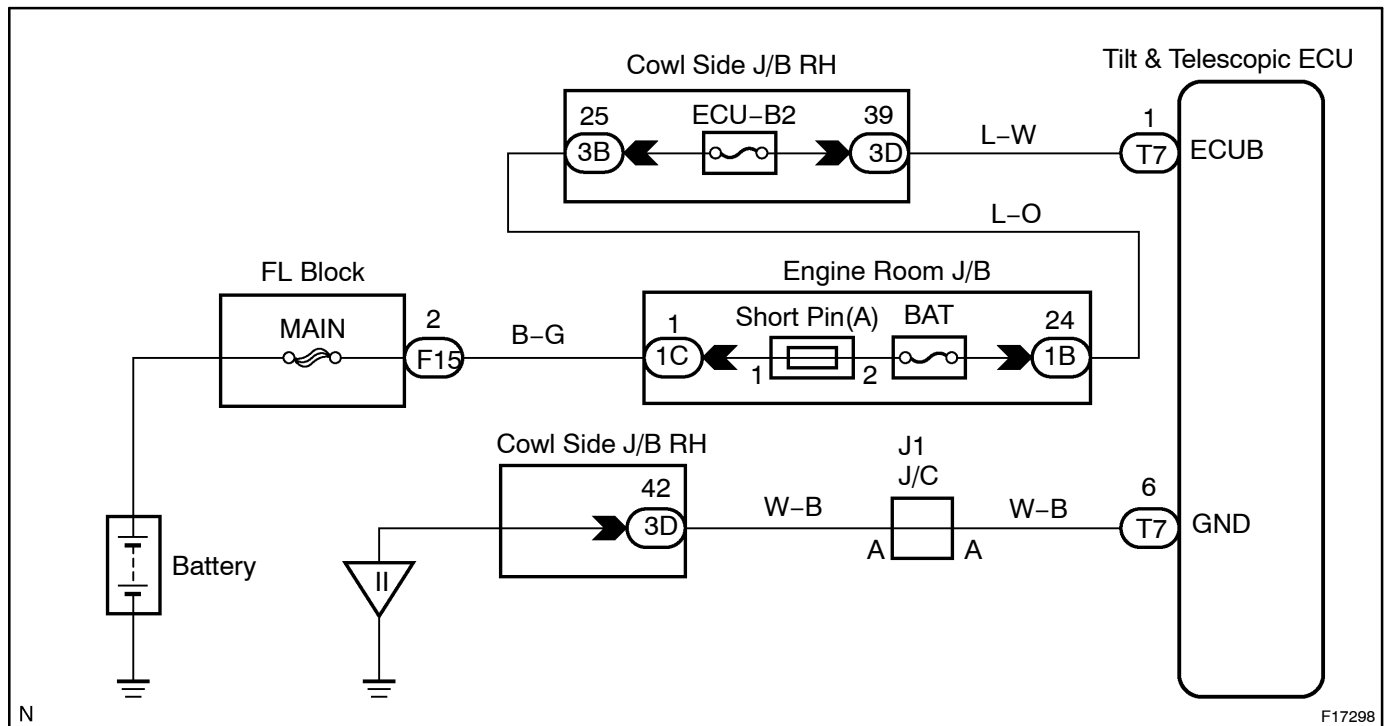

**INSPECTION PROCEDURE**

- |          |                                                                                       |
|----------|---------------------------------------------------------------------------------------|
| <b>1</b> | <b>Check that the battery positive voltage is 11V or more when engine is stopped.</b> |
|----------|---------------------------------------------------------------------------------------|

**NG****Charge or replace battery.****OK**

- |          |                                                                          |
|----------|--------------------------------------------------------------------------|
| <b>2</b> | <b>Check ECU power source circuit (See page <a href="#">DI-680</a>).</b> |
|----------|--------------------------------------------------------------------------|

**NG****Repair or replace malfunction part.****OK**

|                                                                                        |
|----------------------------------------------------------------------------------------|
| <b>Check and replace the tilt and telescopic ECU (See page <a href="#">IN-36</a>).</b> |
|----------------------------------------------------------------------------------------|