 


DI6QW-18



Step 3, 4, 8, 9, 10, 12: Diagnostic steps permitting the use of the TOYOTA hand-held tester.