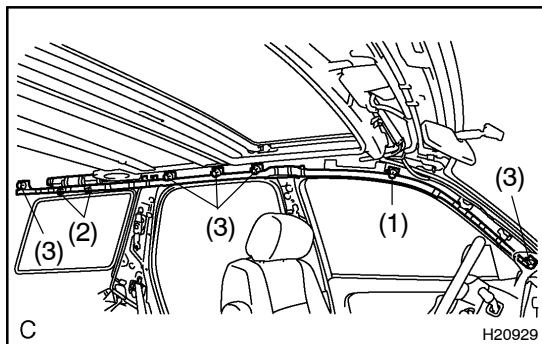


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

**1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY**

- (a) In the order shown in the illustration, install the curtain shield airbag with the 8 bolts.

Torque: 9.8 N·m (100 kgf·cm, 86 in·lbf)

CAUTION:

Pay due attention not to twist the deployment section of the curtain shield airbag assembly.

NOTICE:

- Make sure that the curtain shield airbag assembly is installed to the specified torque.
 - If the curtain shield airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the curtain shield airbag assembly with a new one.
 - When installing the curtain shield airbag assembly, take care it is not pinched between other parts.
- (b) Connect the connector of the curtain shield airbag assembly.
- 2. INSTALL ROOF HEADLINING (See page [BO-101](#))**
- 3. INSPECT SRS WARNING LIGHT (See page [DI-699](#))**