


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

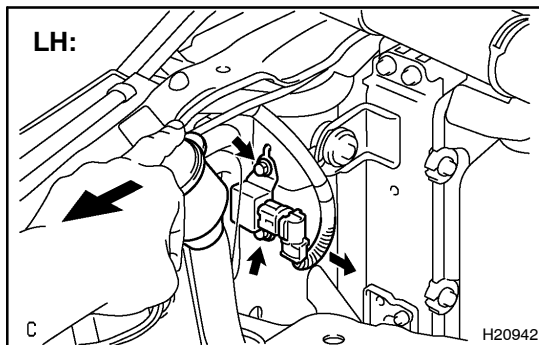


1. REMOVE FRONT AIRBAG SENSOR LH

- Remove the battery carrier and battery.
- Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Pull the windshield washer tank opening as shown in the illustration.
- Remove the 2 bolts and front airbag sensor LH.

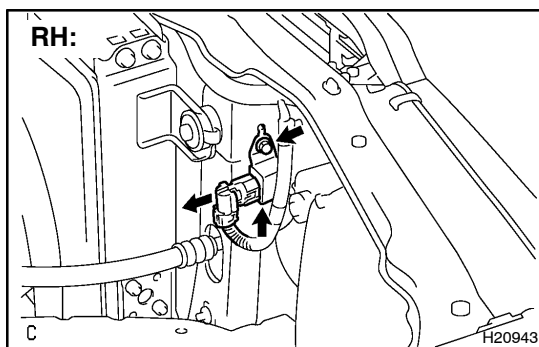

2. REMOVE FRONT AIRBAG SENSOR RH

- Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- Remove the 2 bolts and front airbag sensor RH.