


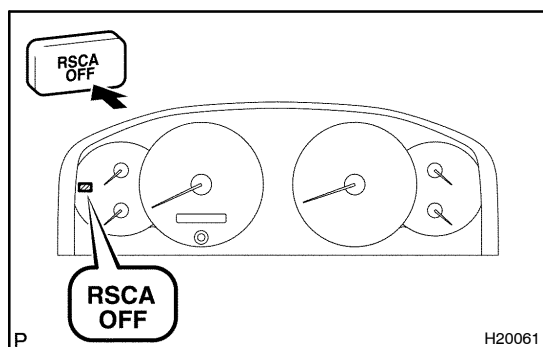

## RSCA OFF SWITCH INSPECTION


RS0XJ-01

### 1. INSPECT RSCA OFF INDICATOR LIGHT

- Turn the ignition switch to ON.
- Check that the RSCA OFF indicator light goes off after it comes on for 3 seconds.
- Check that the RSCA OFF indicator light comes on after pressing the RSCA OFF switch approx. 2 seconds.

### 2. INSPECT RSCA OFF SWITCH CONTINUITY

- Remove the LWR instrument panel finish panel (See page [BO-84](#)).
- Remove the RSCA OFF switch from the LWR instrument panel finish panel.

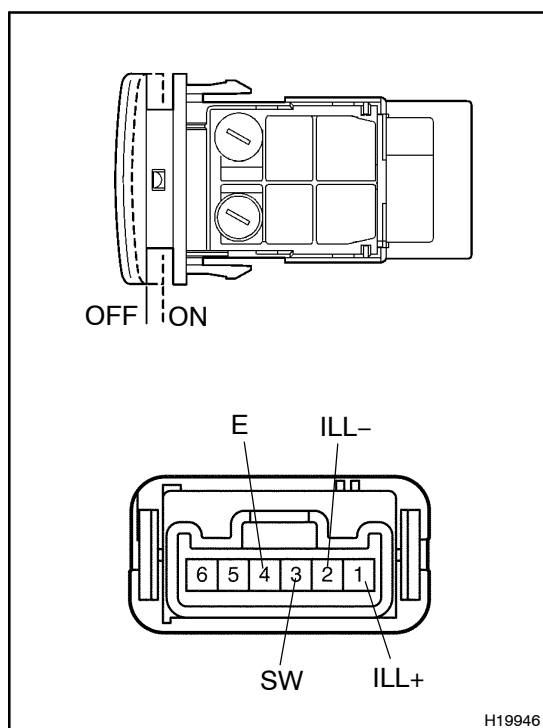

- Inspect the continuity between the each terminals.

| Switch position | Tester connection   | Specified condition |
|-----------------|---------------------|---------------------|
| OFF             | SW (3) ↔ E (4)      | No continuity       |
| Hold ON         | SW (3) ↔ E (4)      | Continuity          |
| Illumination    | ILL+ (1) ↔ ILL- (2) | Continuity          |

If continuity is not as specified, replace the RSCA OFF switch or bulb.