

## INSPECTION

1. **Vehicle not involved in collision:**

### **INSPECT SUPPLEMENTAL RESTRAINT SYSTEM**

Do a diagnostic system check (See page [DI-699](#)).

2. **Vehicle involved in collision and airbag is not deployed:**

### **INSPECT SUPPLEMENTAL RESTRAINT SYSTEM**

Do a diagnostic system check (See page [DI-699](#)).

3. **Vehicle involved in collision and airbag is deployed:**

### **INSPECT SUPPLEMENTAL RESTRAINT SYSTEM**

Replace the seat position sensor assembly (See page [RS-90](#)).