

INSTALLATION

Installation is in the reverse order of removal (See page [SA-70](#)).

HINT:

After installation, check the front wheel alignment (See page [SA-6](#)).