


REMOVAL


1. **REMOVE REAR WHEELS**
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
2. **SUPPORT REAR AXLE HOUSING WITH JACK**

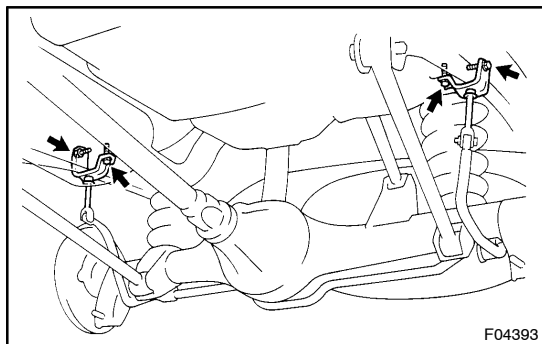

3. **DISCONNECT LH AND RH STABILIZER BAR BRACKETS**

Remove the 4 bolts and disconnect the LH and RH stabilizer bar brackets.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

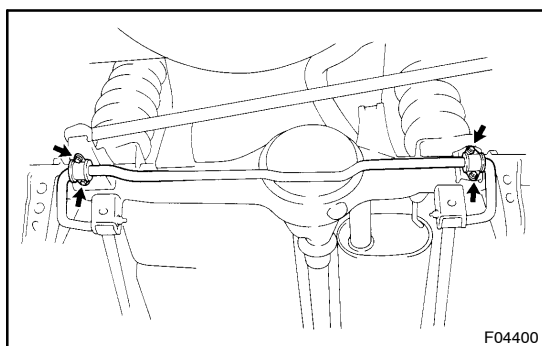

4. **REMOVE STABILIZER BAR**
 - (a) Remove the 4 bolts and stabilizer bar with the bushings and brackets.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
 - (b) Remove the 2 brackets and 2 bushings from the stabilizer bar.
5. **REMOVE BOTH STABILIZER BAR LINKS FROM STABILIZER BAR**
 - (a) Remove the nut, 3 retainers, 2 cushions and disconnect the stabilizer bar link from the bracket.
Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)
 - (b) Employ the same manner described above to the other side.
 - (c) Remove the 2 nuts, bolts and stabilizer bar links.
Torque: 26 N·m (270 kgf·cm, 19 ft·lbf)
 - (d) Remove the 2 collars and cushions.