


## REAR WHEEL HUB BOLT REPLACEMENT


SA15J-02

### 1. REMOVE REAR WHEEL

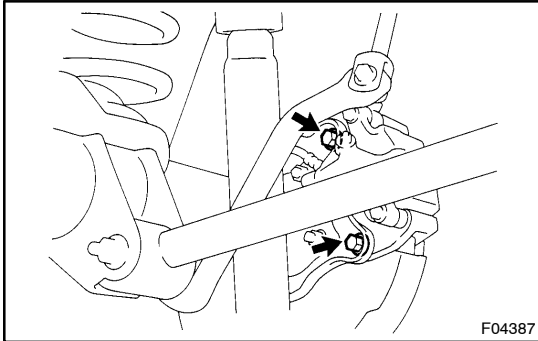


### 2. REMOVE BRAKE CALIPER AND DISC

- (a) Remove the 2 bolts, brake caliper and disc.
- (b) Support the brake caliper securely.

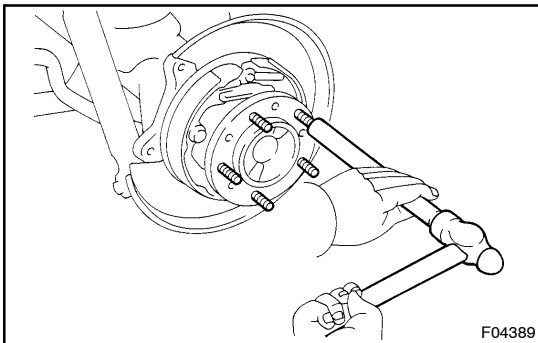

### 3. REMOVE HUB BOLT

Using a brass bar and hammer, remove the hub bolt.

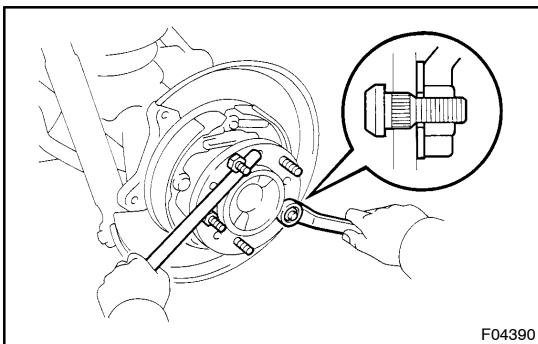

### 4. INSTALL HUB BOLT

Install a washer and nut to a new hub bolt, as shown in the illustration, and install the hub bolt by torquing the nut.

### 5. INSTALL DISC AND BRAKE CALIPER

Install the disc and brake caliper with the 2 bolts.

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

### 6. INSTALL REAR WHEEL

**Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)**