


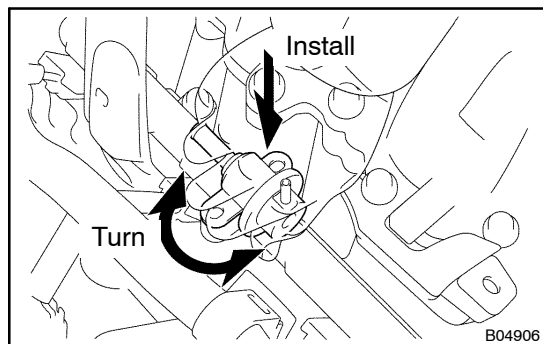


INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- (a) Apply a light coat of gasoline to a new O-ring, and install it to the fuel pressure regulator.
- (b) While turning the fuel pressure regulator left and right, install it to the delivery pipe.
- (c) Install the fuel pressure regulator with the 2 bolts.

Torque: 7.5 N·m (80 kgf·cm, 66 in.·lbf)

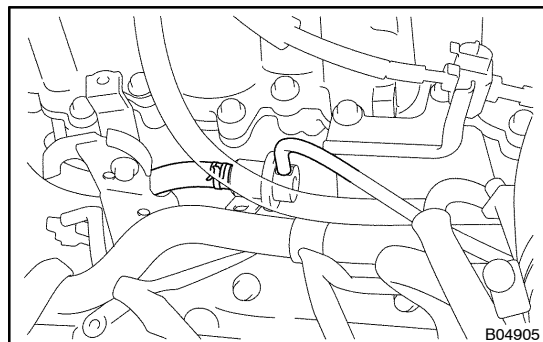

- (d) Connect the vacuum sensing hose to the fuel pressure regulator.
- (e) Connect the fuel return hose to the pressure regulator.

2. CHECK FOR FUEL LEAKS (See page [SF-1](#))

3. INSTALL V-BANK COVER